

## 21.Oil Flow Control Solenoid Valve

### **A: REMOVAL**

The oil flow control solenoid valve is listed in the FU section. <Ref. to FU(H6DO)-45, REMOVAL, Oil Flow Control Solenoid Valve.>

### **B: INSTALLATION**

The oil flow control solenoid valve is listed in the FU section. <Ref. to FU(H6DO)-45, INSTALLATION, Oil Flow Control Solenoid Valve.>