

22. Intake and Exhaust Valve

A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of intake and exhaust valves. <Ref. to ME(H6DO)-84, REMOVAL, Cylinder Head.>
<Ref. to ME(H6DO)-85, INSTALLATION, Cylinder Head.>