



Engine Immobiliser System (w/ Entry & Start System), Entry & Start System,
Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and
Wireless Door Lock Control (w/ Entry & Start System)

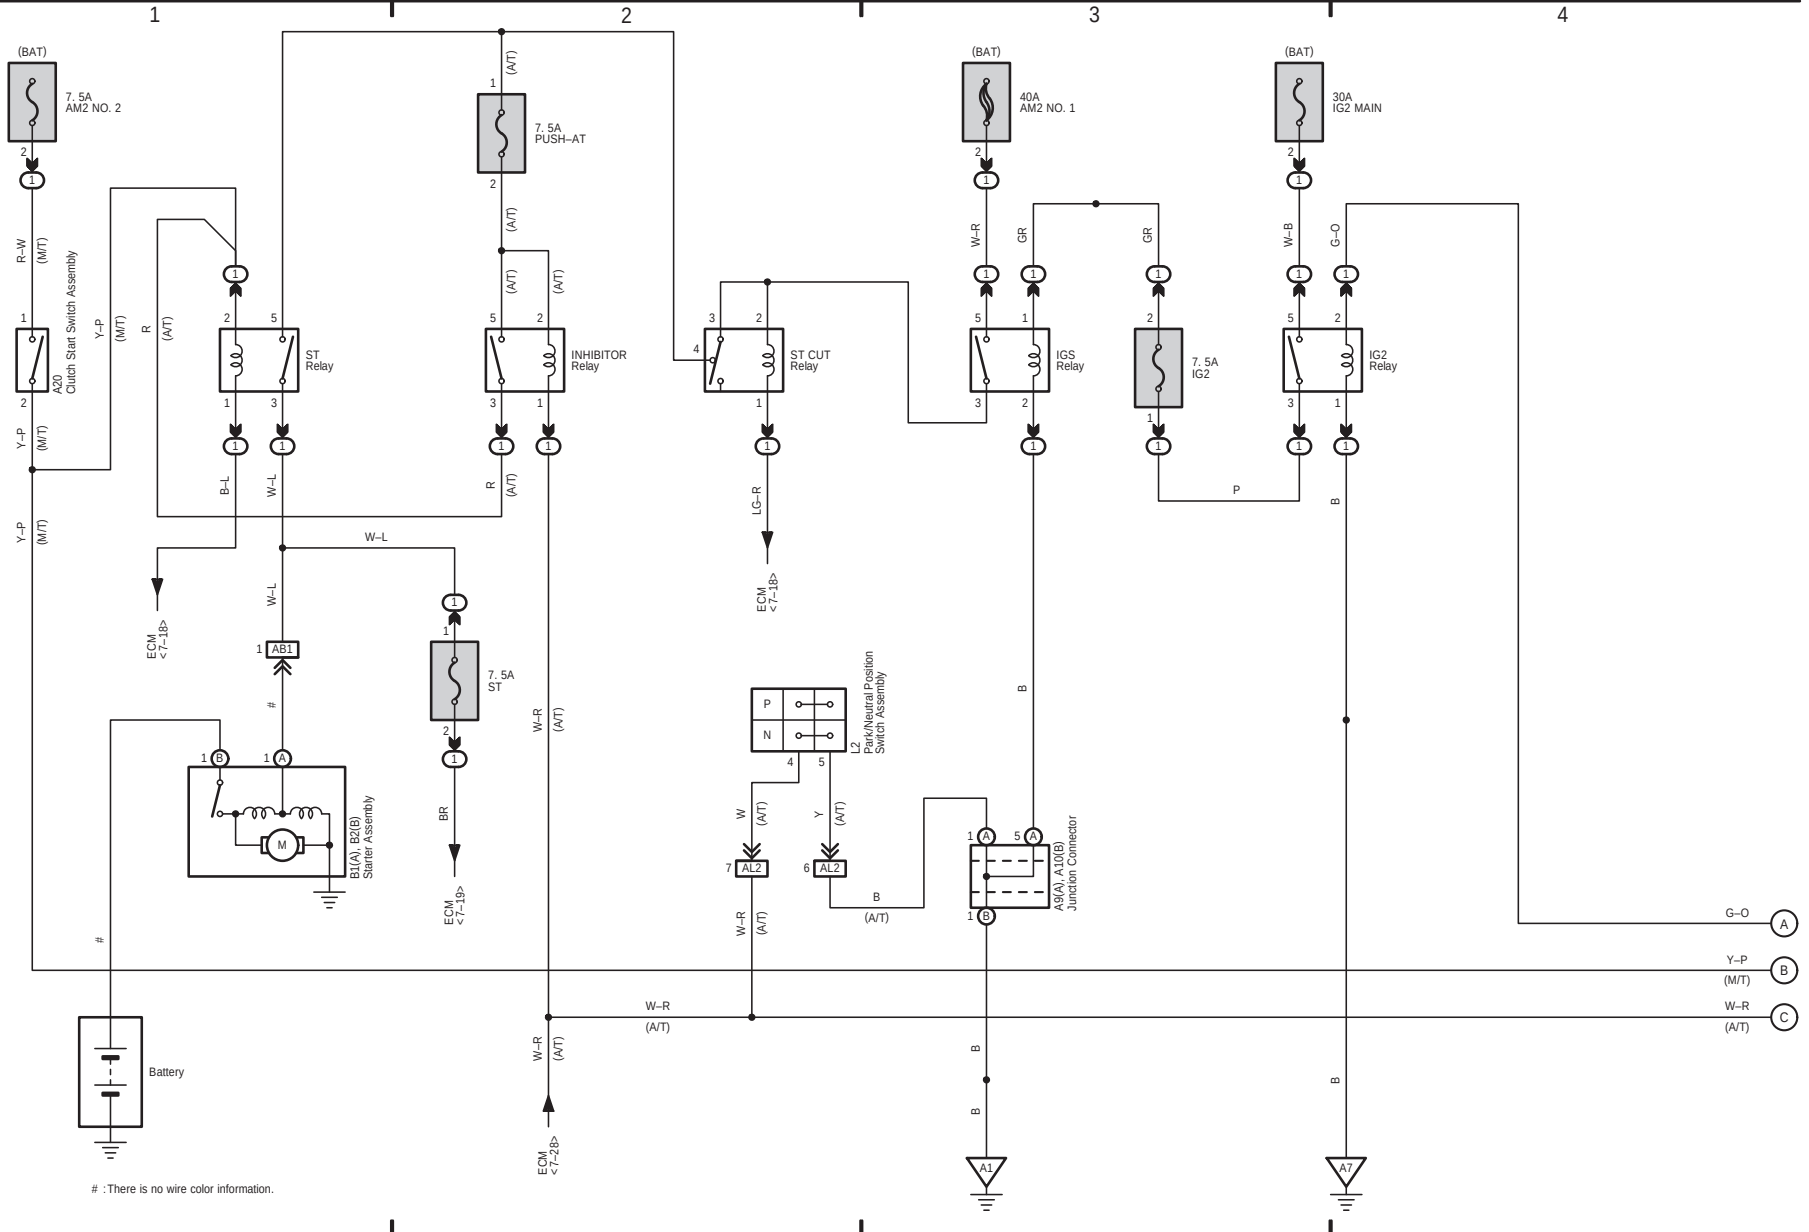

Engine Immobiliser System (w/ Entry & Start System), Entry & Start System,
Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and
Wireless Door Lock Control (w/ Entry & Start System)

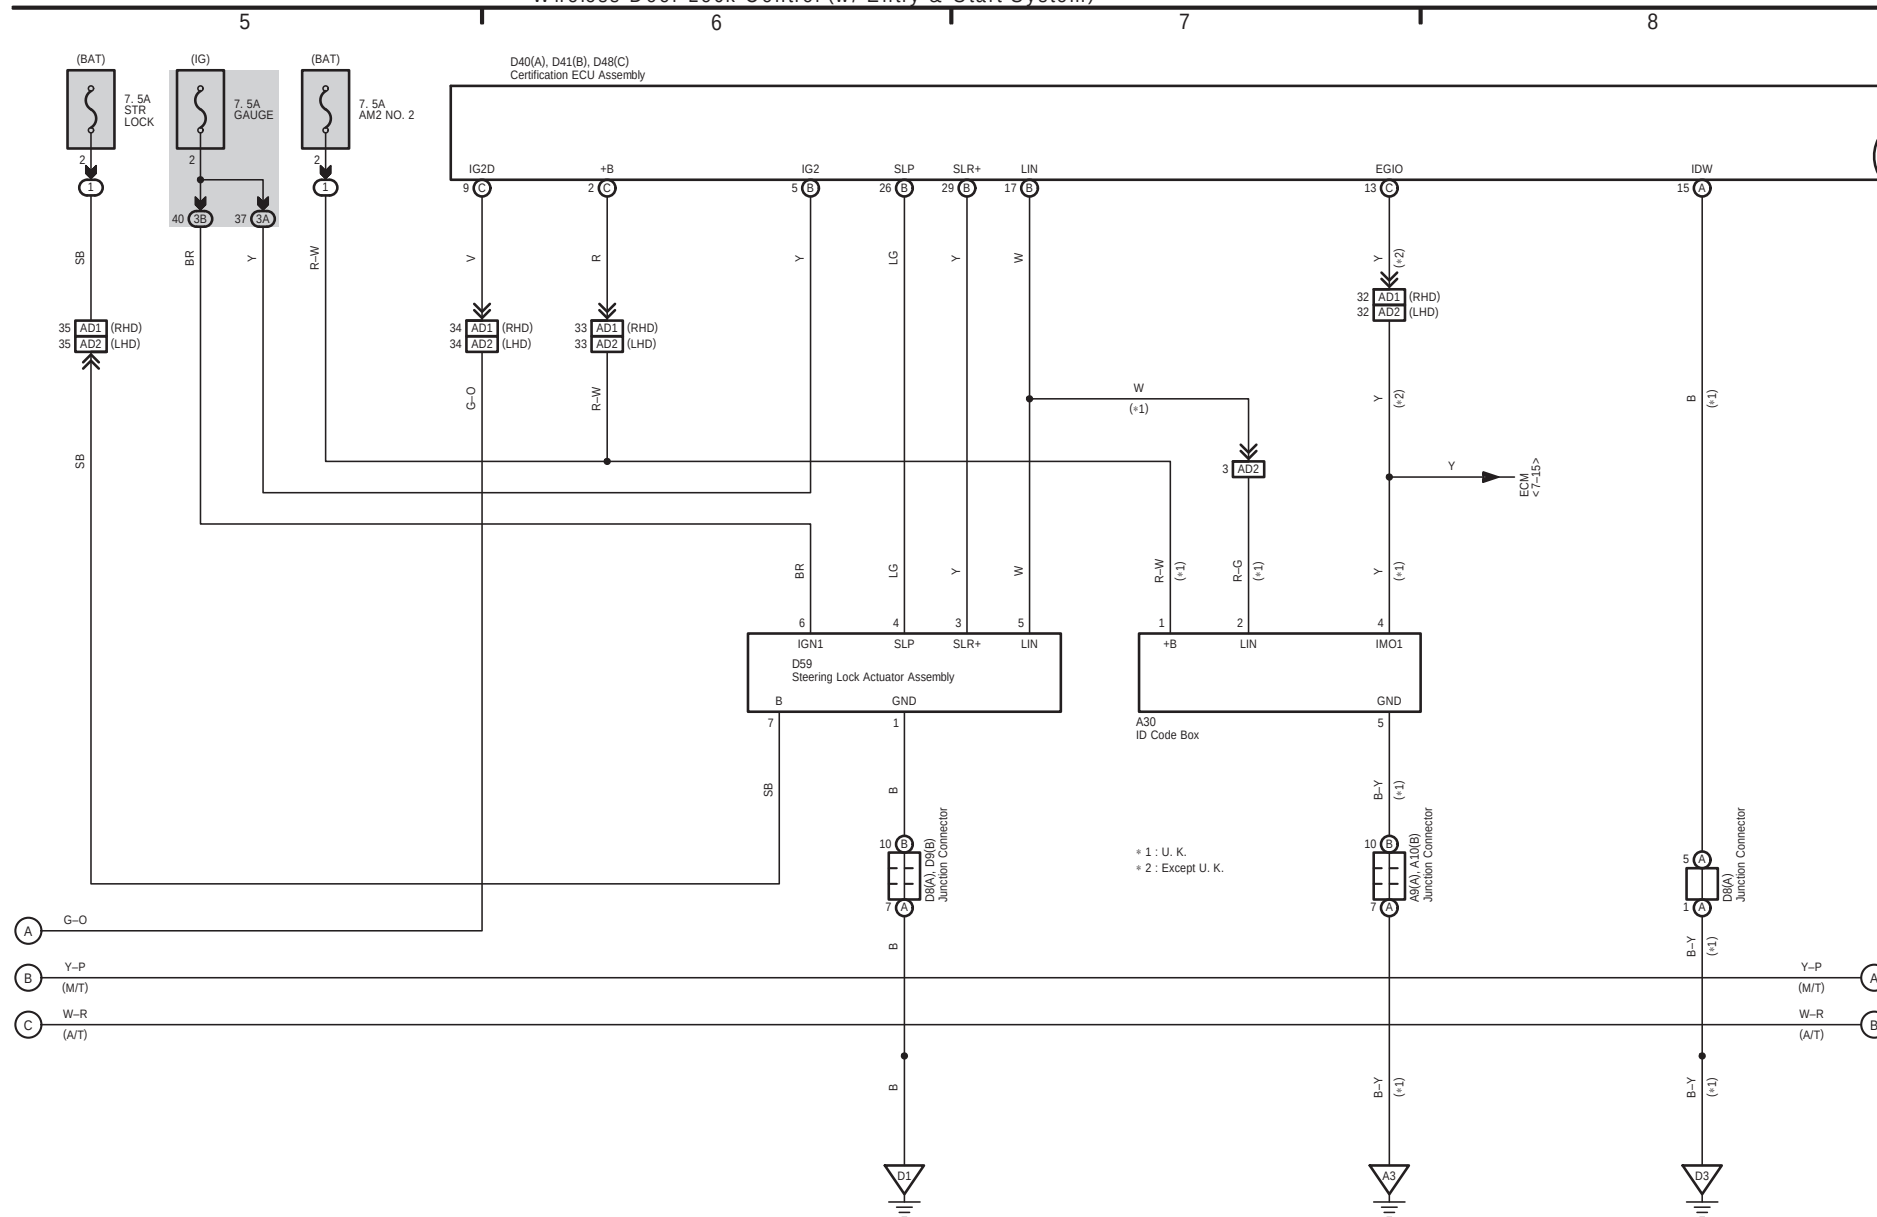

A horizontal number line with tick marks at 9, 10, 11, and 12.



13

14

15

16

The diagram illustrates the electrical connections for the front door handle assembly, showing both Right Hand (RH) and Left Hand (LH) configurations. The top section shows the terminal block connections, while the bottom section shows the internal wiring of the handle assembly.

Terminal Block Connections:

- POS (Position):** 19 (RH), 21 (LH), 23 (LH), 11 (LH), 10 (LH), 19 (LH), 20 (LH), 22 (LH), 12 (LH), 13 (LH)
- TSW (Travel Switch):** 20 (RH), 8 (LH), 8 (LH), 23 (LH), 11 (LH), 10 (LH), 20 (LH), 22 (LH), 12 (LH), 13 (LH)
- SEN (Sensor):** 22 (RH), 12 (LH), 13 (LH), 23 (LH), 11 (LH), 10 (LH), 22 (LH), 12 (LH), 13 (LH)
- CLG (Control Line):** 12 (RH), 13 (LH), 23 (LH), 11 (LH), 10 (LH), 22 (LH), 12 (LH), 13 (LH)
- CG (Control Ground):** 13 (RH), 10 (LH), 10 (LH), 22 (LH), 12 (LH), 13 (LH)


Internal Wiring:

- F5 (Front Door Outside Handle Assembly RH):**
 - 5: W-B (RH)
 - 1: Y-B (RH)
 - 4: W (RH)
 - 6: SB (RH)
 - 3: R (RH)
- E1 (Front Door Outside Handle Assembly LH):**
 - 5: W-B (LH)
 - 1: Y-B (LH)
 - 4: GR (LH)
 - 6: W (LH)
 - 3: L (LH)

Wiring Details:

- FD1 (Front Door Outside Handle Assembly RH):**
 - 6: B (RH)
 - 2: B (RH)
- FD1 (Front Door Outside Handle Assembly LH):**
 - 6: B (LH)
 - 2: B (LH)
- D1 (Diode):** Connected to the bottom of the handle assembly.
- D4 (Diode):** Connected to the bottom of the handle assembly.

Engine Immobiliser System (w/ Entry & Start System), Entry & Start System,
Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and
Wireless Door Lock Control (w/ Entry & Start System)

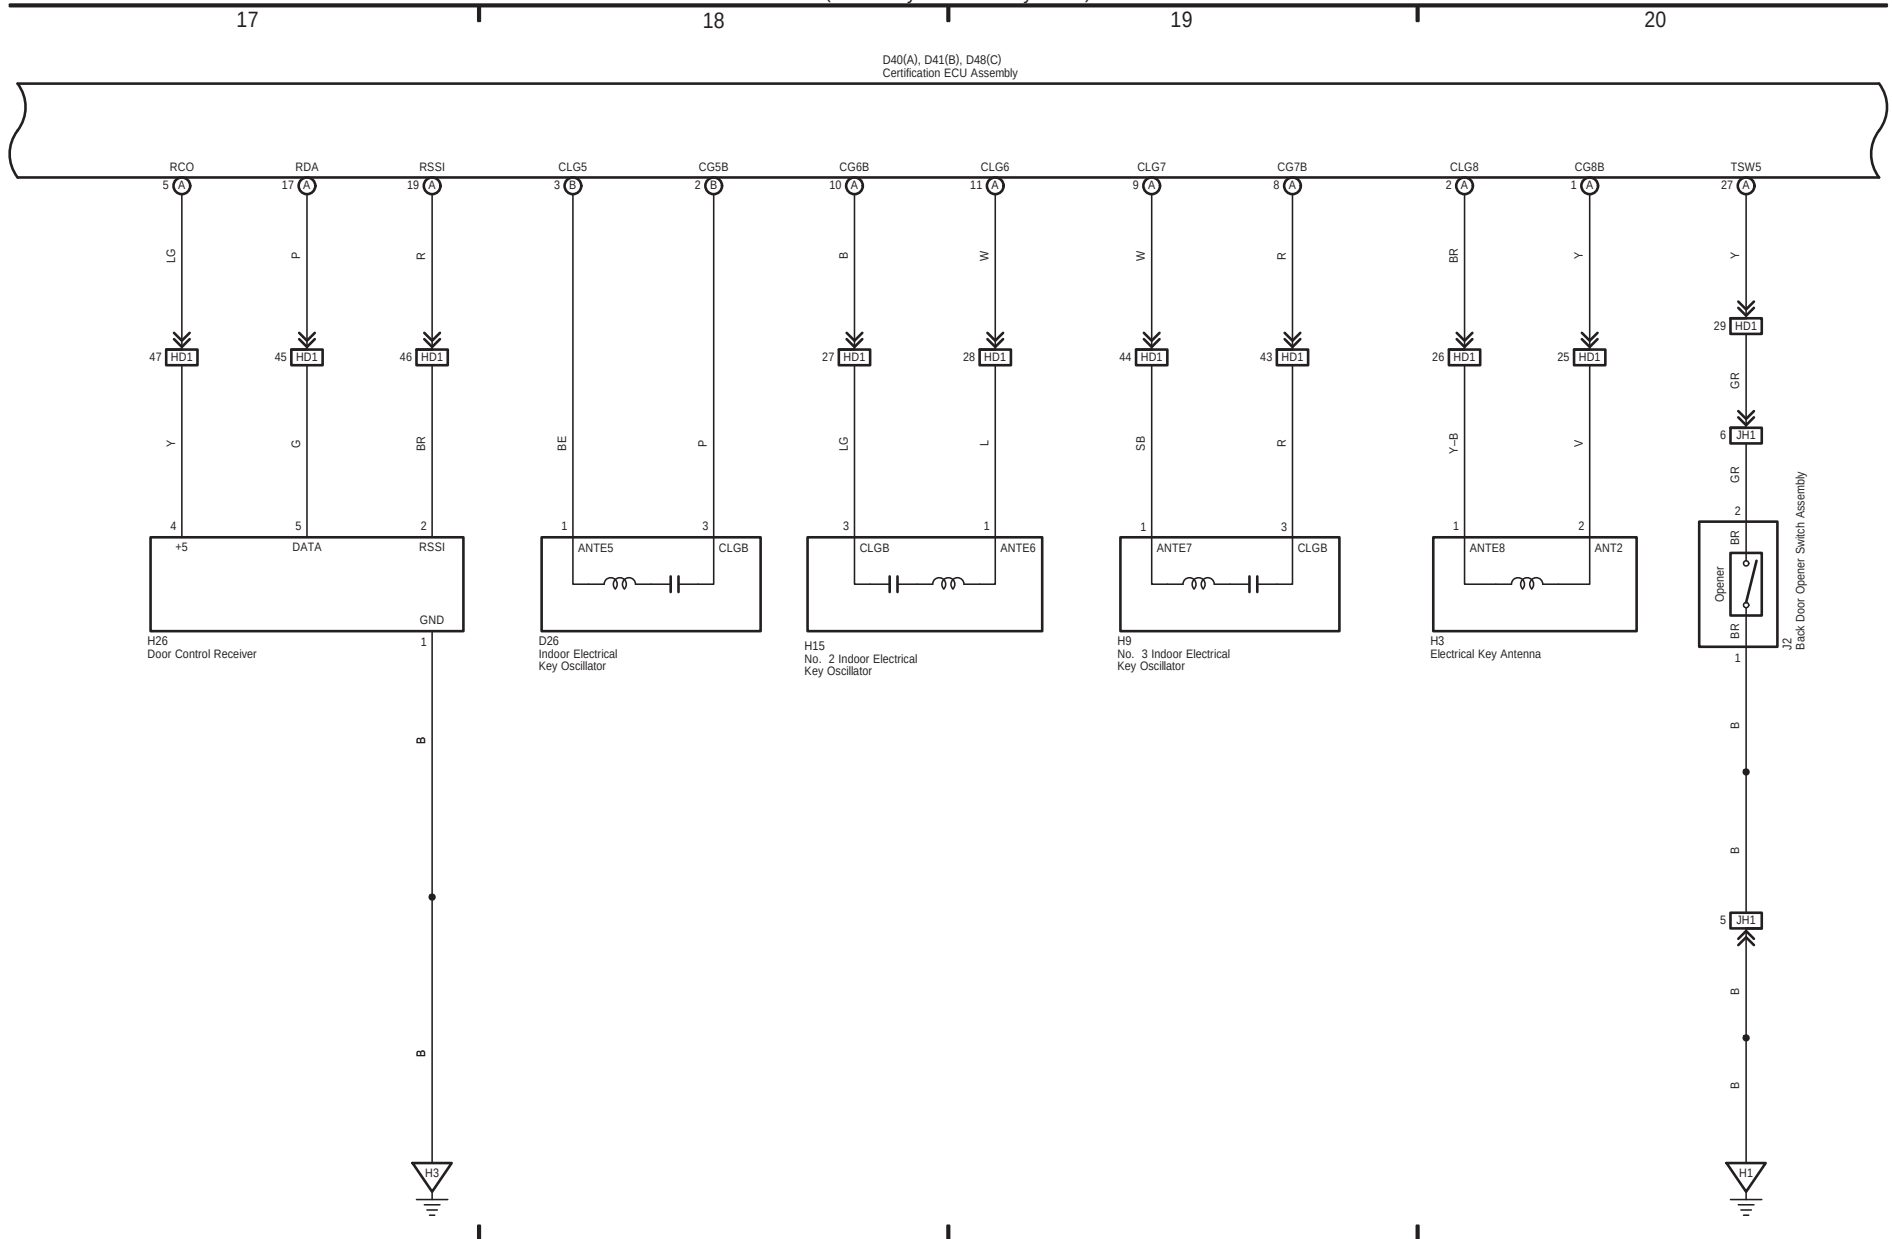

3 86 (Cont' d)

Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

