


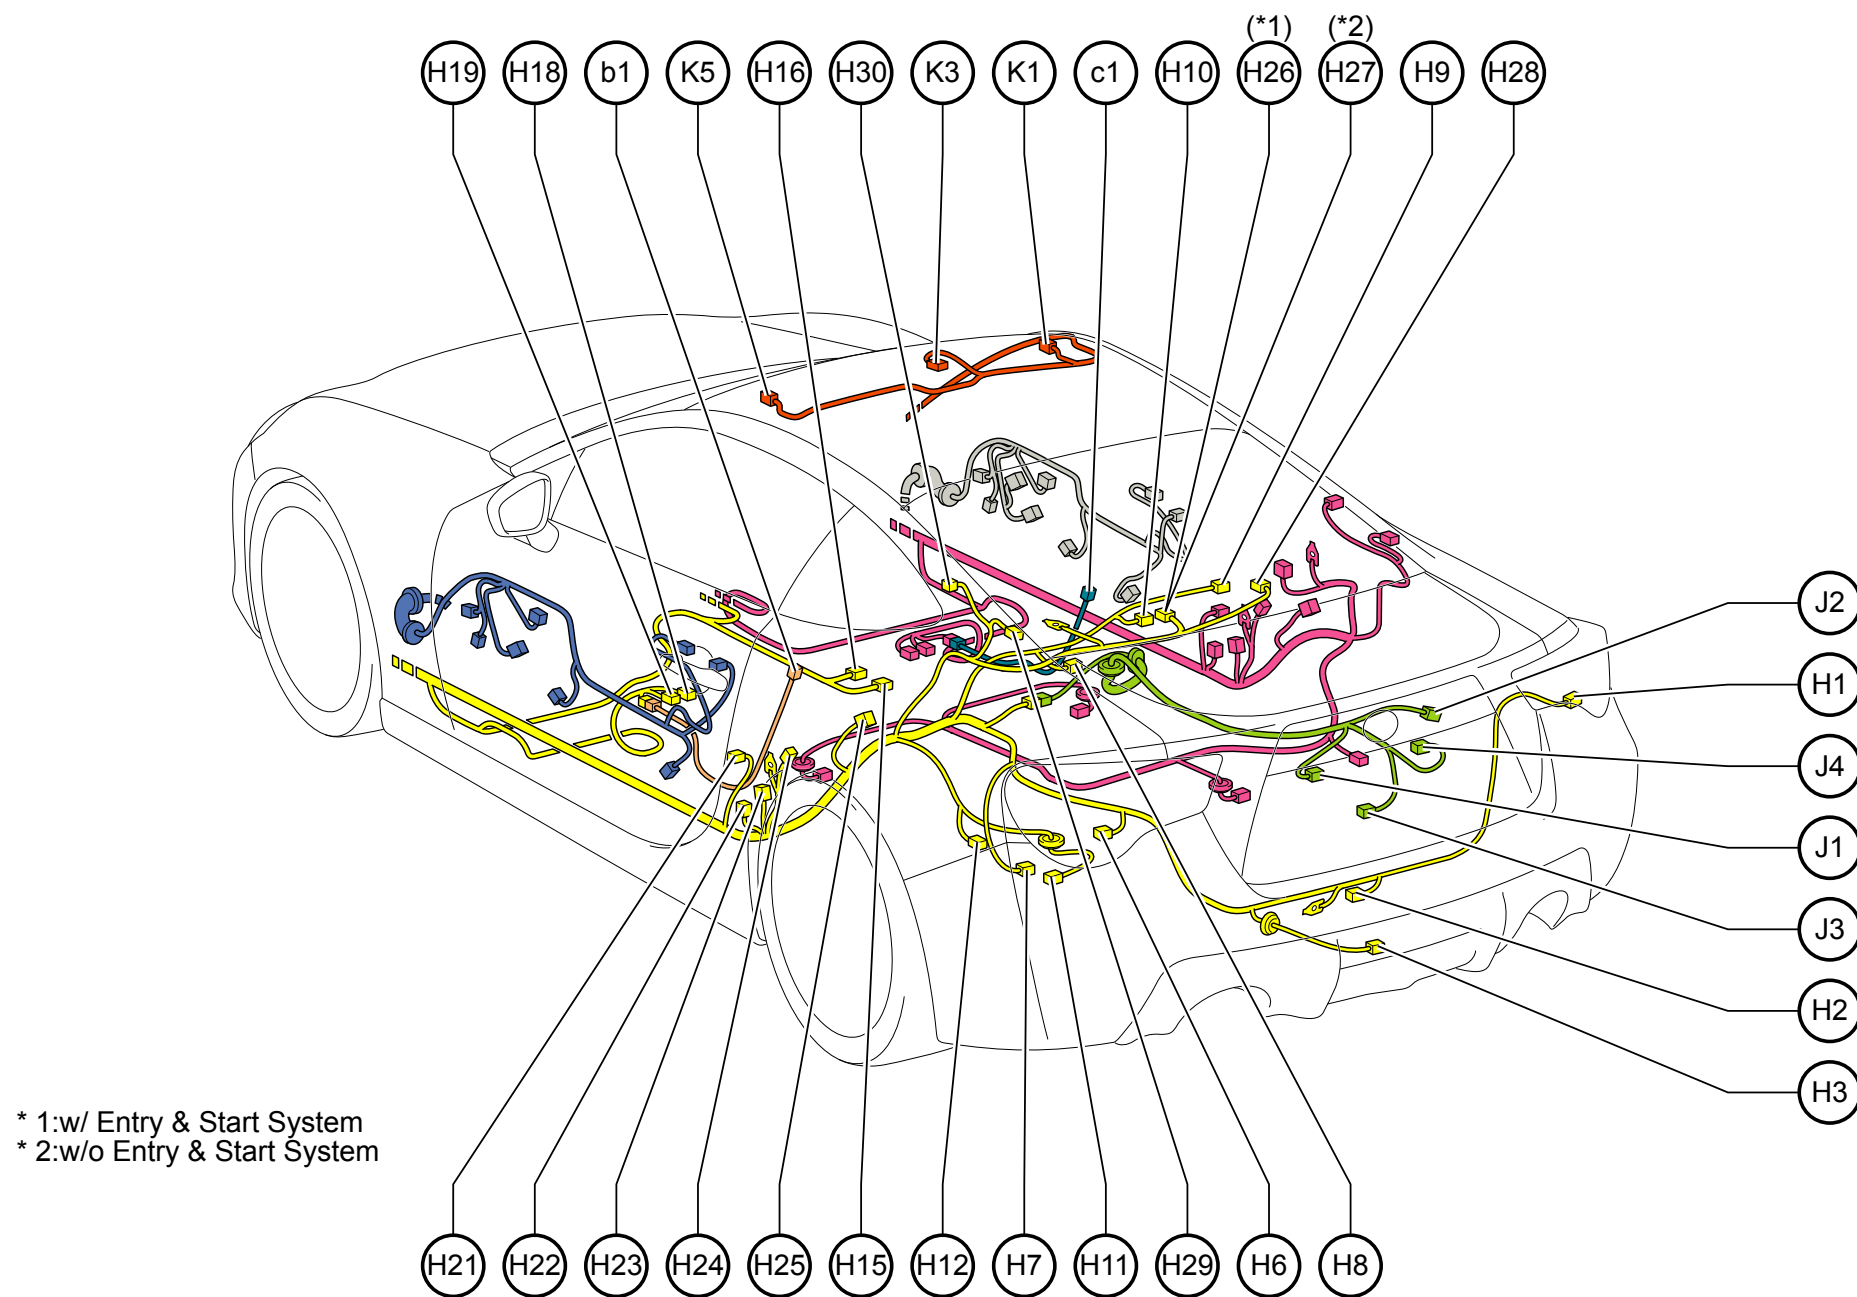

H 1 Rear Combination Light Socket and Wire Sub-Assembly RH
H 2 Back-Up Light Socket and Wire
H 3 Electrical Key Antenna
H 6 Rear Combination Light Socket and Wire Sub-Assembly LH
H 7 Luggage Door Opening Cancel Switch Assembly
H 8 No. 1 Luggage Compartment Light Assembly
H 9 No. 3 Indoor Electrical Key Oscillator
H 10 Center Stop Light Assembly
H 11 Rear Height Control Sensor Sub-Assembly LH
H 12 Rear Speed Sensor LH
H 15 No. 2 Indoor Electrical Key Oscillator
H 16 No. 2 Airbag Sensor Assembly
H 18 Seat Heater LH
H 19 Front Seat Inner Belt Assembly LH
H 21 Front Door Courtesy Light Switch Assembly LH
H 22 Front Seat Outer Belt Assembly LH
H 23 No. 2 Side Airbag Sensor Assembly LH
H 24 Rear Speaker Assembly LH
H 25 Rear Airbag Sensor LH
H 26 Door Control Receiver
H 27 Door Control Receiver
H 28 Tire Pressure Warning ECU and Receiver
H 29 Rear Window Defogger (Back Window Glass)
H 30 Curtain Shield Airbag Assembly LH

J 1 License Plate Light Socket and Wire LH
J 2 Back Door Opener Switch Assembly
J 3 Luggage Door Closer Assembly
J 4 License Plate Light Socket and Wire RH

K 1 Vanity Light Assembly RH (Visor Assembly RH)
K 3 Map Light Assembly
K 5 Vanity Light Assembly LH (Visor Assembly LH)

b 1 Front Seat Airbag Assembly LH

c 1 Front Seat Airbag Assembly RH

Position of Parts in Body <RHD>

