


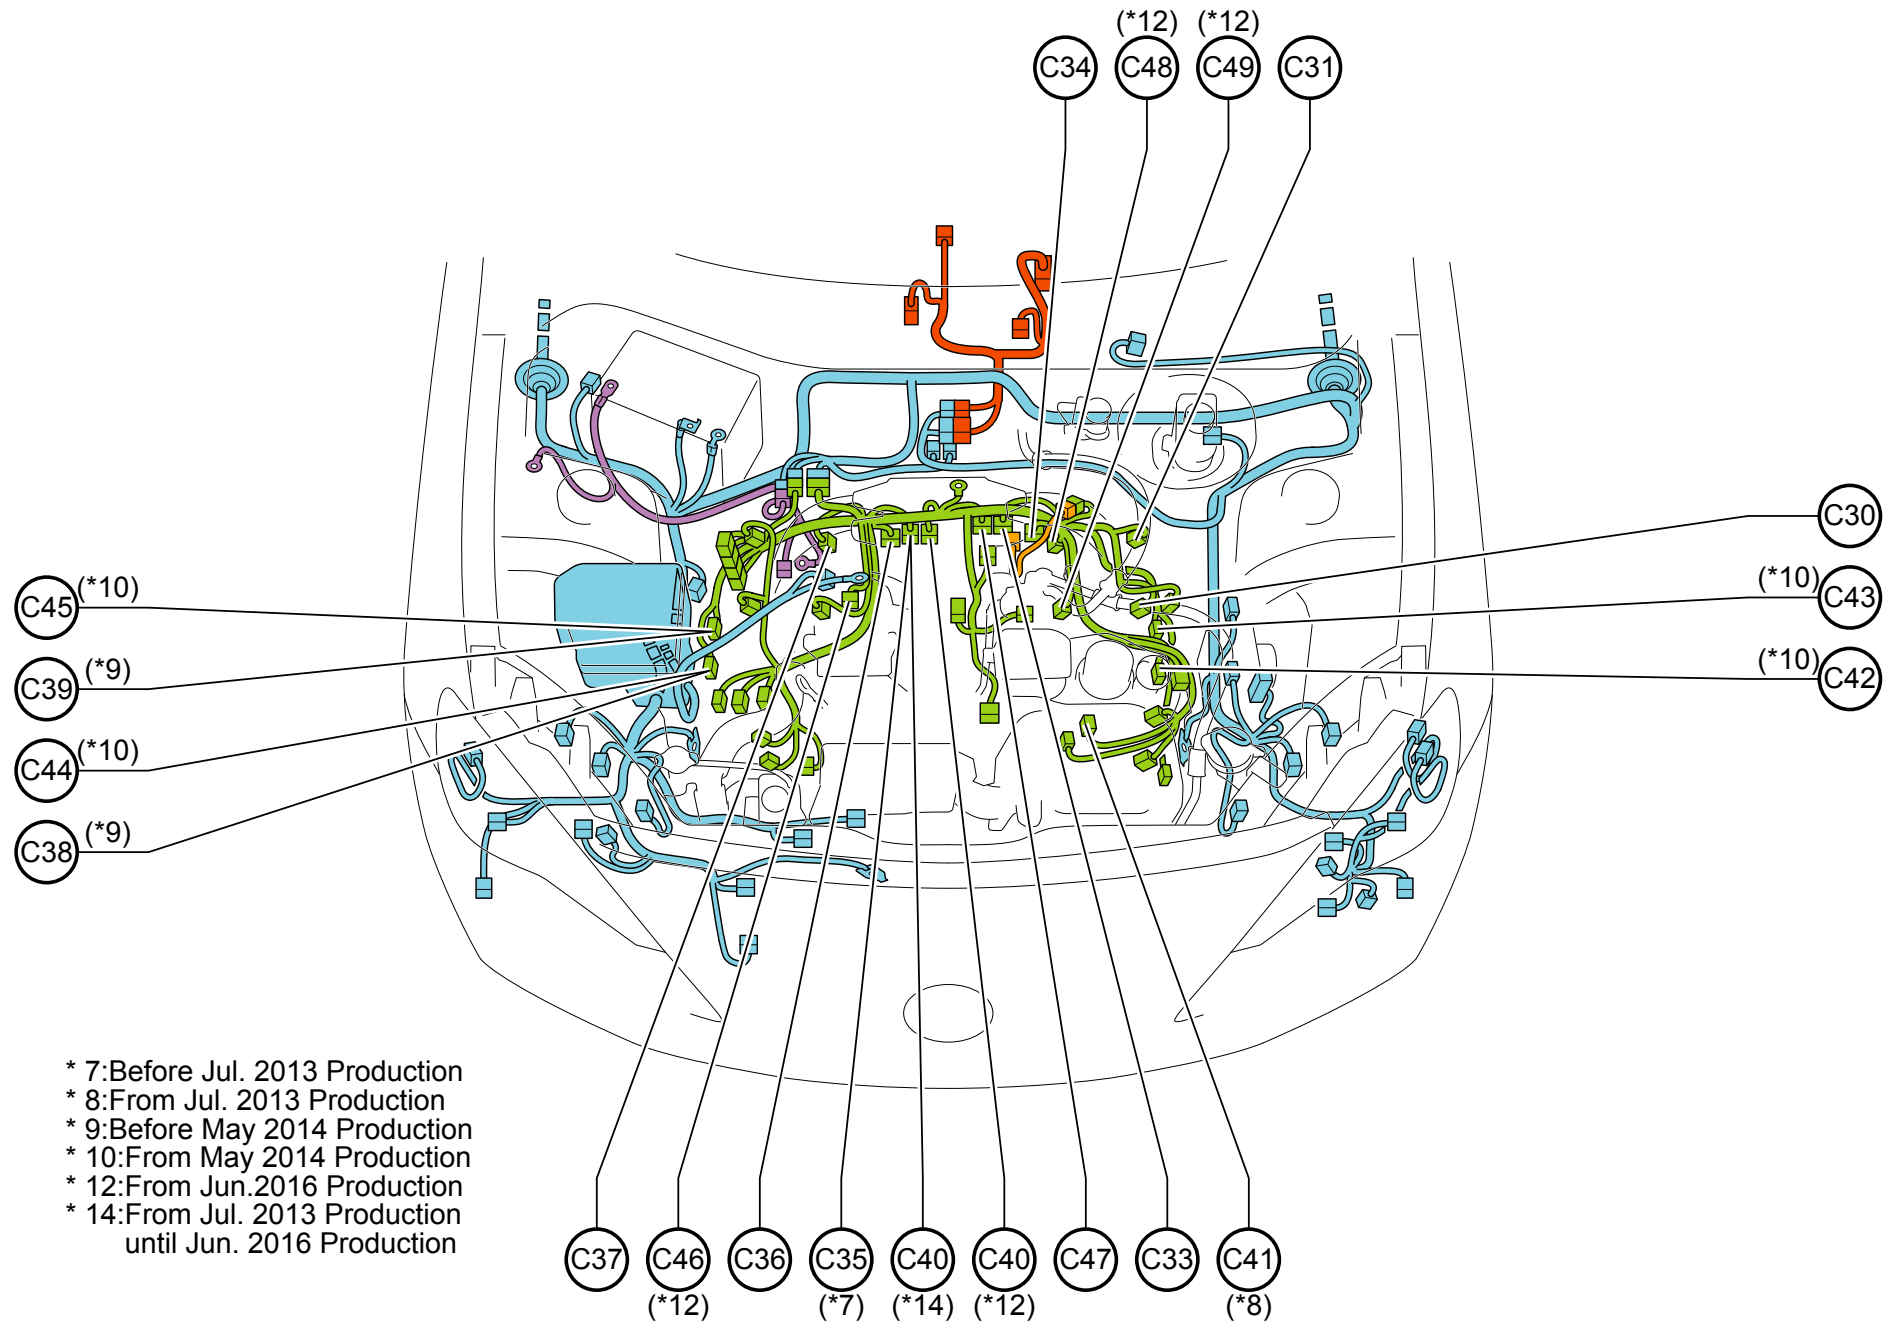

- C 30 Fuel Injector Assembly (for Port Injection No. 2)
- C 31 Fuel Injector Assembly (for Port Injection No. 4)
- C 33 Crankshaft Position Sensor
- C 34 Knock Control Sensor (Bank 2)
- C 35 E.F.I. Engine Coolant Temperature Sensor
- C 36 Knock Control Sensor (Bank 1)
- C 37 Fuel Injector Assembly (for Direct Injection No. 3)
- C 38 Ignition Coil Assembly No. 1
- C 39 Ignition Coil Assembly No. 3
- C 40 E.F.I. Engine Coolant Temperature Sensor
- C 41 Engine Oil Temperature Sensor (Temperature Sensor)
- C 42 Ignition Coil Assembly No. 2
- C 43 Ignition Coil Assembly No. 4
- C 44 Ignition Coil Assembly No. 1
- C 45 Ignition Coil Assembly No. 3
- C 46 Fuel Pressure Sensor
- C 47 Crankshaft Position Sensor
- C 48 Fuel Injector Assembly (for Direct Injection No. 4)
- C 49 Fuel Injector Assembly (for Direct Injection No. 2)

