



















Position of Parts in Engine Compartment <LHD 2AZ-FE>

* 5:A/T
* 6:CVT

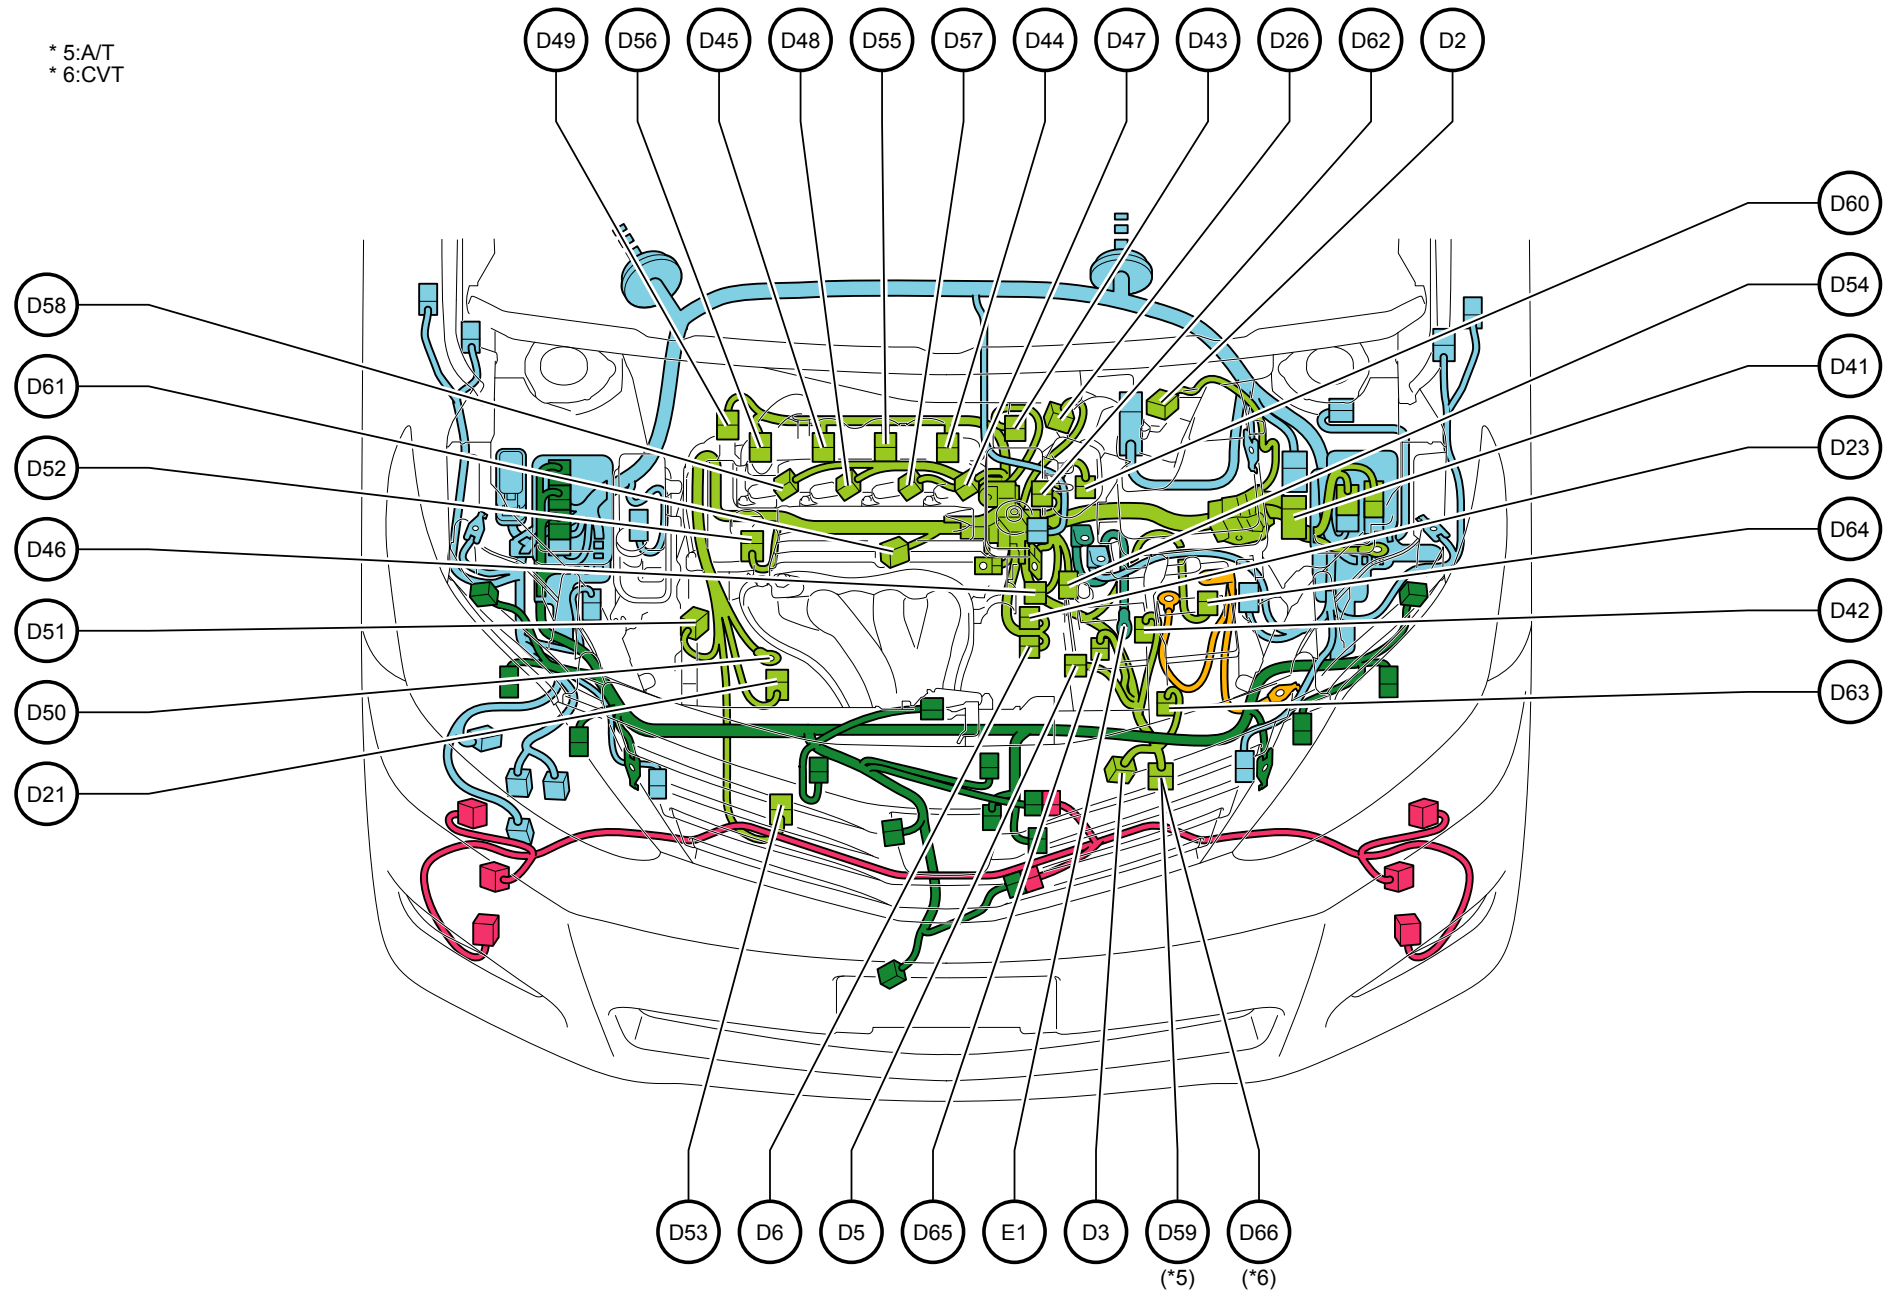


- D 2 Intake Air Flow Meter Sub-Assembly
- D 3 Park/Neutral Position Switch
- D 5 Starter Assembly
- D 6 E.F.I. Engine Coolant Temperature Sensor
- D 21 Generator Assembly
- D 23 Engine Oil Pressure Switch Assembly
- D 26 Throttle with Motor Body Assembly
- D 41 ECM
- D 42 Transmission Revolution Sensor (NIN)
- D 43 Purge VSV
- D 44 Fuel Injector Assembly No.4
- D 45 Fuel Injector Assembly No.2
- D 46 Noise Filter (Ignition)
- D 47 Ignition Coil Assembly No.4
- D 48 Ignition Coil Assembly No.2
- D 49 Camshaft Timing Oil Control Valve
- D 50 Generator Assembly
- D 51 Crank Position Sensor
- D 52 Oxygen Sensor (Bank 1 Sensor 2)
- D 53 With Pulley Compressor Assembly
- D 54 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 55 Fuel Injector Assembly No.3
- D 56 Fuel Injector Assembly No.1
- D 57 Ignition Coil Assembly No.3
- D 58 Ignition Coil Assembly No.1
- D 59 Transmission Wire
- D 60 Transmission Revolution Sensor (NOUT)
- D 61 Knock Control Sensor (Bank 1)
- D 62 Cam Position Sensor
- D 63 Transmission Revolution Sensor (NT)
- D 64 Oil Pressure Sensor
- D 65 Transmission Revolution Sensor (NC)
- D 66 Transmission Wire

 - E 1 Starter Assembly

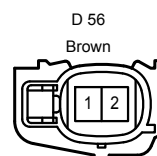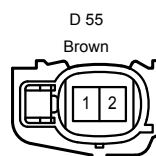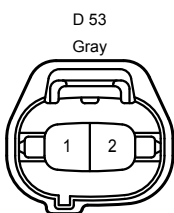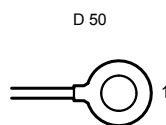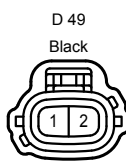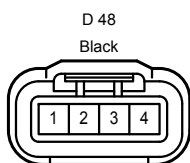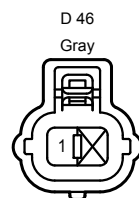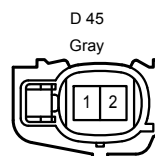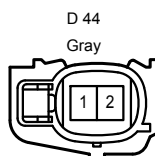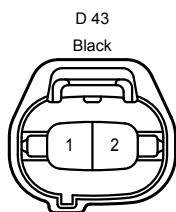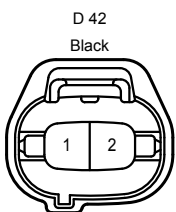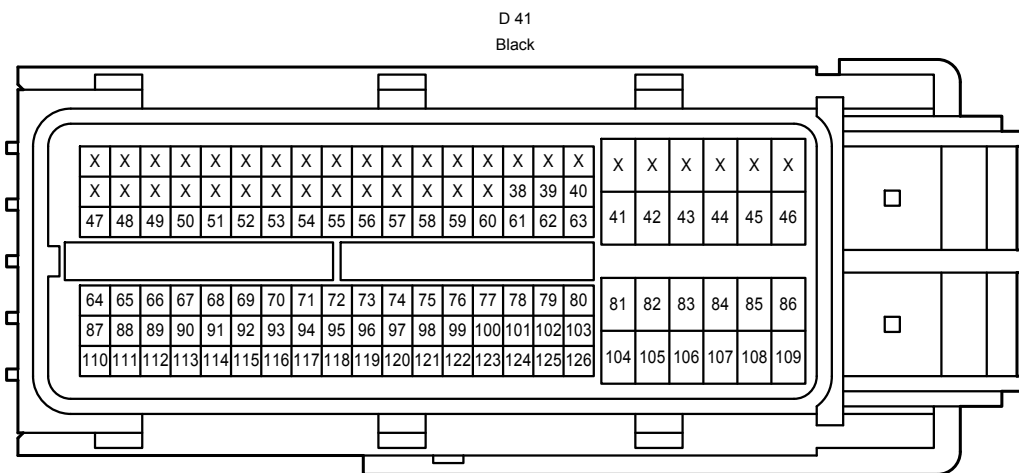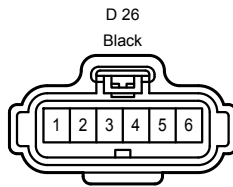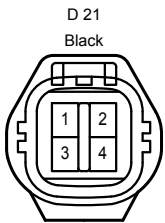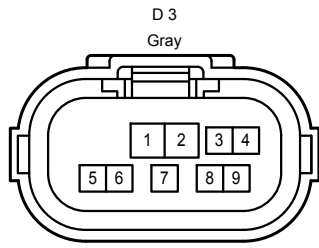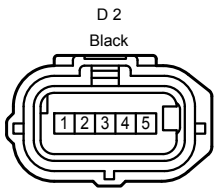


Position of Parts in Engine Compartment <LHD 2AZ-FE>

 
D 57
Black




D 58
Black

 


D 59
Gray

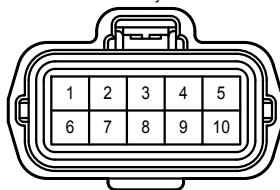

D 60
Black

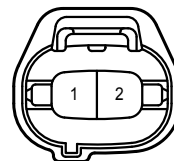


D 61
Black

 

D 62
Black




D 63
Black

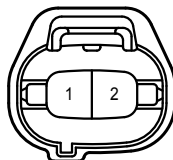


D 64
Black



D 65
Black

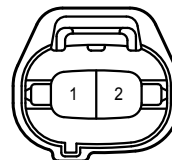

D 66
Gray

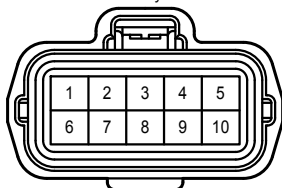

E 1

