


Position of Parts in Engine Compartment <LHD 2AZ-FE>

- * 1: Before Sep. 2010 Production
- * 2: From Sep. 2010 Production
- * 3: Before Oct. 2011 Production
- * 4: From Oct. 2011 Production

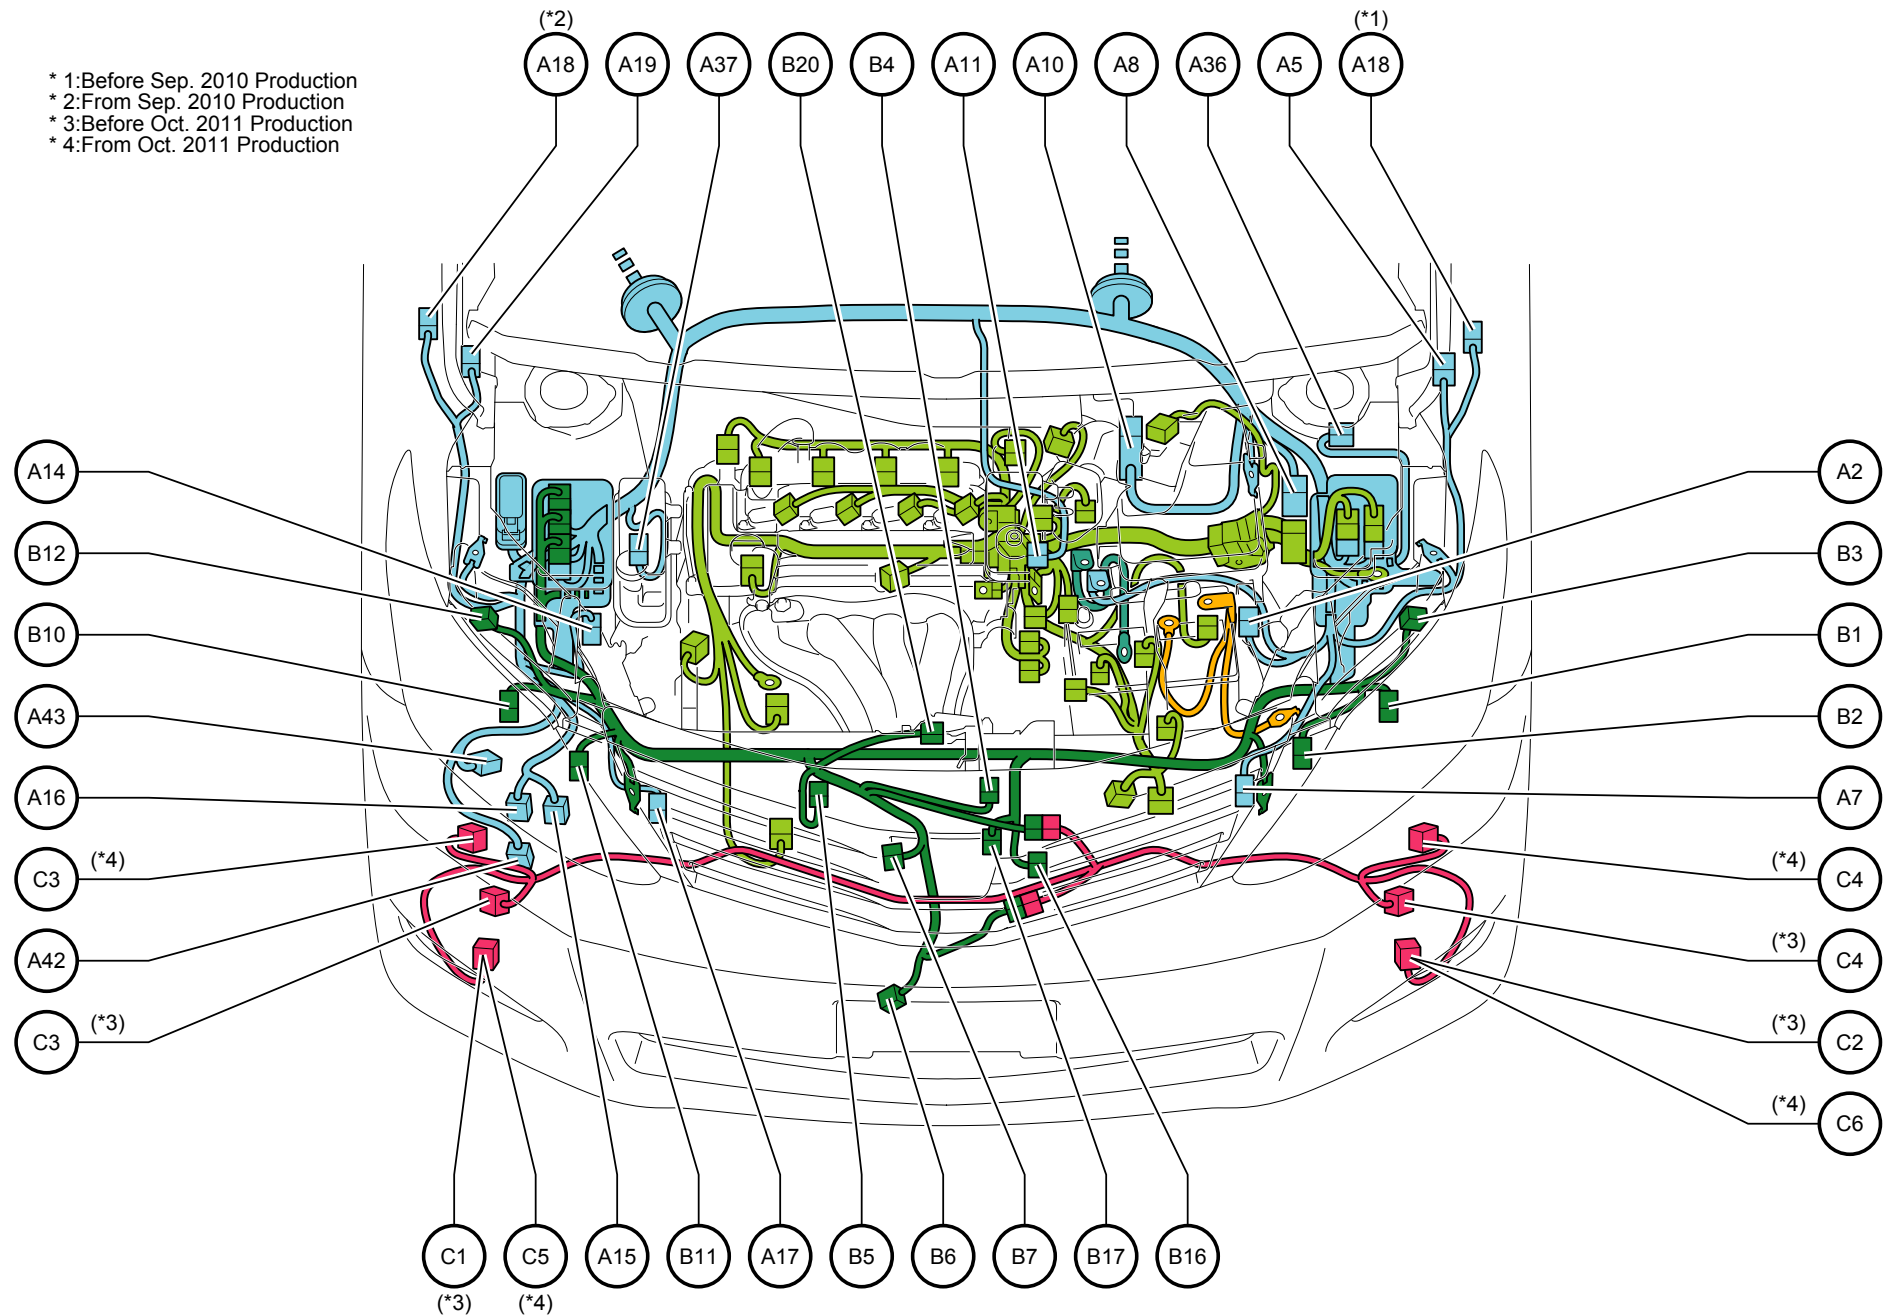

A 2 Battery Current Sensor Assembly
A 5 Front Speed Sensor LH
A 7 Front Airbag Sensor LH
A 8 ECM
A 10 Skid Control ECU with Actuator Assembly
A 11 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 14 A/C Pressure Sensor
A 15 Rear Washer Motor and Pump Assembly
A 16 Windshield Washer Motor and Pump Assembly
A 17 Front Airbag Sensor RH
A 18 Wireless Door Lock Buzzer
A 19 Front Speed Sensor RH
A 36 Windshield Wiper Motor Assembly
A 37 Security Horn Assembly
A 42 Headlight Cleaner Motor and Pump Assembly
A 43 Headlight Cleaner Relay


B 1 Headlight Assembly LH
B 2 Headlight Leveling Motor LH
B 3 Headlight Assembly LH
B 4 Low Pitched Horn Assembly
B 5 High Pitched Horn Assembly
B 6 Ambient Temperature Sensor
B 7 Smog Ventilation Sensor
B 10 Headlight Assembly RH
B 11 Headlight Leveling Motor RH
B 12 Headlight Assembly RH
B 16 Cooling Fan Motor
B 17 No.2 Cooling Fan Motor
B 20 Engine Hood Courtesy Switch

C 1 Fog Light Assembly RH
C 2 Fog Light Assembly LH
C 3 Front No.1 Ultrasonic Sensor RH
C 4 Front No.1 Ultrasonic Sensor LH
C 5 Fog Light Assembly RH
C 6 Fog Light Assembly LH

Position of Parts in Engine Compartment <LHD 2AZ-FE>


A 2

Black

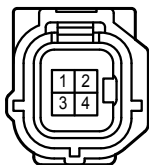

A 5

Black

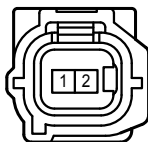


A 7

Yellow




A 8

Black

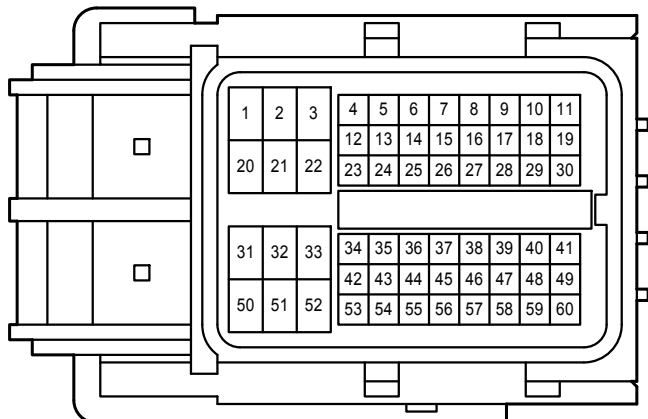

A 10

Black

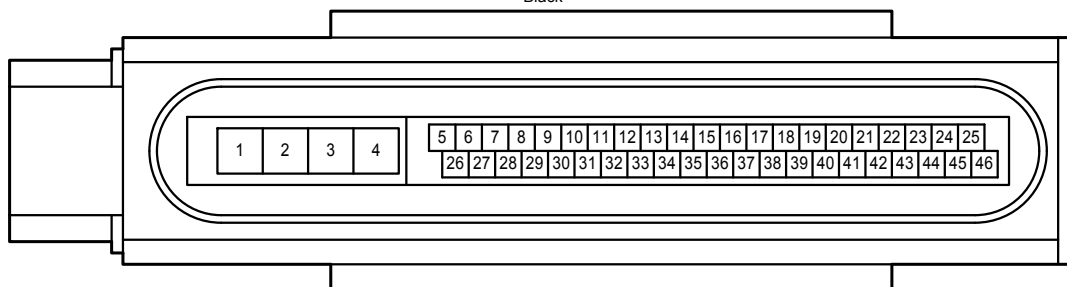


A 11

Gray



A 14

Black

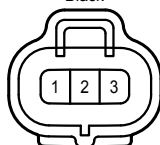

A 15

Black




A 16

Black



A 17

Yellow

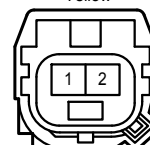

A 18

Black



A 19

Black



 
A 36

Black



A 37

Black



A 42

Black



Position of Parts in Engine Compartment <LHD 2AZ-FE>

