


Position of Parts in Instrument Panel <RHD>

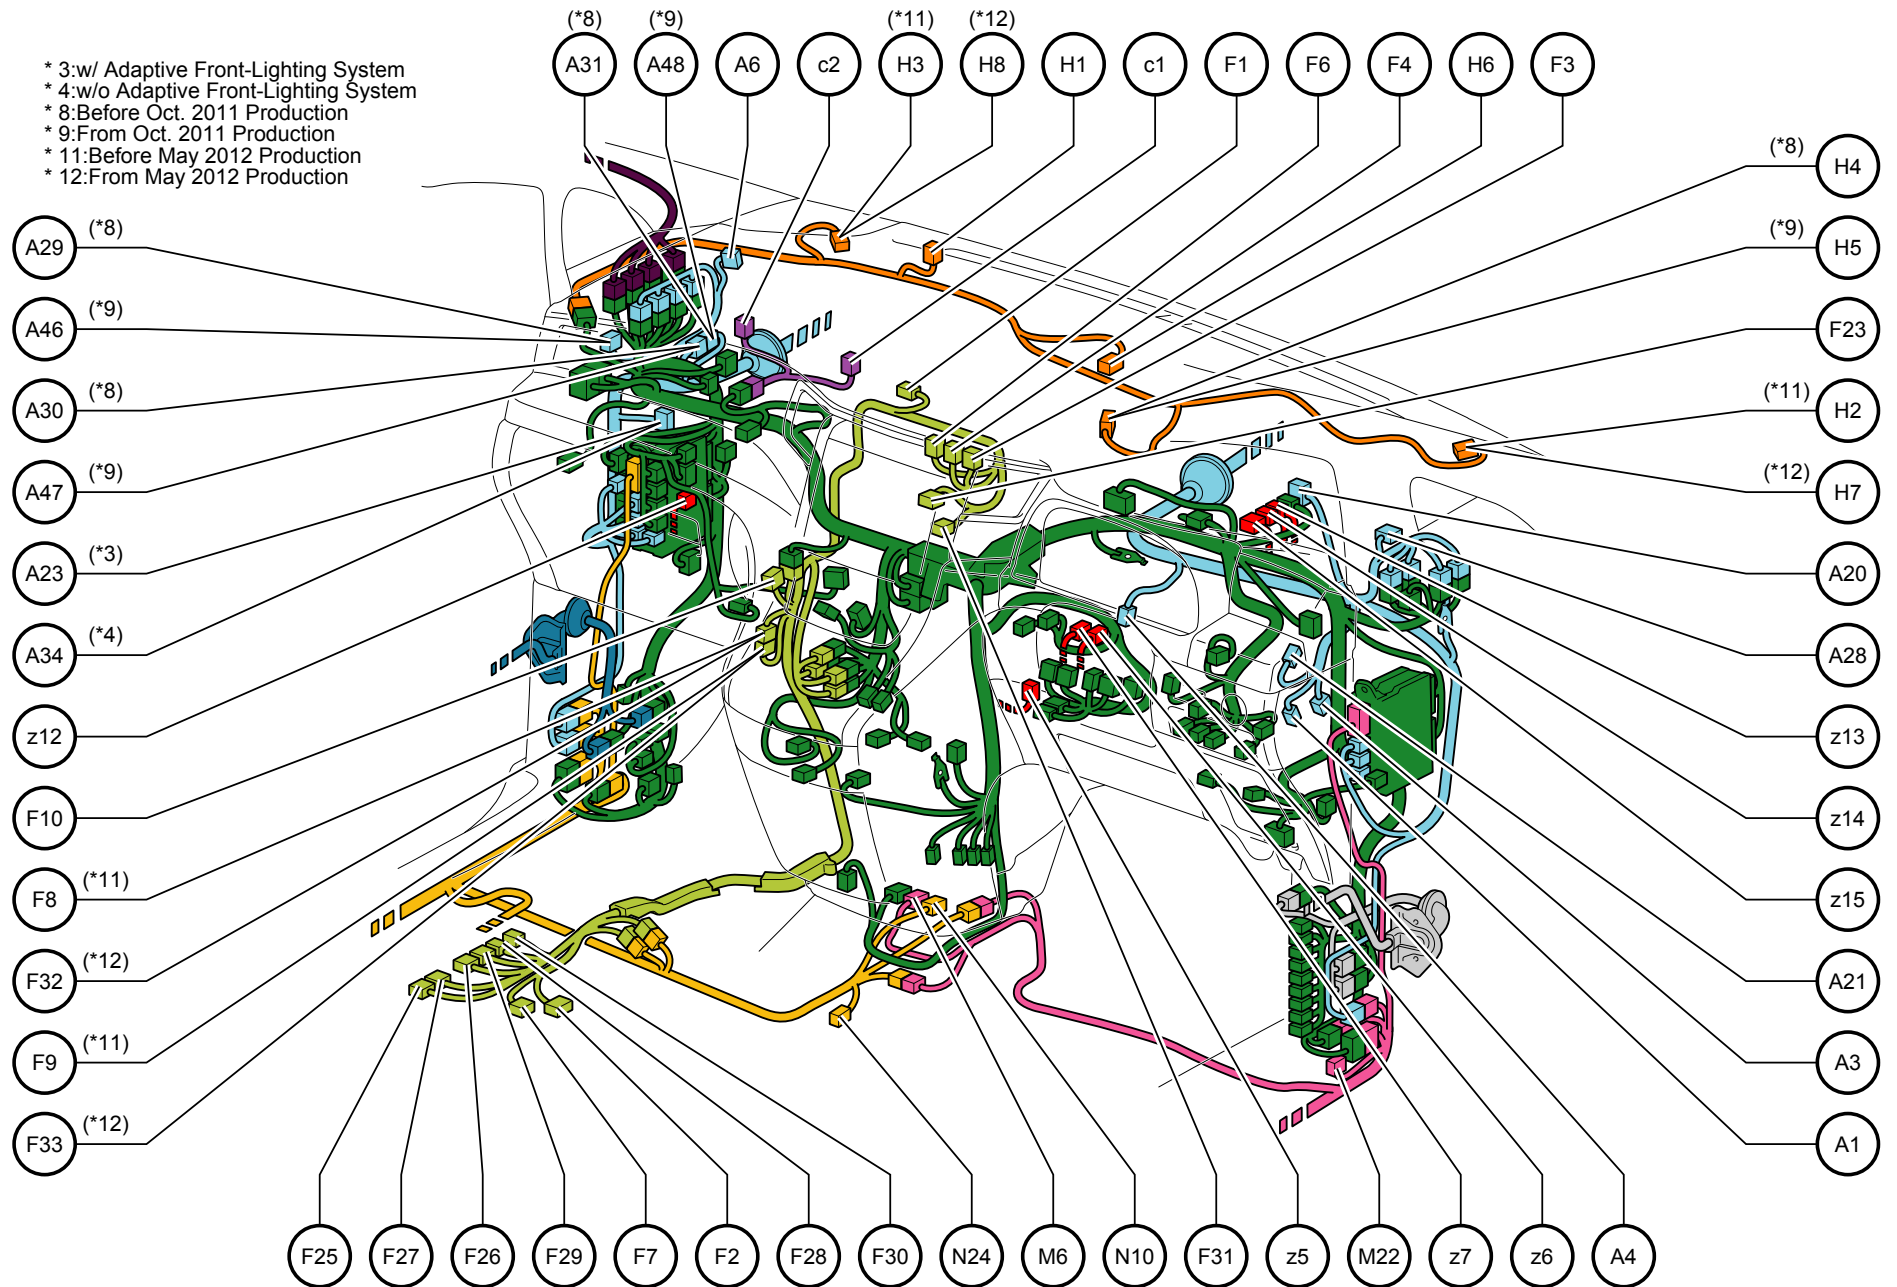

- A 1 Stop Light Switch Assembly
- A 3 Accelerator Pedal Sensor Assembly
- A 4 Parking Brake Switch Assembly
- A 6 Stop Light Control Relay Assembly
- A 20 Power Steering ECU Assembly
- A 21 Brake Pedal Load Sensing Switch
- A 23 Headlight Swivel ECU Assembly
- A 28 Junction Connector
- A 29 Junction Connector
- A 29 Junction Connector
- A 30 Junction Connector
- A 31 Junction Connector
- A 34 Headlight Leveling ECU Assembly
- A 46 Junction Connector
- A 47 Junction Connector
- A 48 Junction Connector

- F 1 Amplifier Antenna Assembly
- F 1 Amplifier Antenna Assembly
- F 2 Clearance Warning ECU Assembly
- F 3 Radio Receiver Assembly
- F 4 Radio Receiver Assembly
- F 6 Radio Receiver Assembly
- F 7 Radio Setting Condenser
- F 8 Junction Connector
- F 9 Junction Connector
- F 10 Junction Connector
- F 23 Navigation Receiver Assembly
- F 25 Stereo Component Amplifier Assembly
- F 26 Stereo Component Amplifier Assembly
- F 27 Stereo Component Amplifier Assembly
- F 28 Stereo Component Amplifier Assembly
- F 29 Stereo Component Amplifier Assembly
- F 30 Stereo Component Amplifier Assembly
- F 31 Navigation Receiver Assembly
- F 32 Junction Connector
- F 33 Junction Connector

- H 1 Automatic Light Control Sensor
- H 2 Front No.3 Speaker Assembly RH
- H 3 Front No.3 Speaker Assembly LH
- H 4 Front Ion Generator Sub-Assembly
- H 5 Front Ion Generator Sub-Assembly
- H 6 Front No.2 Speaker Assembly
- H 7 Front No.3 Speaker Assembly RH
- H 8 Front No.3 Speaker Assembly LH

- M 6 Center Airbag Sensor Assembly
- M 22 Junction Connector
















 
 


 
- N 10 Center Airbag Sensor Assembly
- N 24 Front Indoor Electrical Key Oscillator

- c 1 Front Passenger Side Squib Circuit
- c 2 Front Passenger Side Squib Circuit






















- z 5 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 6 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 7 Spiral Cable Sub-Assembly , Steering Pad Switch

- z 12 A/C Amplifier Assembly , A/C Blower Assembly
- z 13 Power Steering ECU Assembly , Power Steering Torque Sensor
- z 14 Power Steering ECU Assembly , Power Steering Motor Assembly
- z 15 Power Steering ECU Assembly , Power Steering Motor Assembly

Position of Parts in Instrument Panel <RHD>

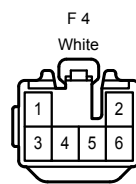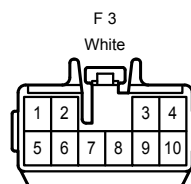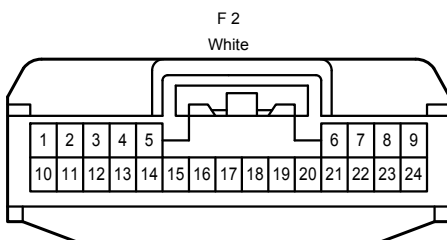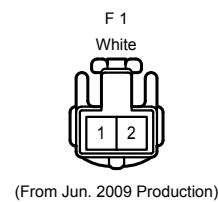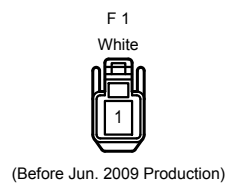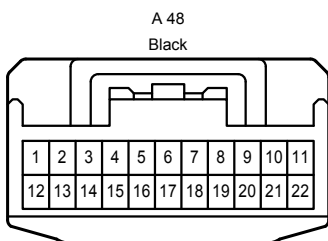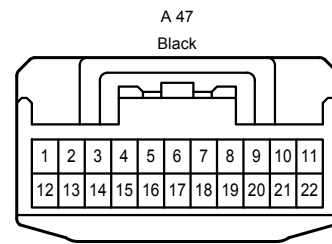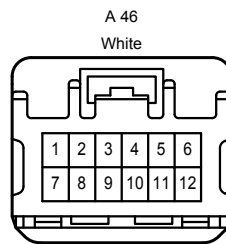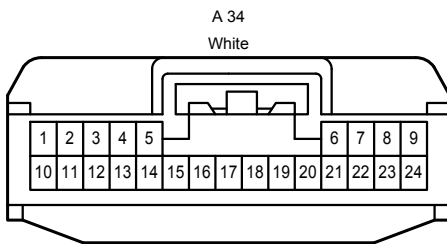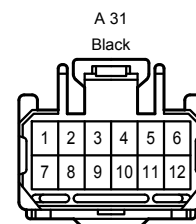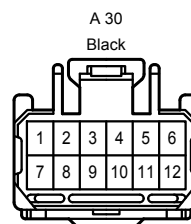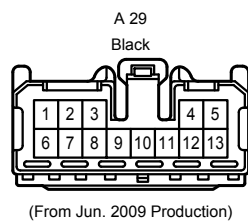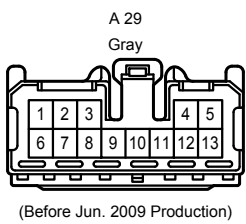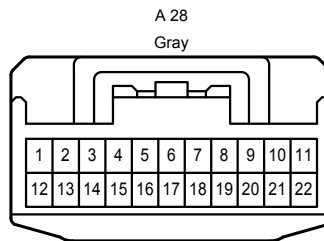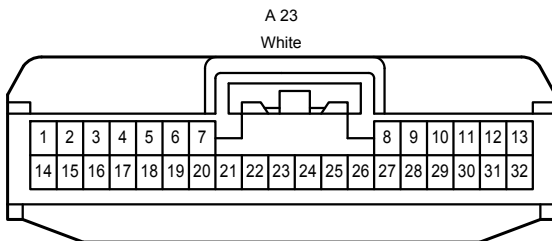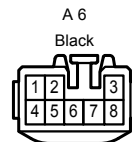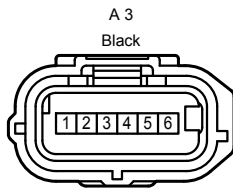


 Position of Parts in Instrument Panel <RHD>

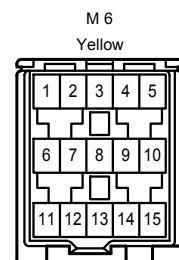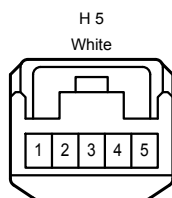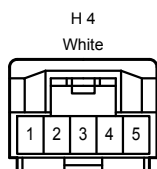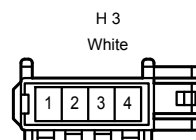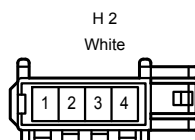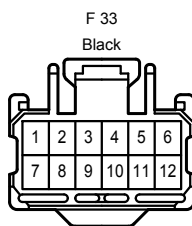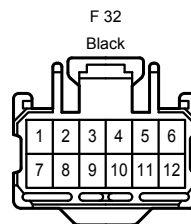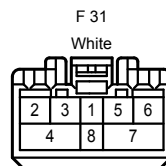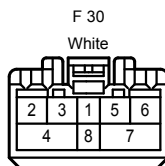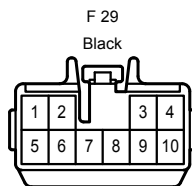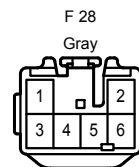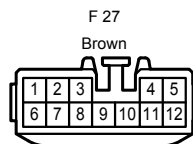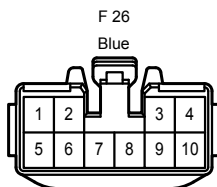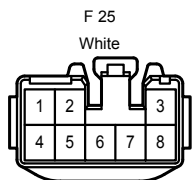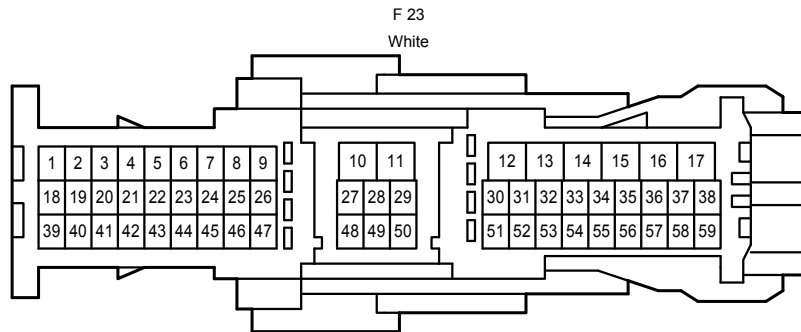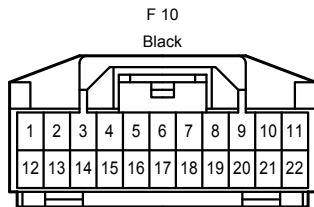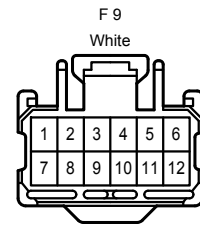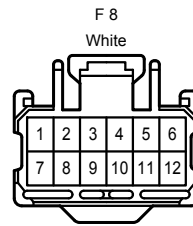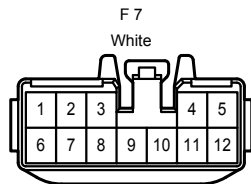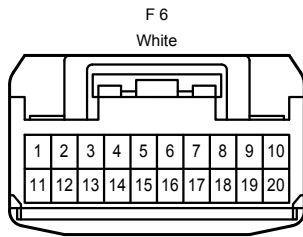


Position of Parts in Instrument Panel <RHD>


M 22
Black

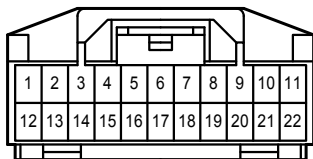


N 10
Yellow

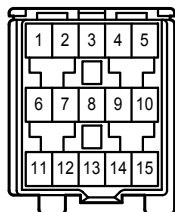


N 24
White

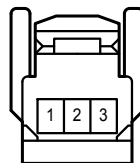


c 1
Orange

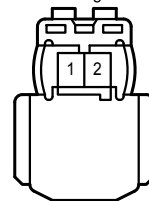


c 2
Black

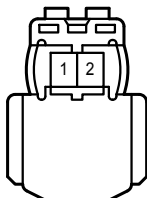


z 5
Orange

 


z 6
White

 


z 7
White

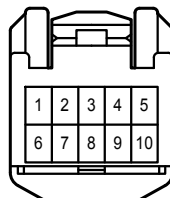


z 12
White

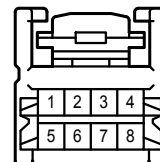

z 13
White

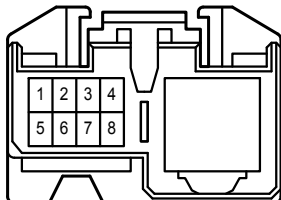

z 14
White

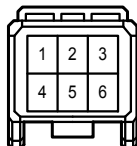

z 15
White

