


Position of Parts in Seat <RHD Front Seat w/ Power Seat>

* 1: Before Oct. 2011 Production

* 2: From Oct. 2011 Production

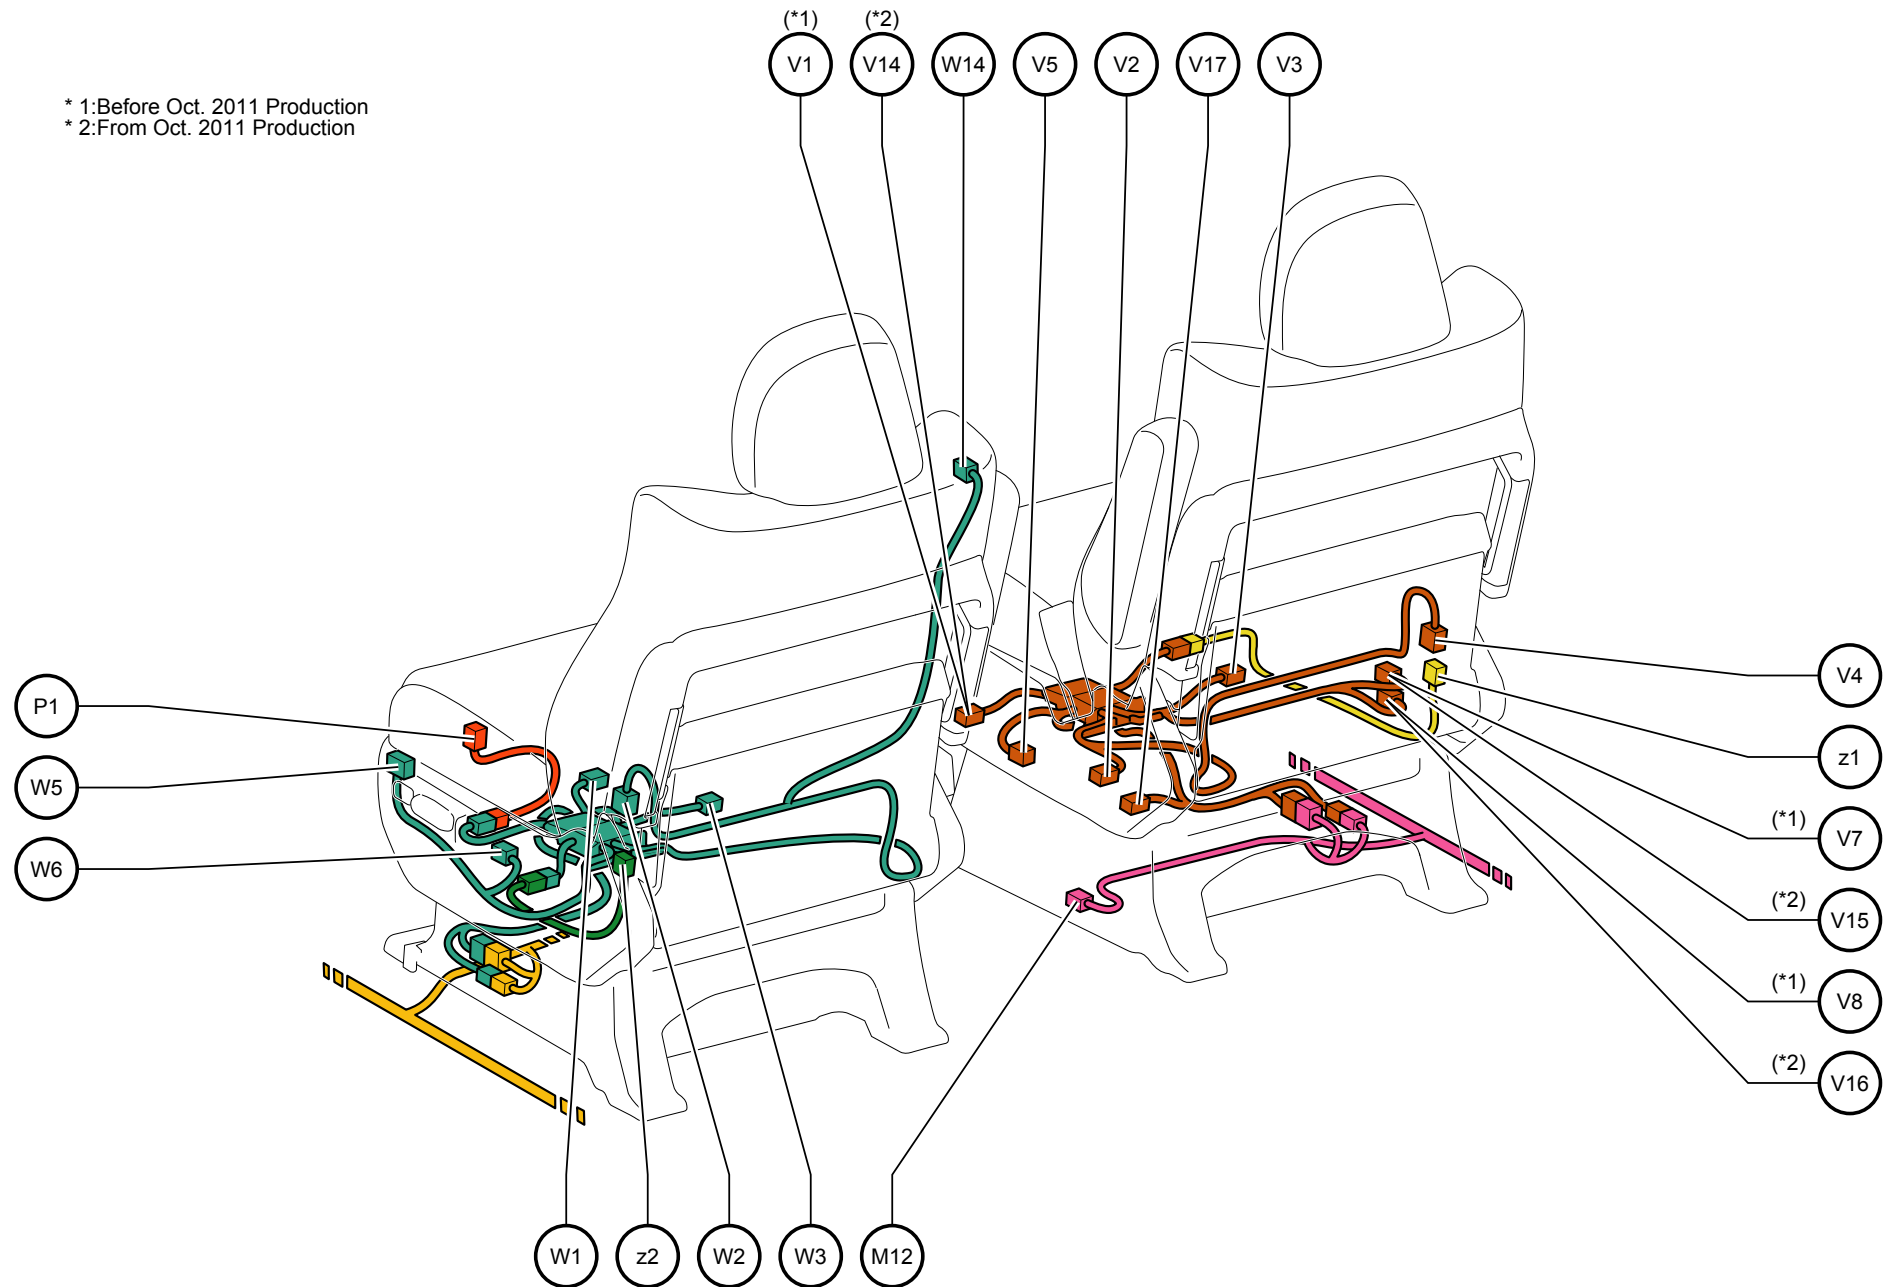

M 12 Yaw Rate Sensor

P 1 Ottoman Reclining Motor Assembly (Front Seat LH)

V 1 Front Power Seat Slide Position Motor Assembly RH
V 2 Front Power Seat Lift Position Motor Assembly RH
V 3 Front Power Seat Vertical Position Motor Assembly RH
V 4 Front Power Seat Reclining Position Motor Assembly RH
V 5 Front Seat Inner Belt Assembly RH
V 7 Front Position Control ECU and Switch Assembly RH
V 8 Front Position Control ECU and Switch Assembly RH
V 14 Front Power Seat Slide Position Motor Assembly RH
V 15 Front Position Control ECU and Switch Assembly RH
V 16 Front Position Control ECU and Switch Assembly RH
V 17 No.2 with Box Speaker Assembly

W 1 Front Power Seat Slide Position Motor Assembly LH
W 2 Front Power Seat Reclining Position Motor Assembly LH
W 3 Front Seat Inner Belt Assembly LH
W 5 Front Power Seat Switch LH
W 6 Front Power Seat Switch Assembly LH
W 14 Front Power Seat Switch Assembly LH

z 1 Side Airbag Squib Circuit RH
z 2 Side Airbag Squib Circuit LH

Position of Parts in Seat <RHD Front Seat w/ Power Seat>

