



Position of Parts in Instrument Panel <LHD>

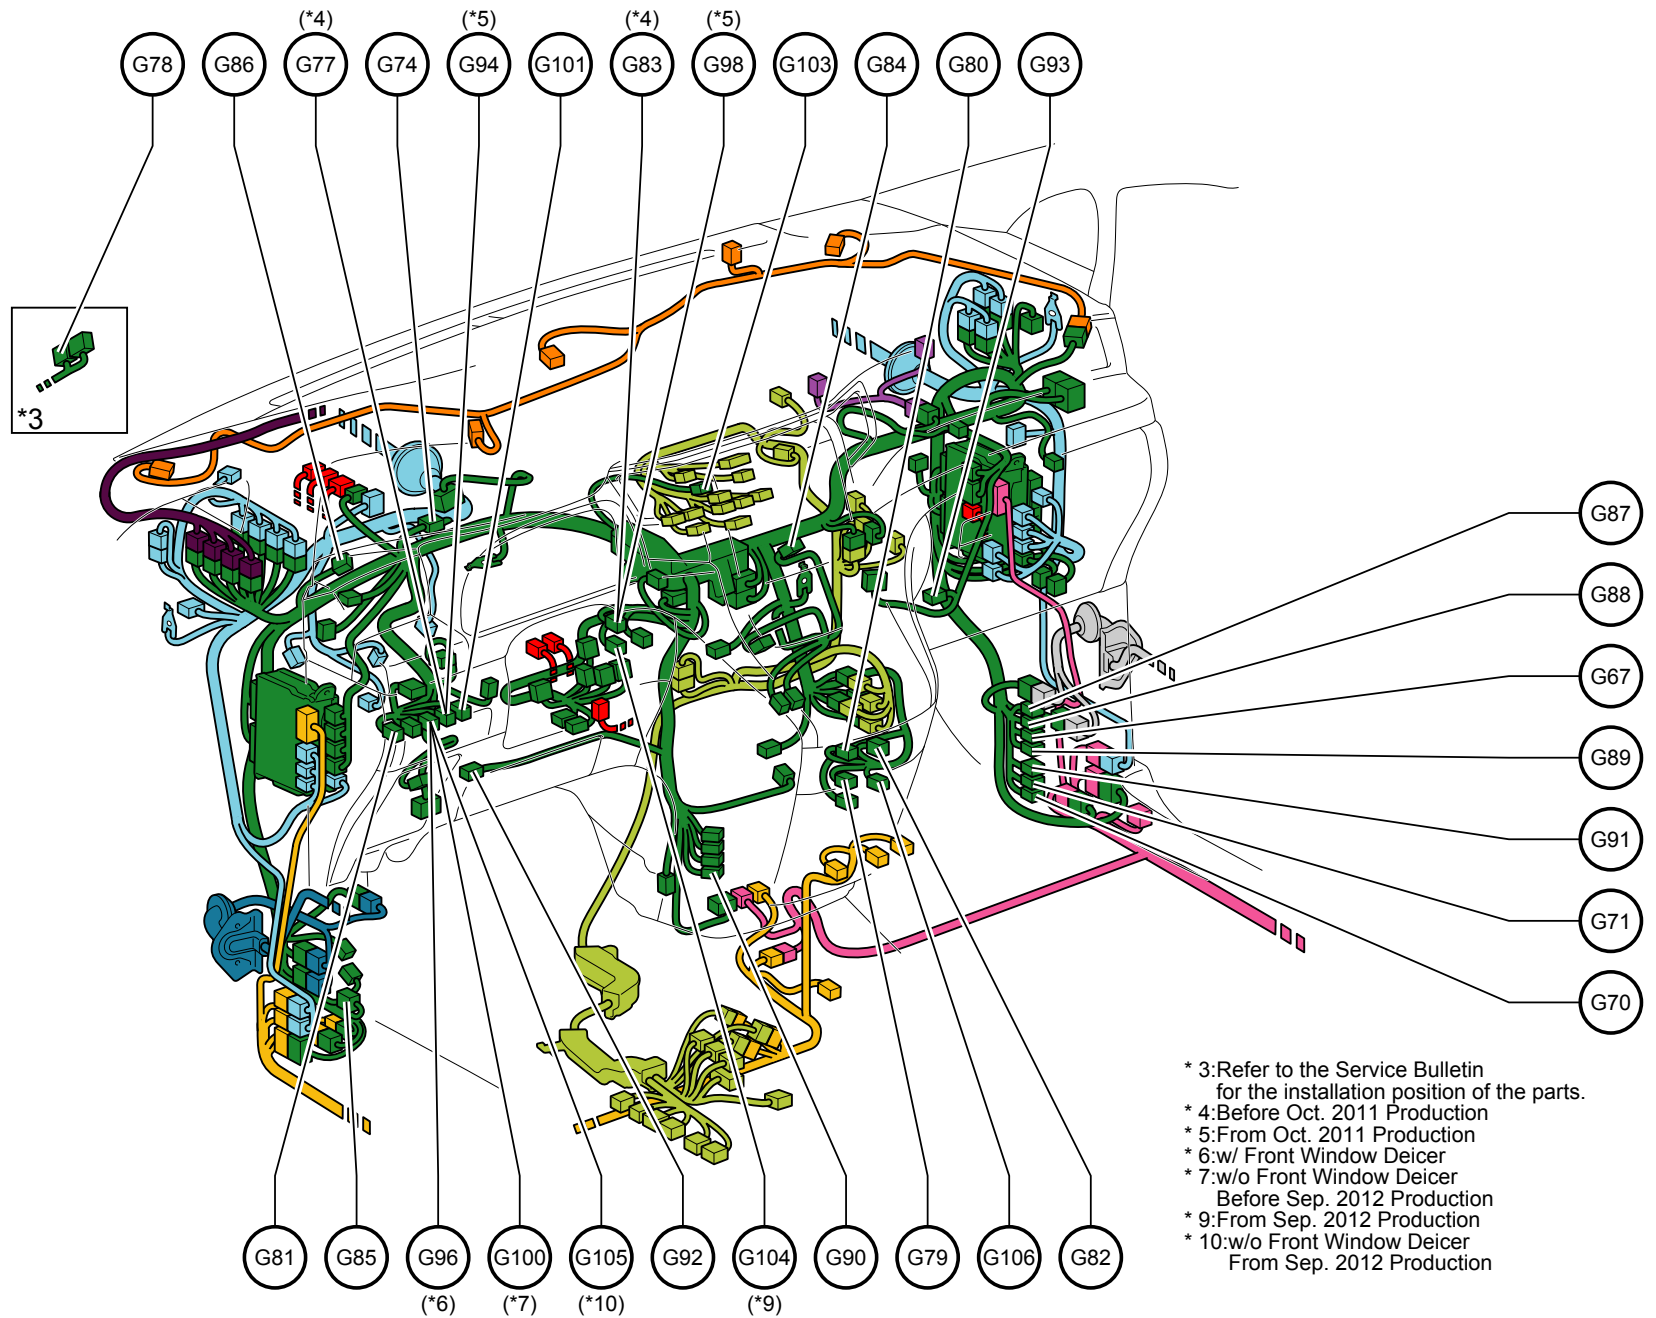

G 67	Junction Connector
G 70	Junction Connector
G 71	Junction Connector
G 74	Junction Connector
G 77	Headlight Swivel Main Switch
G 78	Certification ECU Assembly
G 79	Cigarette Lighter Assembly
G 80	Cigarette Lighter Assembly
G 81	Headlight Cleaner Switch Assembly
G 81	Headlight Cleaner Switch Assembly
G 82	Seat Heater Switch RH
G 83	Seat Heater Switch LH
G 84	Hazard Warning Signal Switch
G 85	Junction Connector
G 86	Junction Connector
G 87	Junction Connector
G 88	Junction Connector
G 89	Junction Connector
G 90	Junction Connector
G 91	Junction Connector
G 92	Foot Light LH (No.1 Interior Illumination Light Assembly)
G 93	Foot Light RH (No.1 Interior Illumination Light Assembly)
G 94	Headlight Swivel Main Switch
G 96	Front Wiper Deicer Switch
G 98	Seat Heater Switch LH
G 100	Heater Switch Assembly
G 101	Air Purifier Switch Assembly
G 103	Navigation Receiver Assembly
G 104	Power Slide Door Main Switch
G 105	Heater Switch Assembly
G 106	Option Connector (Cigarette Lighter Assembly)

Position of Parts in Instrument Panel <LHD>

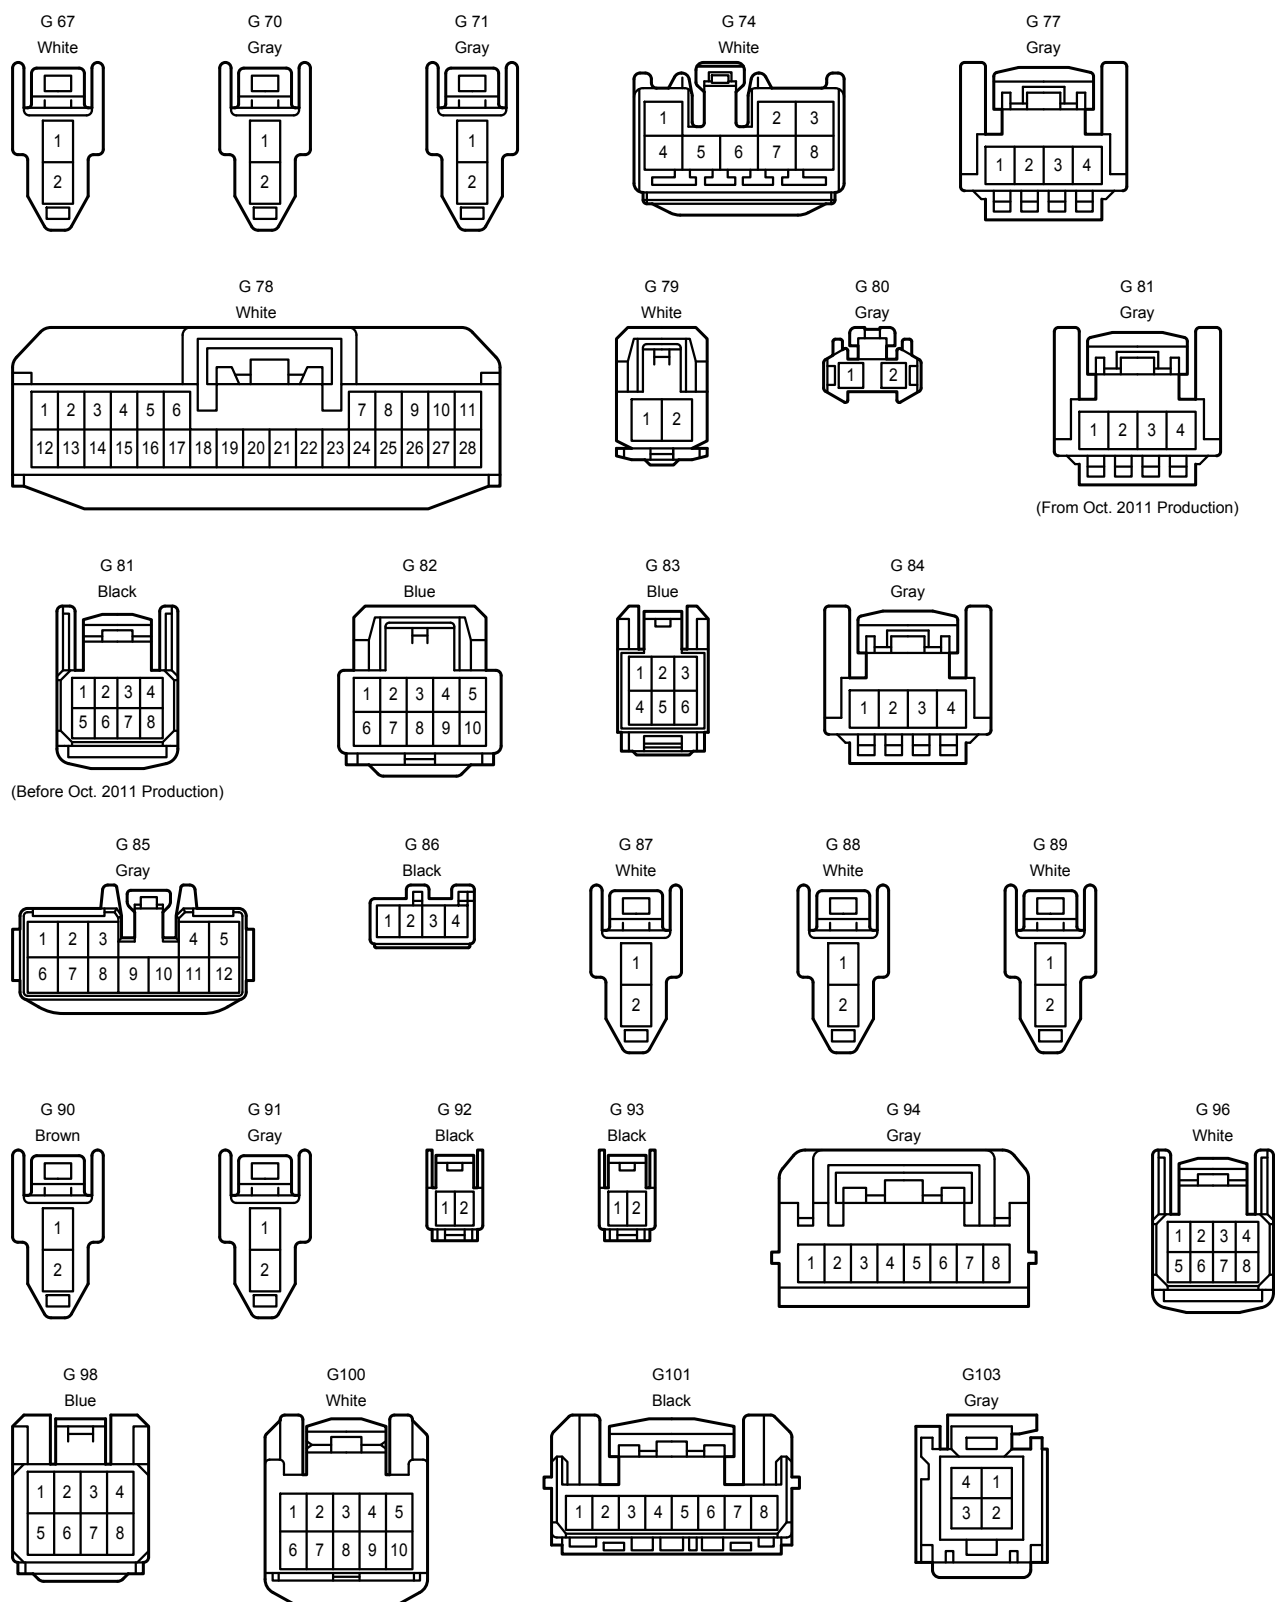


G104

Black



G105

Black

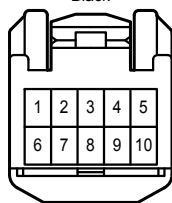

G106

White

