

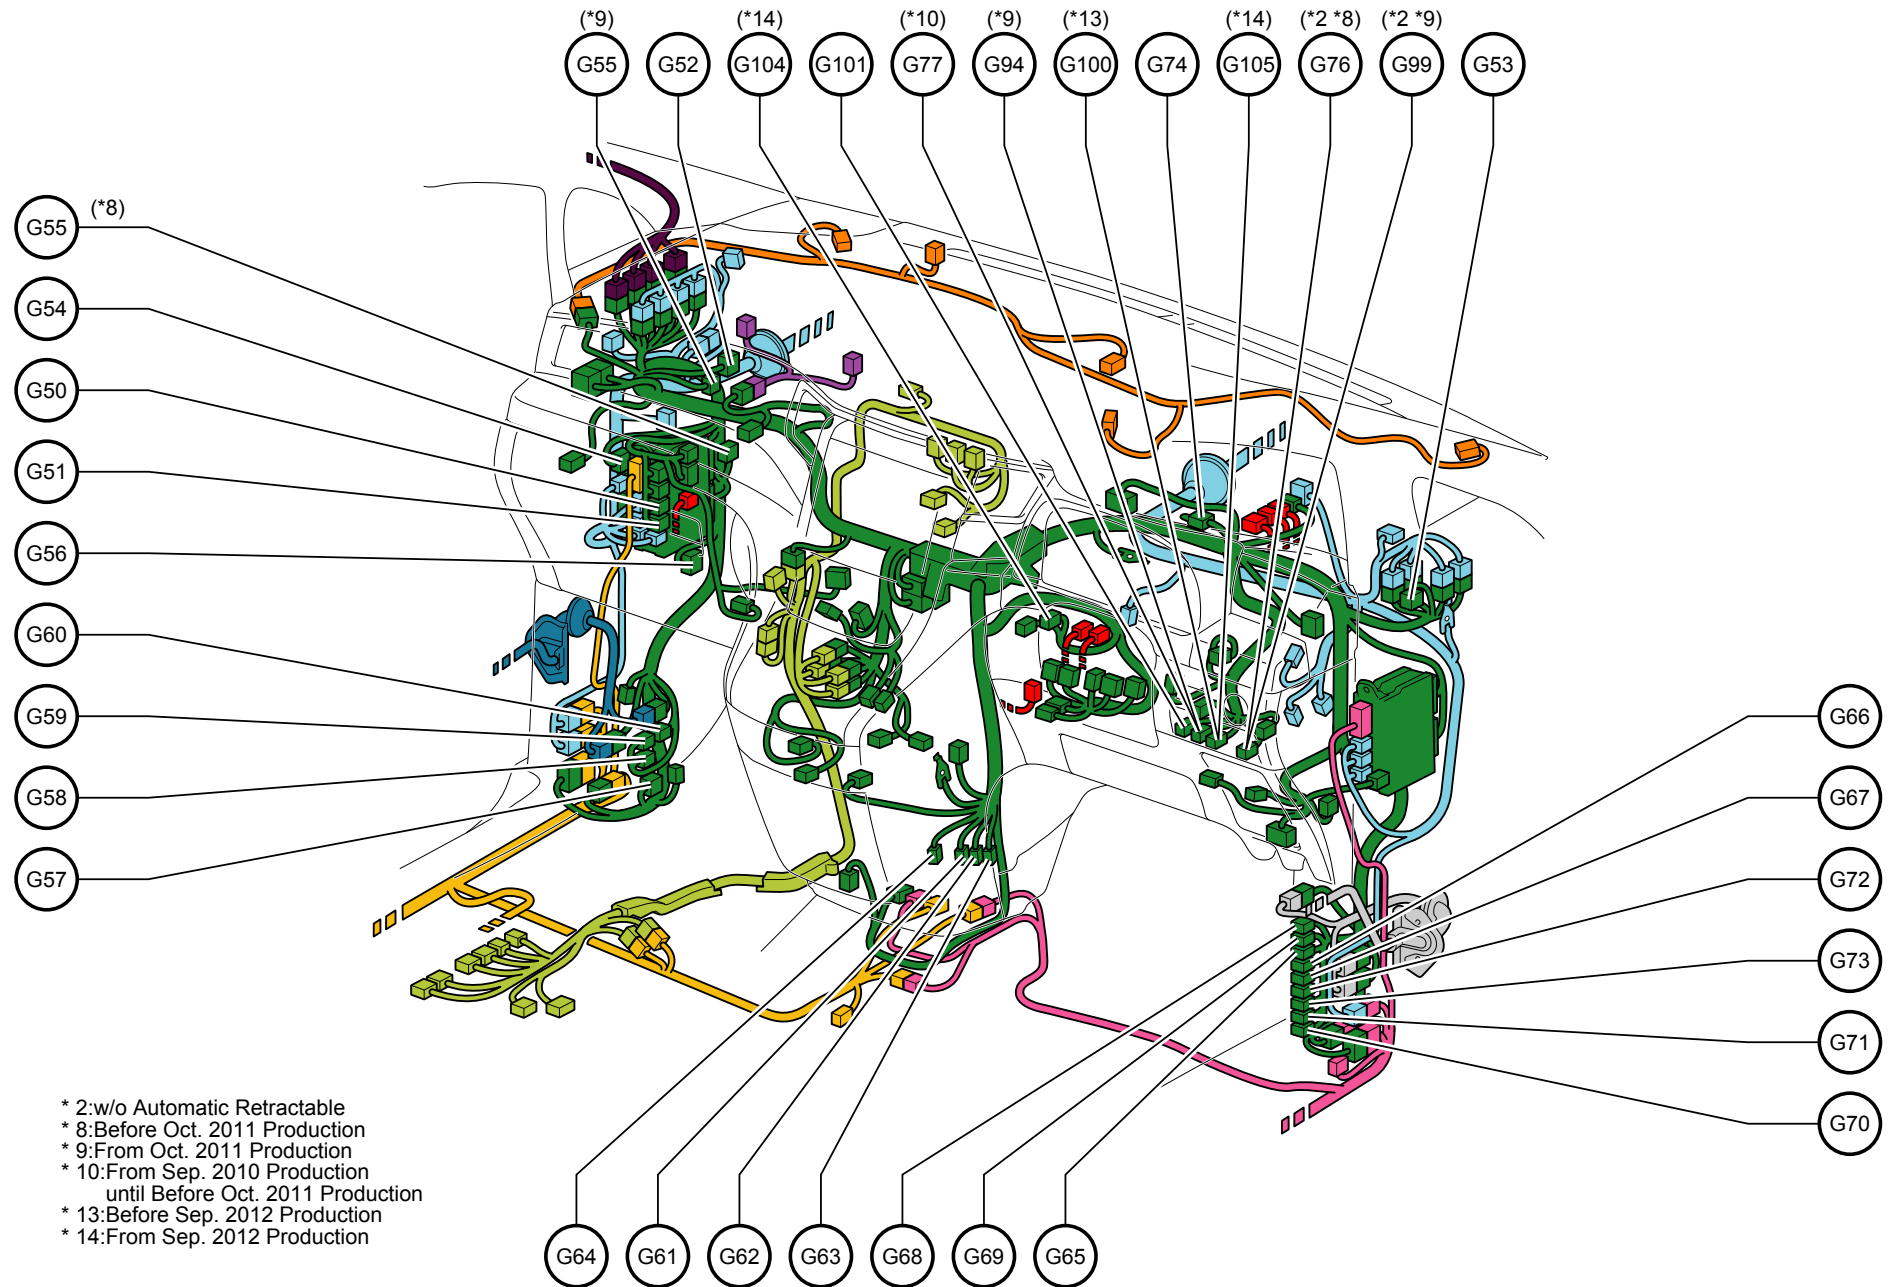
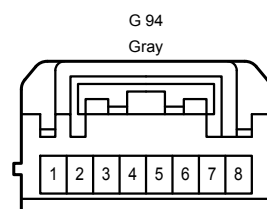
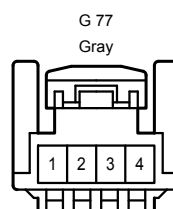
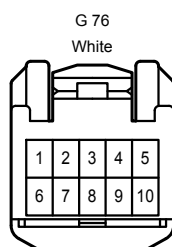
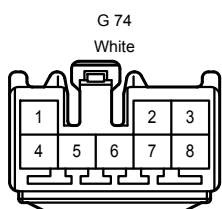
 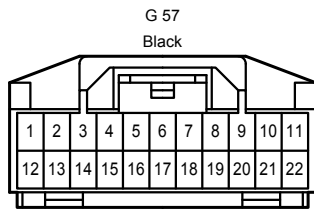
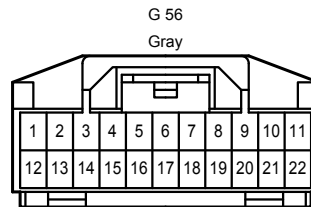

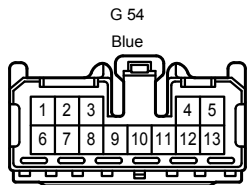
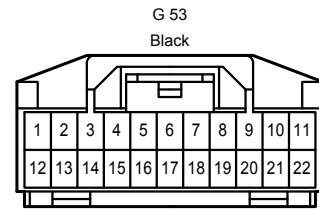
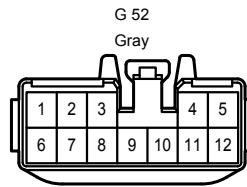


Position of Parts in Instrument Panel <RHD>

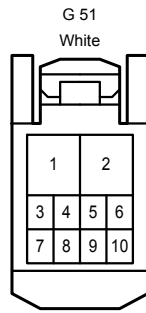


G 50	Main Body ECU
G 51	Main Body ECU
G 52	Junction Connector
G 53	Junction Connector
G 54	Junction Connector
G 55	Junction Connector
G 56	Junction Connector
G 57	Junction Connector
G 58	Junction Connector
G 59	Junction Connector
G 60	Junction Connector
G 61	Junction Connector
G 62	Junction Connector
G 63	Junction Connector
G 64	Junction Connector
G 65	Junction Connector
G 66	Junction Connector
G 67	Junction Connector
G 68	Junction Connector
G 69	Junction Connector
G 70	Junction Connector
G 71	Junction Connector
G 72	Junction Connector
G 73	Junction Connector
G 74	Junction Connector
G 76	No.1 Power Slide Door Control Switch
G 77	Headlight Swivel Main Switch
G 94	Headlight Swivel Main Switch
G 99	No.1 Power Slide Door Control Switch
G 100	Heater Switch Assembly
G 101	Air Purifier Switch Assembly
G 104	Power Slide Door Main Switch
G 105	Heater Switch Assembly


Position of Parts in Instrument Panel <RHD>

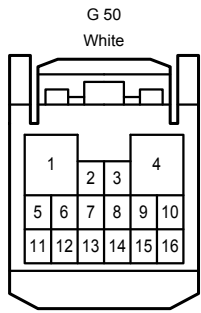


G 99
Black

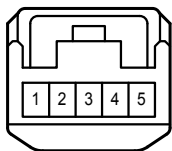


G100
White

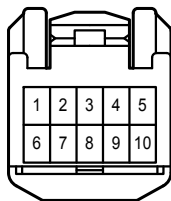

G101
Black

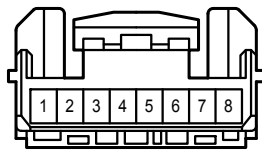

G104
Black

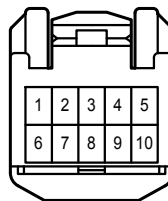

G105
Black

