


Position of Parts in Seat <RHD Rear No.1 Seat w/ Climate Control Seat>

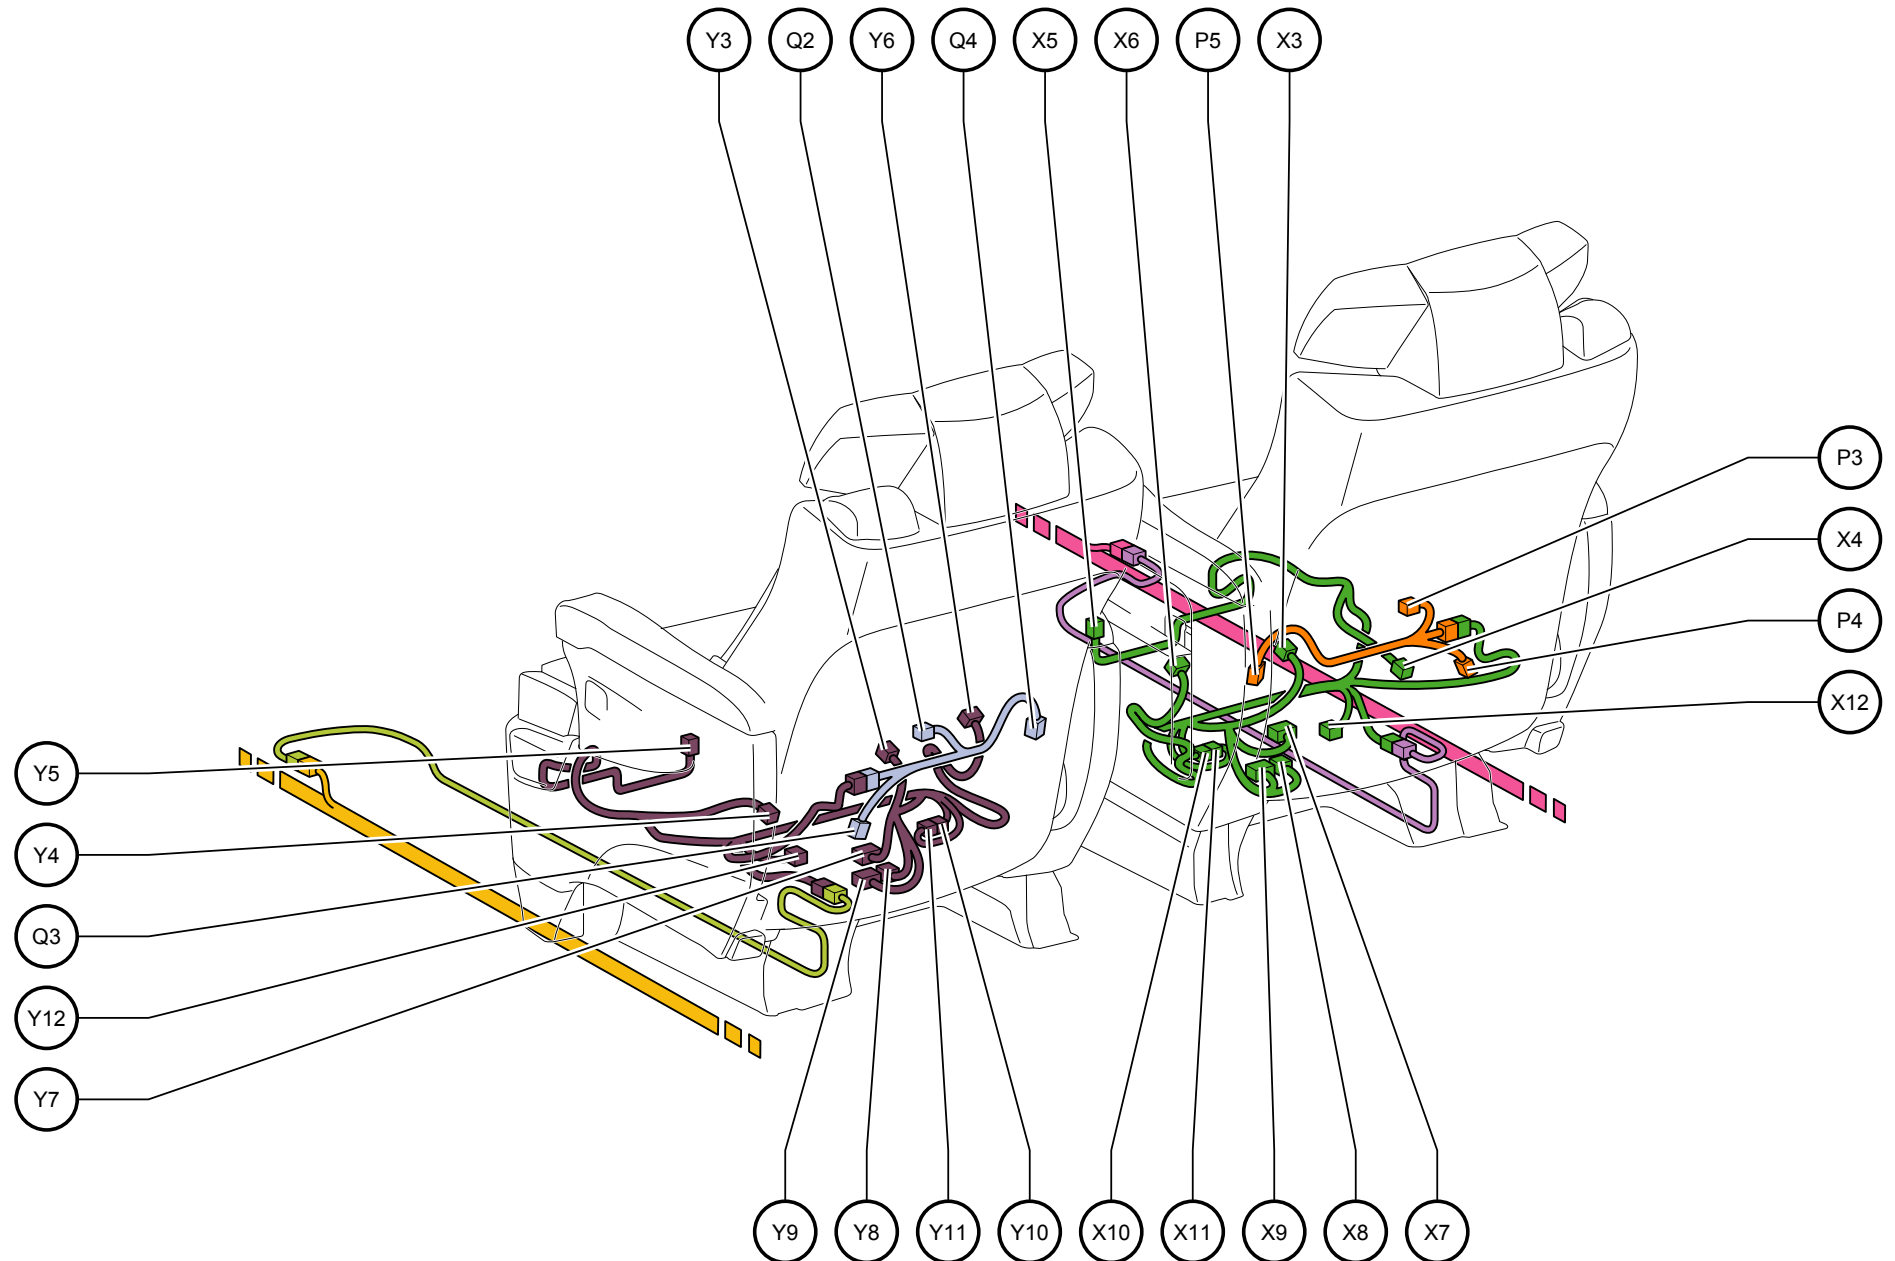

Position of Parts in Seat <RHD Rear No.1 Seat w/ Climate Control Seat>






















P 3 Seat Back Climate Control Blower RH
P 4 Rear Seat Heater RH (Seat Back)
P 5 Power Seat Reclining Motor Assembly RH (Power Lift Motor Assembly RH)

Q 2 Rear Seat Back Climate Control Blower LH
Q 3 Rear Seat Heater LH (Seat Back)
Q 4 Power Seat Reclining Motor Assembly LH (Power Lift Motor Assembly LH)

X 3 Rear Seat Cushion Climate Control Blower RH
X 4 Rear Seat Heater RH (Seat Cushion)
X 5 Ottoman Motor Assembly RH (Power Lift Motor Assembly RH)
X 6 Rear Power Seat Switch RH
X 7 Rear Seat Climate Control ECU RH
X 8 Position Control ECU Assembly RH
X 9 Position Control ECU Assembly RH
X 10 Junction Connector
X 11 Junction Connector
X 12 Fuse Block RH

Y 3 Rear Seat Cushion Climate Control Blower LH
Y 4 Rear Seat Heater LH (Seat Cushion)
Y 5 Ottoman Motor Assembly LH (Power Lift Motor Assembly LH)
Y 6 Rear Power Seat Switch LH
Y 7 Rear Seat Climate Control ECU LH
Y 8 Position Control ECU Assembly LH
Y 9 Position Control ECU Assembly LH
Y 10 Junction Connector
Y 11 Junction Connector
Y 12 Fuse Block LH

Position of Parts in Seat <RHD Rear No.1 Seat w/ Climate Control Seat>

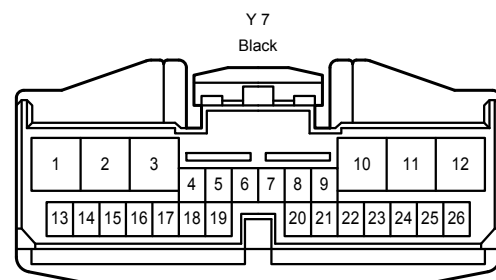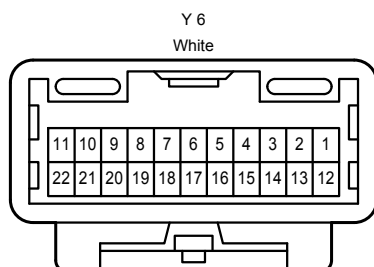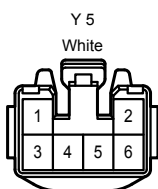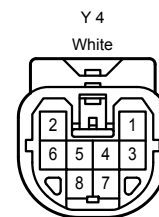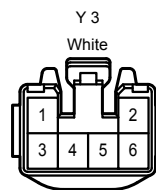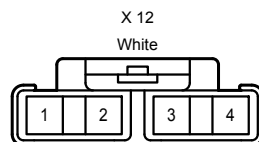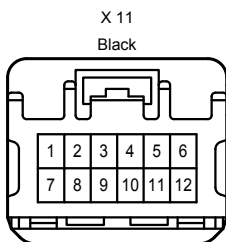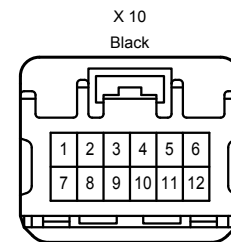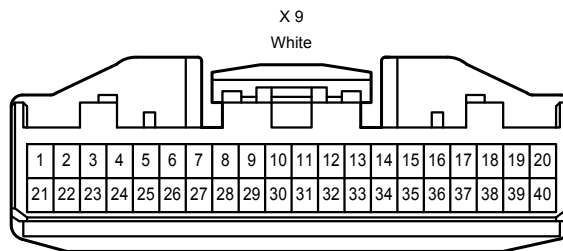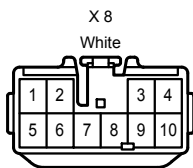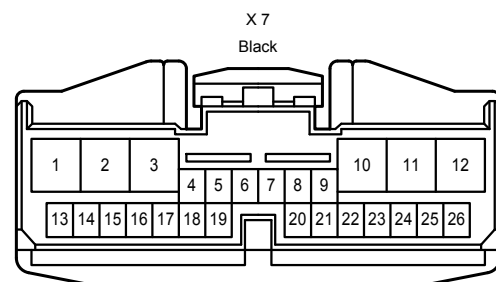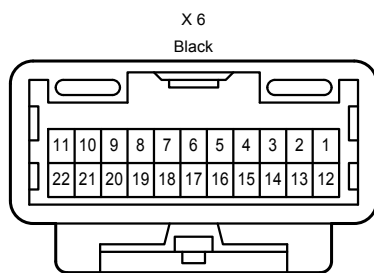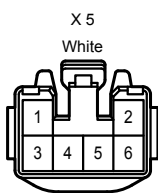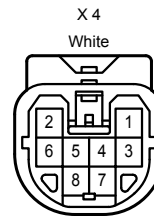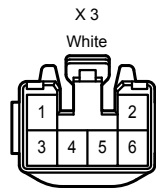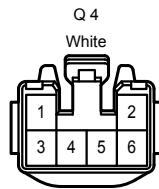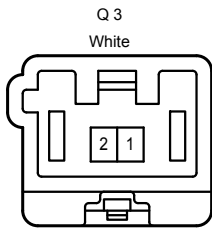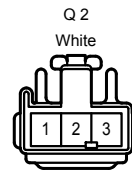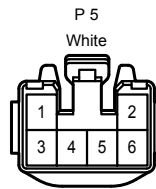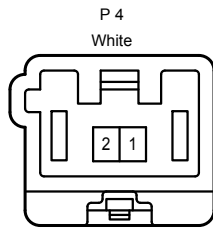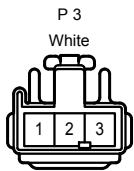

Position of Parts in Seat <RHD Rear No.1 Seat w/ Climate Control Seat>

