

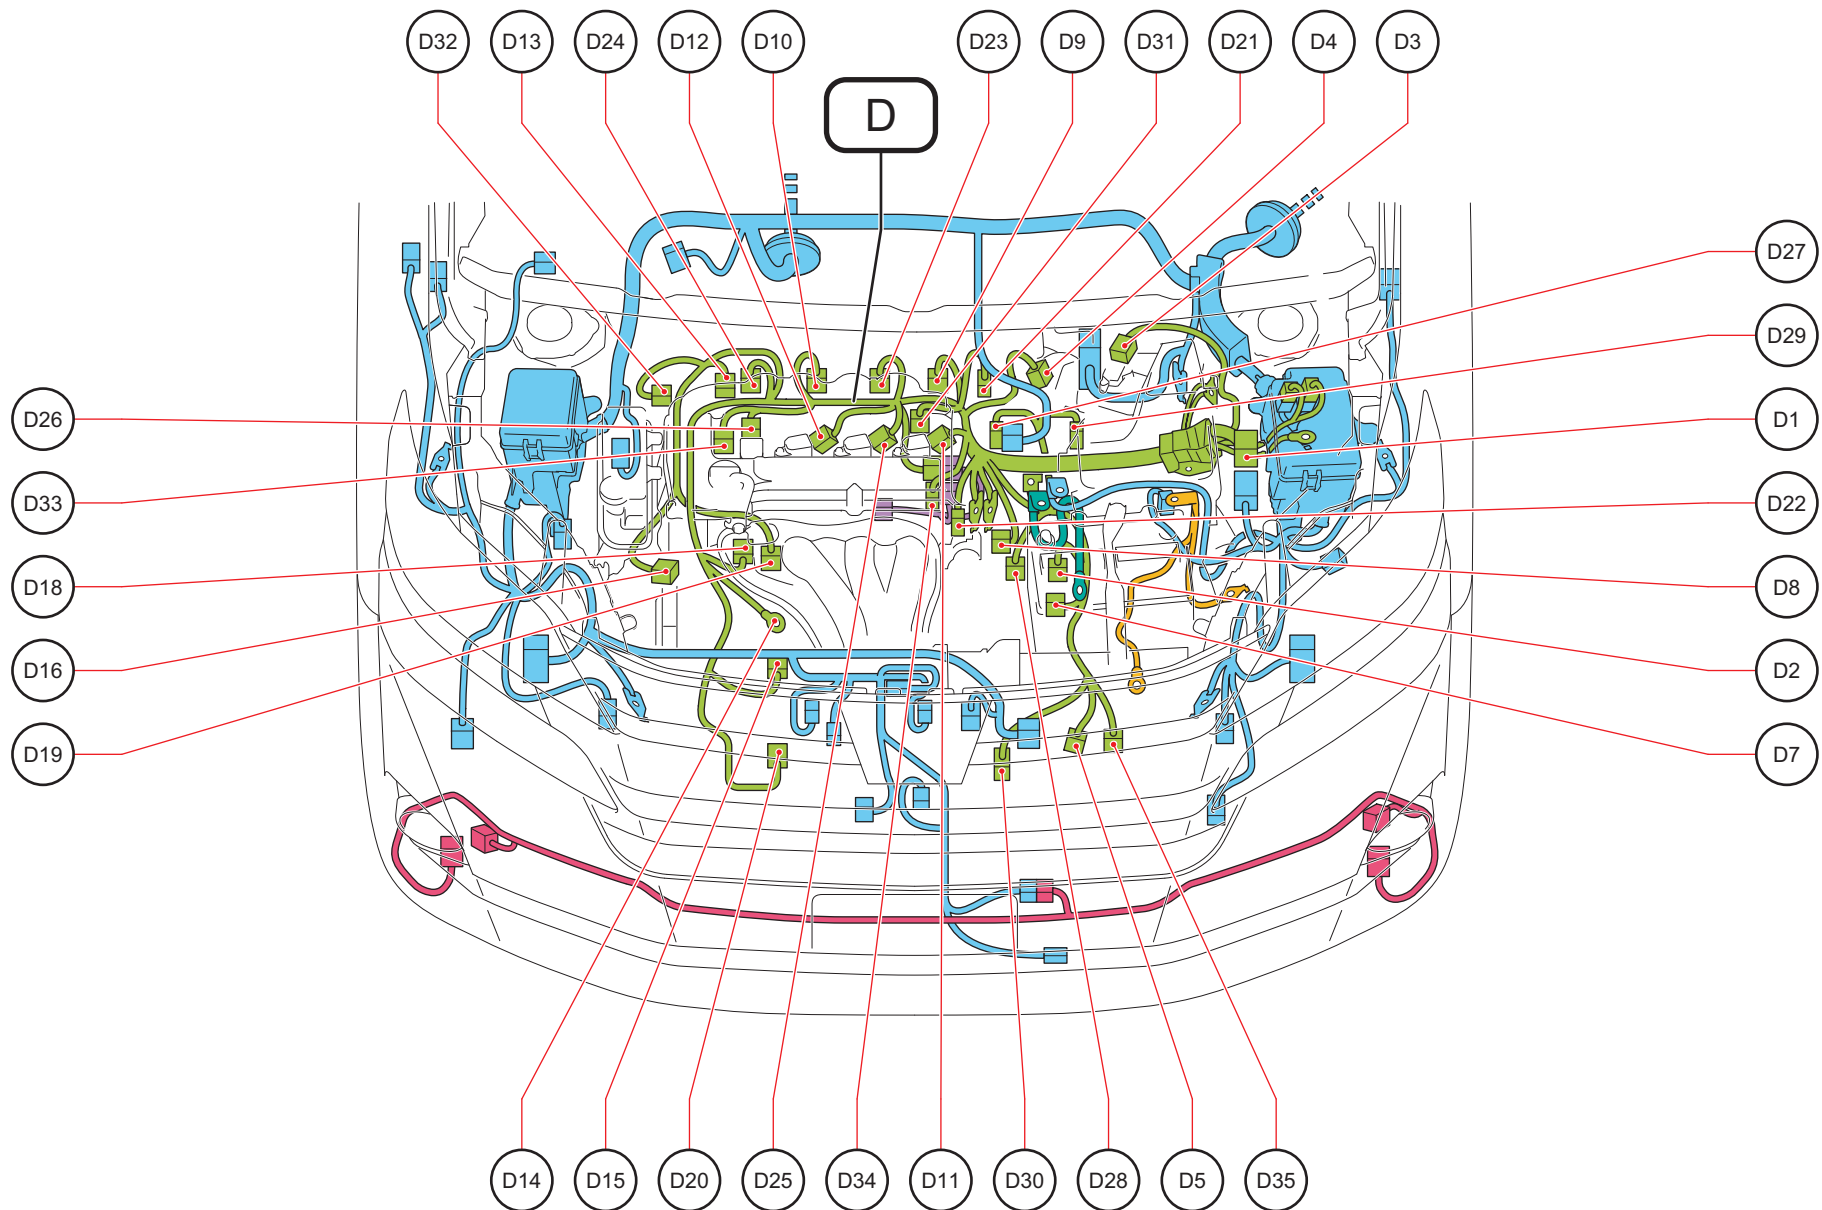
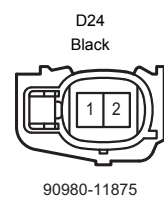
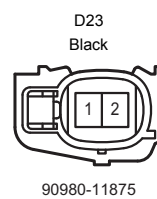
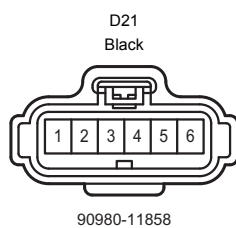
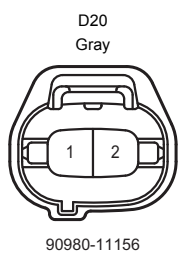
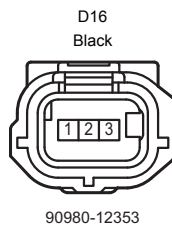
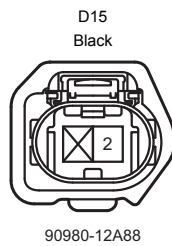
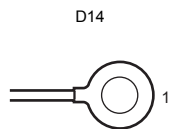
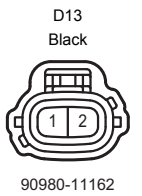
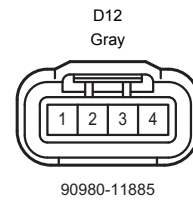
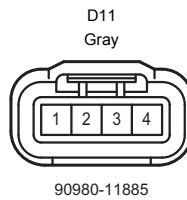
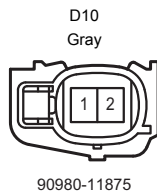
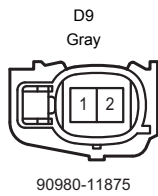
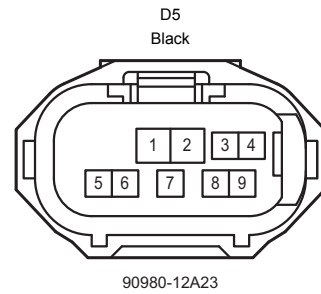
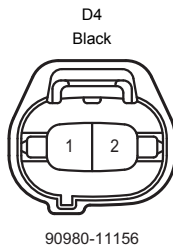
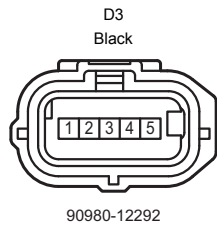


Position of Parts in Engine Compartment (RHD VELLFIRE 2AR-FE : Before Jan. 2018 Production)

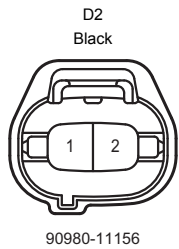

- D 1 ECM
- D 2 Transmission Revolution Sensor (NIN)
- D 3 Mass Air Flow Meter Sub-Assembly
- D 4 Purge VSV
- D 5 Park/Neutral Position Switch Assembly
- D 7 Starter Assembly
- D 8 Engine Coolant Temperature Sensor
- D 9 Fuel Injector Assembly No. 4
- D 10 Fuel Injector Assembly No. 2
- D 11 Ignition Coil Assembly No. 4
- D 12 Ignition Coil Assembly No. 2
- D 13 Camshaft Timing Oil Control Valve Assembly
- D 14 Generator Assembly
- D 15 Generator Assembly
- D 16 Crankshaft Position Sensor
- D 18 Engine Oil Pressure Switch Assembly
- D 19 Heated Oxygen Sensor
- D 20 Compressor Assembly with Pulley
- D 21 Throttle Body with Motor Assembly
- D 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- D 23 Fuel Injector Assembly No. 3
- D 24 Fuel Injector Assembly No. 1
- D 25 Ignition Coil Assembly No. 3
- D 26 Ignition Coil Assembly No. 1
- D 27 Transmission Revolution Sensor (NOUT)
- D 28 Transmission Revolution Sensor (NT)
- D 29 Oil Pressure Sensor
- D 30 Oil Pump Assembly with Motor (Continuously Variable Transaxle Assembly)
- D 31 Camshaft Position Sensor (Intake Side)
- D 32 Vacuum Switching Valve Assembly (ACIS)
- D 33 Camshaft Timing Oil Control Valve Assembly
- D 34 Camshaft Position Sensor (Exhaust Side)
- D 35 Electronic Control Transmission Solenoid (Transmission Wire)

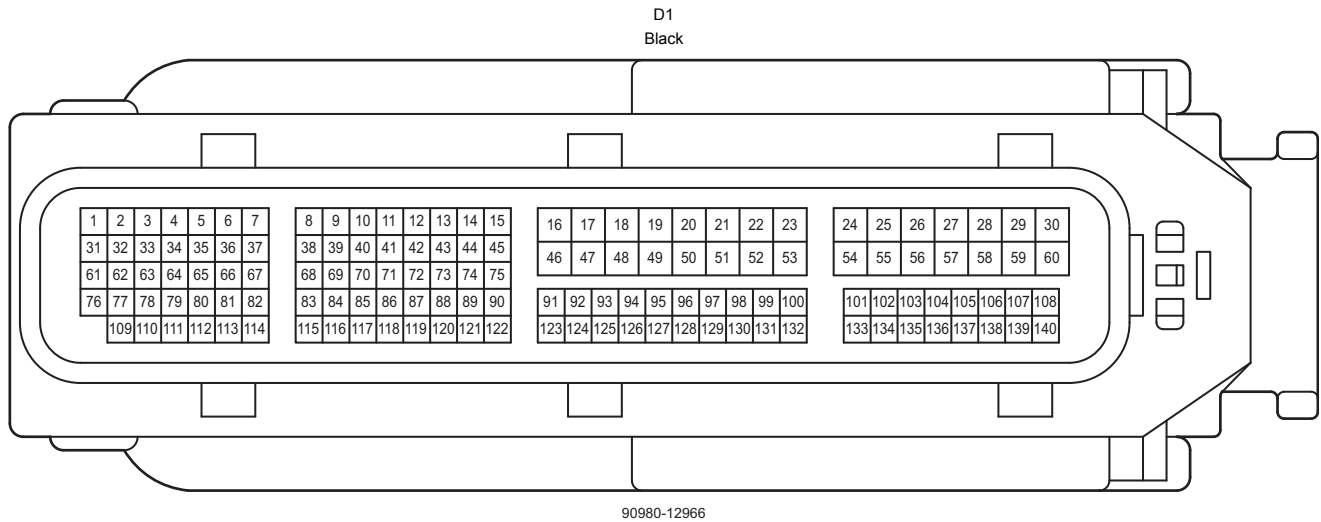

Position of Parts in Engine Compartment (RHD VELLFIRE 2AR-FE : Before Jan. 2018 Production)

