


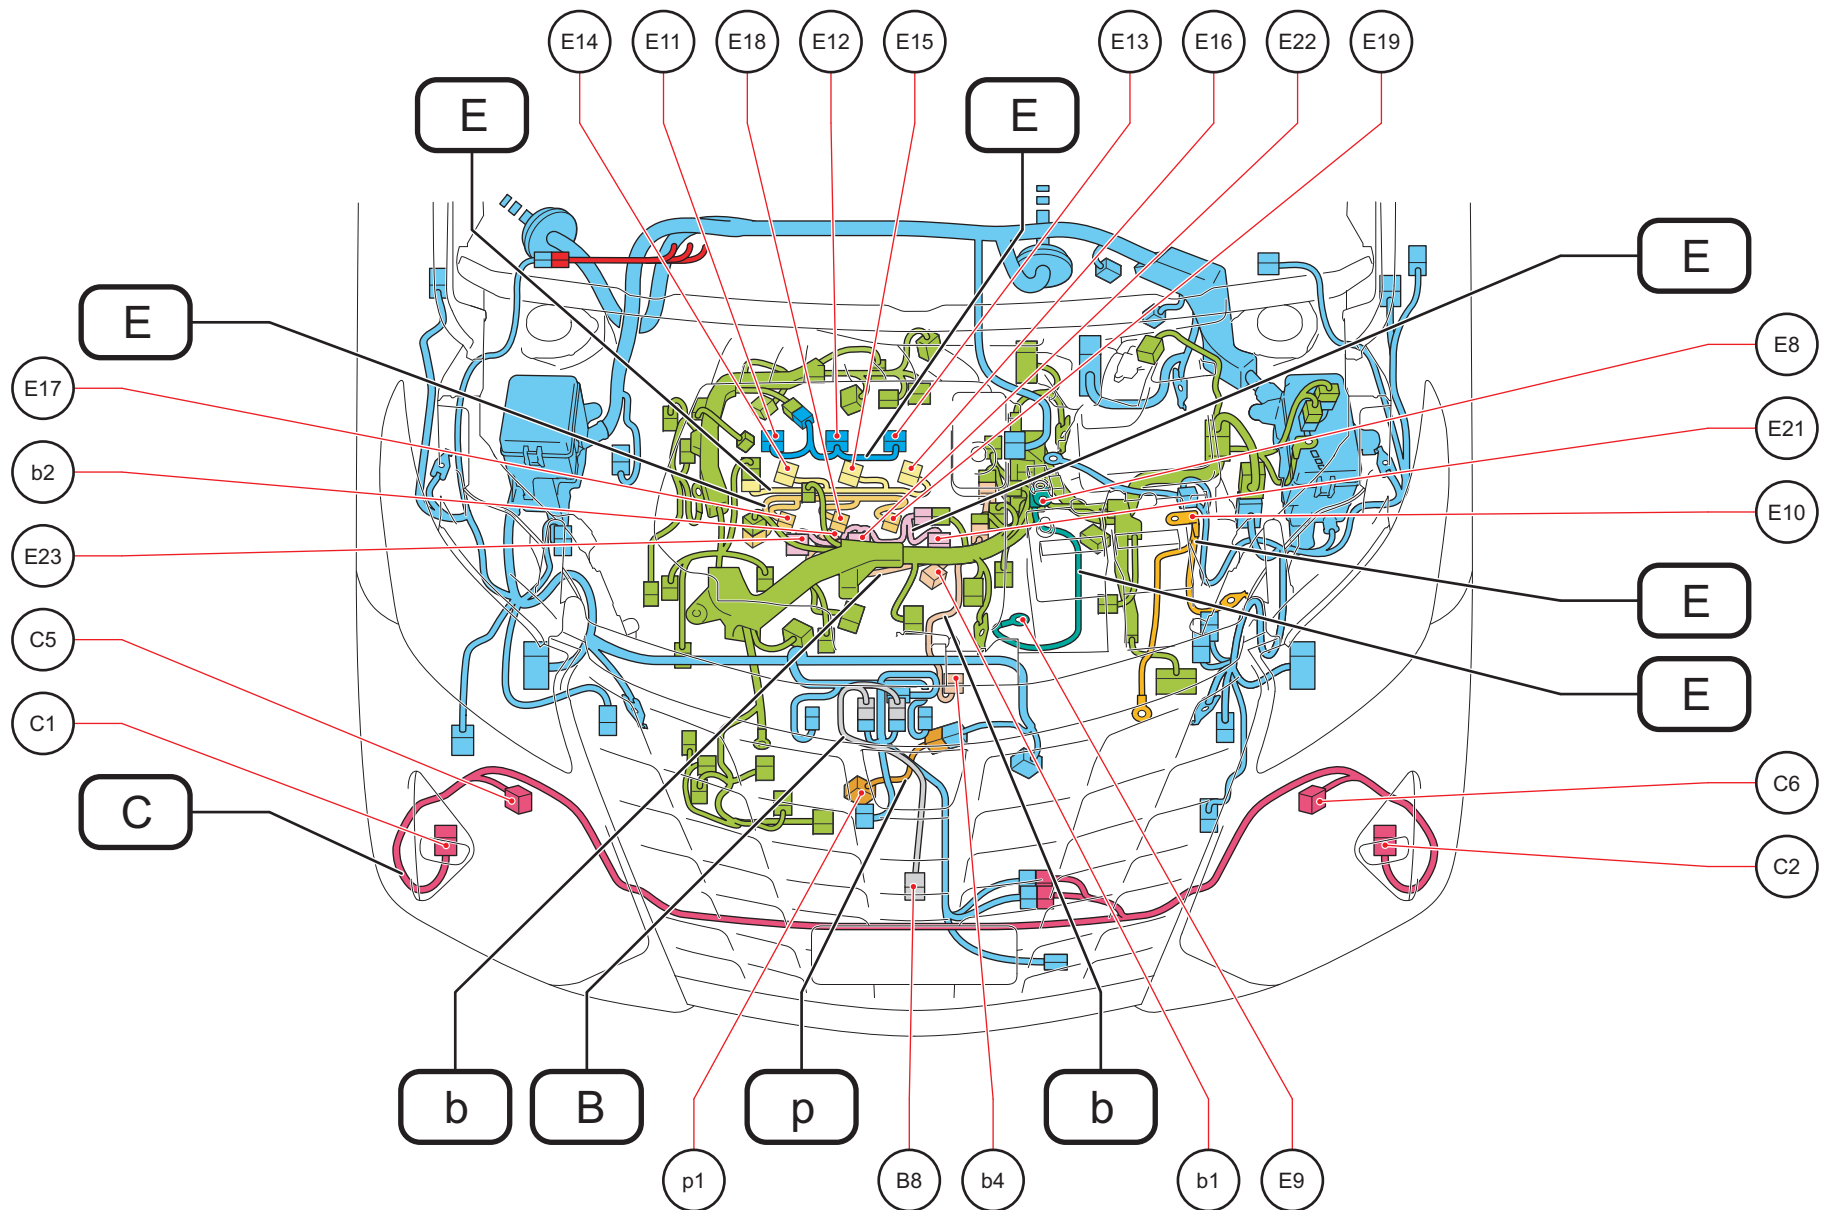

- B 8 Front Television Camera Assembly
- C 1 Fog Light Assembly RH
- C 2 Fog Light Assembly LH
- C 5 No. 1 Ultrasonic Sensor (Front Corner Sensor RH)
- C 6 No. 1 Ultrasonic Sensor (Front Corner Sensor LH)
- E 8 Battery
- E 9 Starter Assembly
- E 10 Battery
- E 11 Fuel Injector Assembly No.1 (for Port Injection)
- E 12 Fuel Injector Assembly No.3 (for Port Injection)
- E 13 Fuel Injector Assembly No.5 (for Port Injection)
- E 14 Fuel Injector Assembly No.1 (for Direct Injection)
- E 15 Fuel Injector Assembly No.3 (for Direct Injection)
- E 16 Fuel Injector Assembly No.5 (for Direct Injection)
- E 17 Fuel Injector Assembly No.2 (for Direct Injection)
- E 18 Fuel Injector Assembly No.4 (for Direct Injection)
- E 19 Fuel Injector Assembly No.6 (for Direct Injection)
- E 21 Fuel Injector Assembly No.6 (for Port Injection)
- E 22 Fuel Injector Assembly No.4 (for Port Injection)
- E 23 Fuel Injector Assembly No.2 (for Port Injection)
- b 1 Knock Control Sensor
- b 2 Knock Control Sensor
- b 4 Crank Position Sensor
- p 1 No. 2 Cooling Fan ECU

