


Position of Parts in Seat (RHD Front Seat w/o Power Seat)

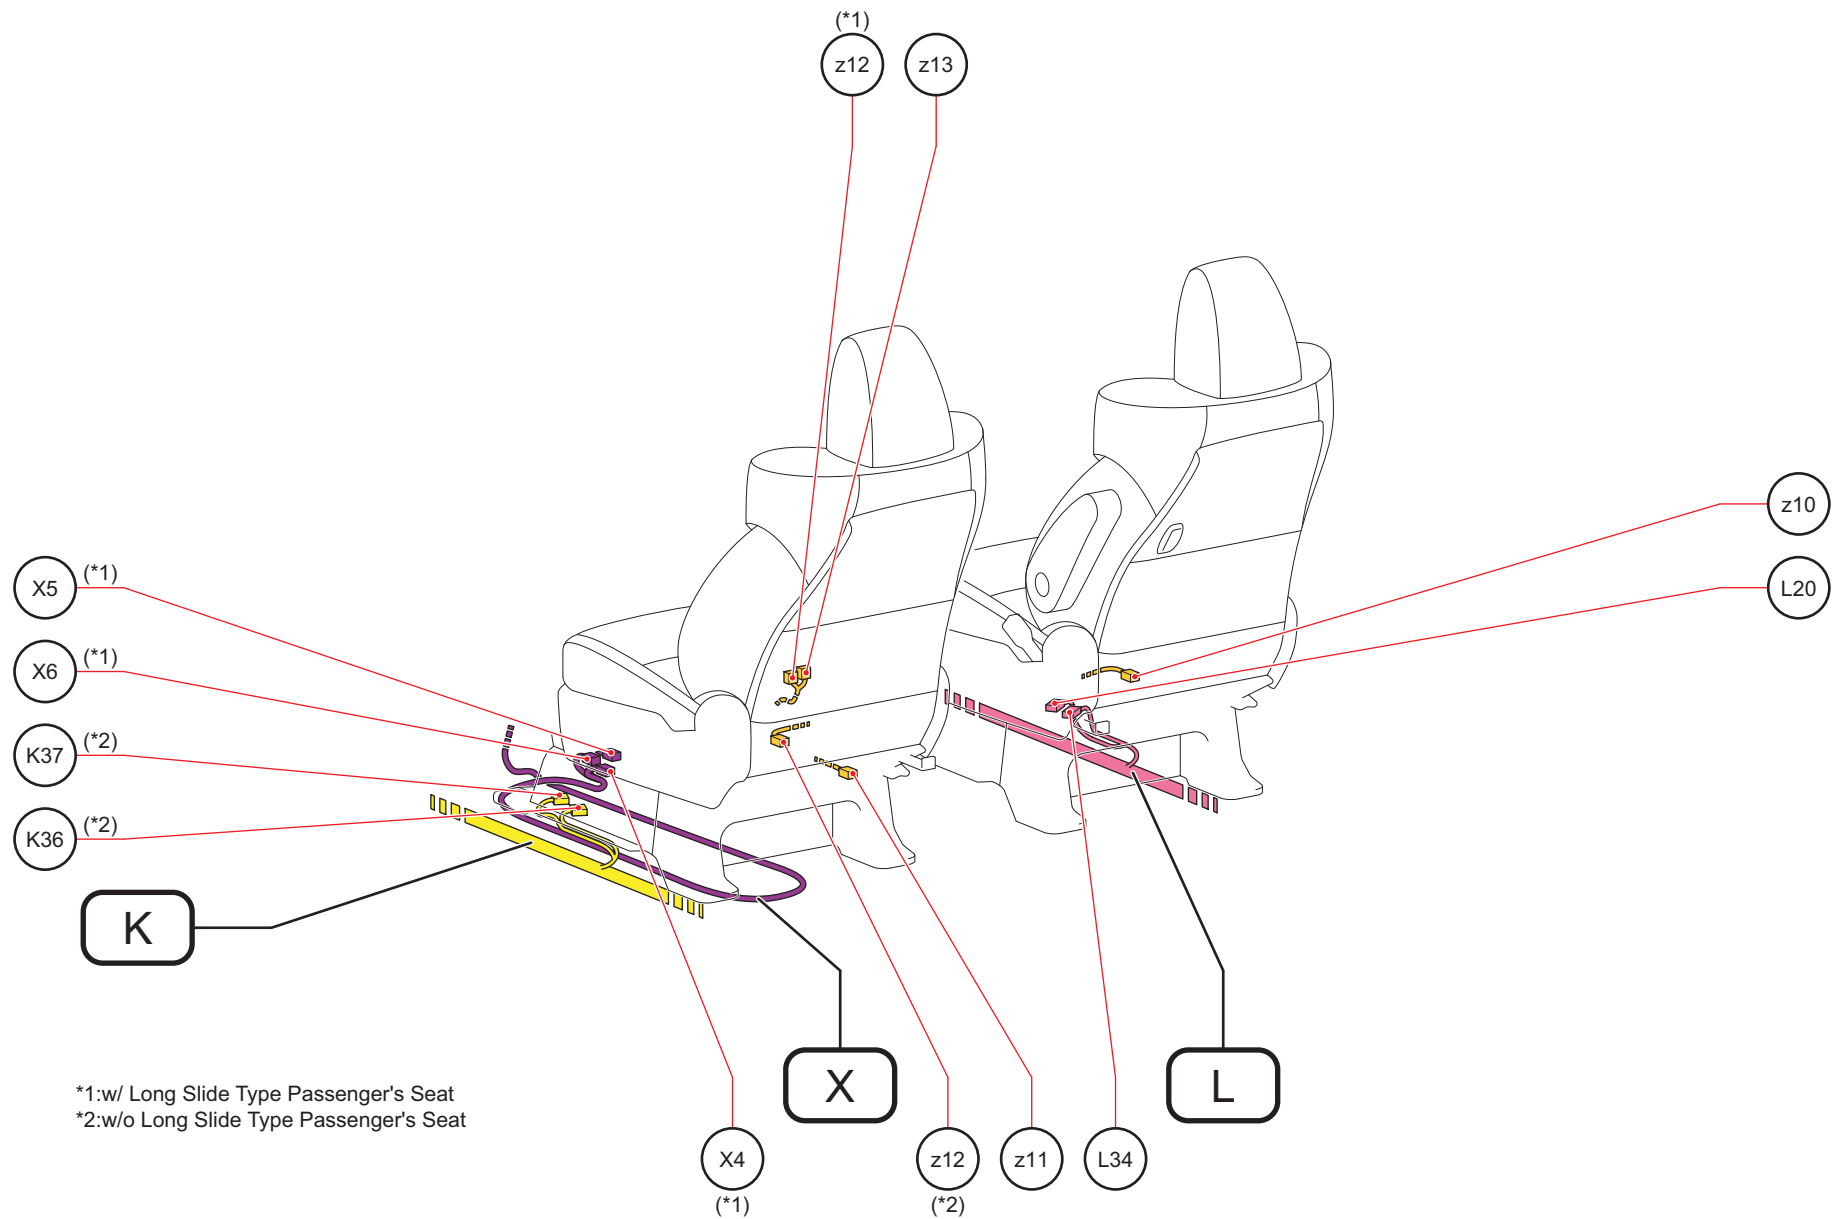

Position of Parts in Seat (RHD Front Seat w/o Power Seat)

- K 36 Front Seat Inner Belt Assembly LH
- K 37 Front Seat Inner Belt Assembly LH
- L 20 Front Seat Inner Belt Assembly RH
- L 34 Front Seat Inner Belt Assembly RH
- X 4 Front Seat Inner Belt Assembly LH
- X 5 Front Seat Inner Belt Assembly LH
- X 6 Front Seat Inner Belt Assembly LH
- z 10 Front Seat Airbag Assembly RH, Front Seat Inner Belt Assembly RH
- z 11 Occupant Detection Sensor (Separate Type Front Seat Cushion Pad LH), Front Seat Inner Belt Assembly LH
- z 12 Front Seat Airbag Assembly LH, Front Seat Inner Belt Assembly LH
- z 13 Front Seat Outer Belt Assembly LH, Front Seat Inner Belt Assembly LH

Position of Parts in Seat (RHD Front Seat w/o Power Seat)

