

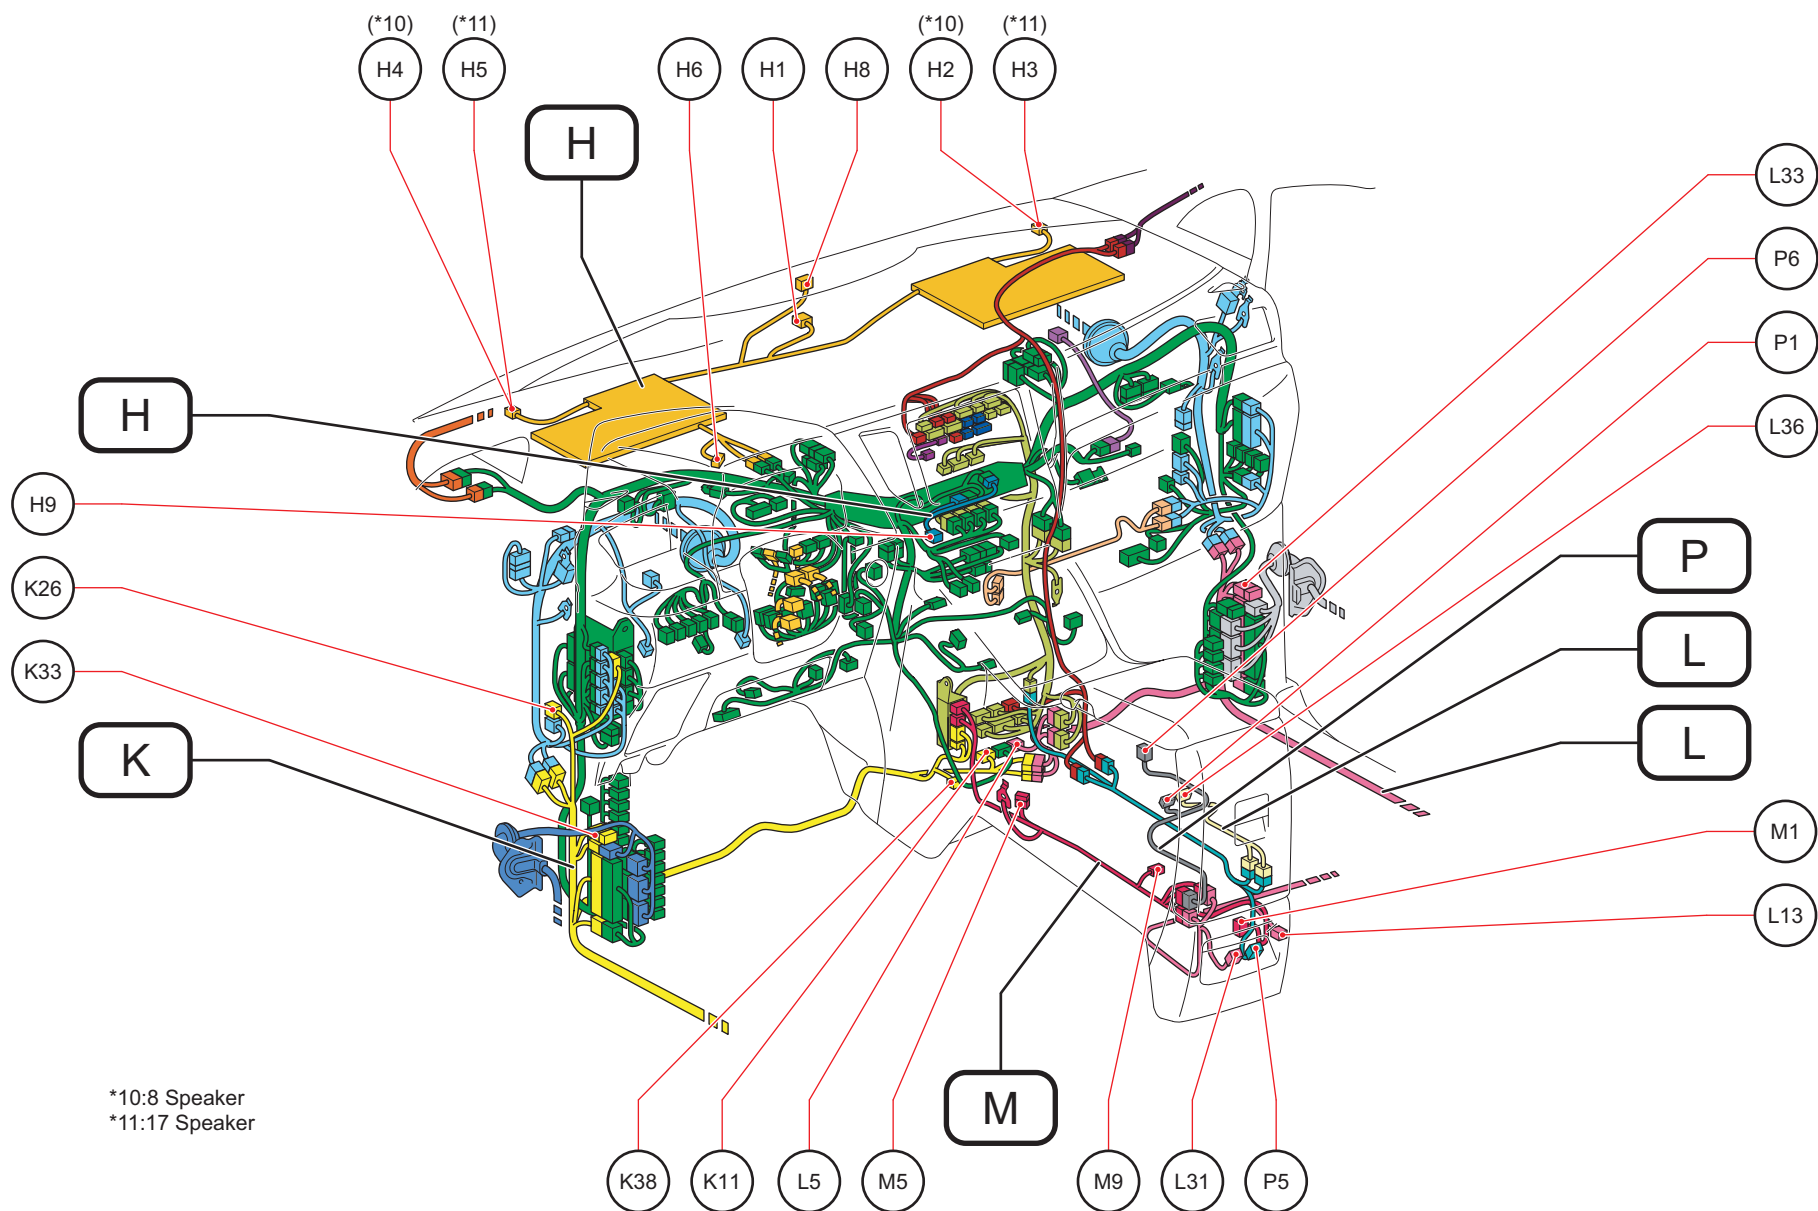
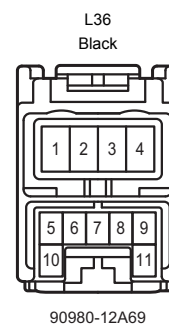
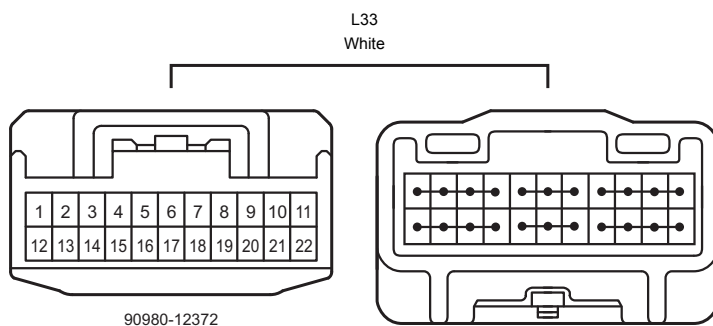
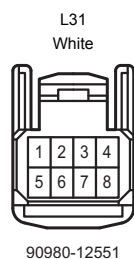
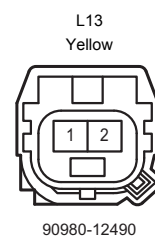
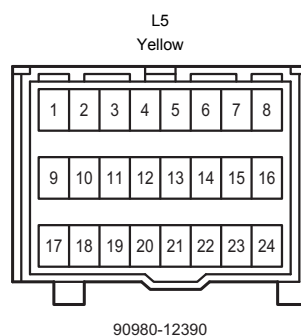
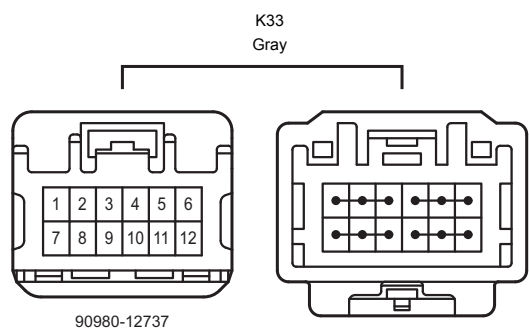
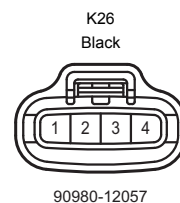
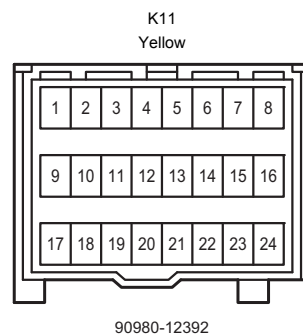
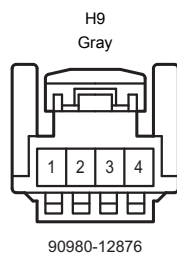
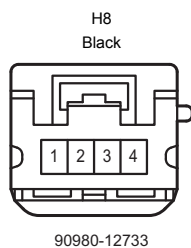
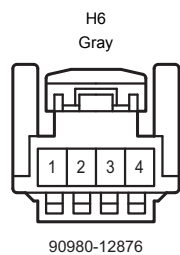
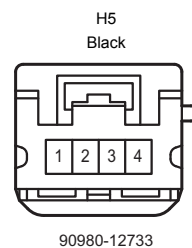
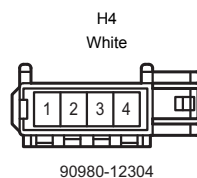
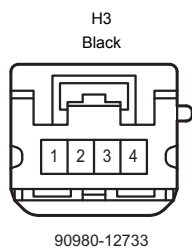


Position of Parts in Instrument Panel (LHD : From Jan. 2018 Production)

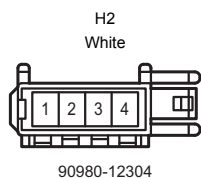

H	1	Automatic Light Control Sensor
H	2	Front No. 2 Speaker Assembly RH
H	3	Front No. 2 Speaker Assembly RH
H	4	Front No. 2 Speaker Assembly LH
H	5	Front No. 2 Speaker Assembly LH
H	6	No. 1 Ion Generator Sub-Assembly
H	8	Front No. 3 Speaker Assembly
H	9	Hazard Warning Signal Switch Assembly
K	11	Airbag ECU Assembly
K	26	Fuel Pump Control ECU Assembly
K	33	No. 22 Junction Connector
K	38	Rear No. 2 Oxygen Sensor (Bank 1 Sensor 2)
L	5	Airbag ECU Assembly
L	13	Front Floor Side Airbag Sensor
L	31	Video(Video Adapter) Terminal
L	33	No. 26 Junction Connector
L	36	No. 1 Stereo Jack Adapter Assembly
M	1	Telematics Transceiver
M	5	No. 28 Junction Connector
M	9	No. 1 Indoor Electrical Key Antenna Assembly
P	1	No. 1 Power Outlet Socket Assembly
P	5	HDMI Terminal
P	6	Refreshing Seat Switch

Position of Parts in Instrument Panel (LHD : From Jan. 2018 Production)

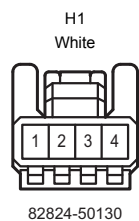

Position of Parts in Instrument Panel (LHD : From Jan. 2018 Production)

