



Position of Parts in Seat (Rear No.1 Seat w/o Seat Position Memory)

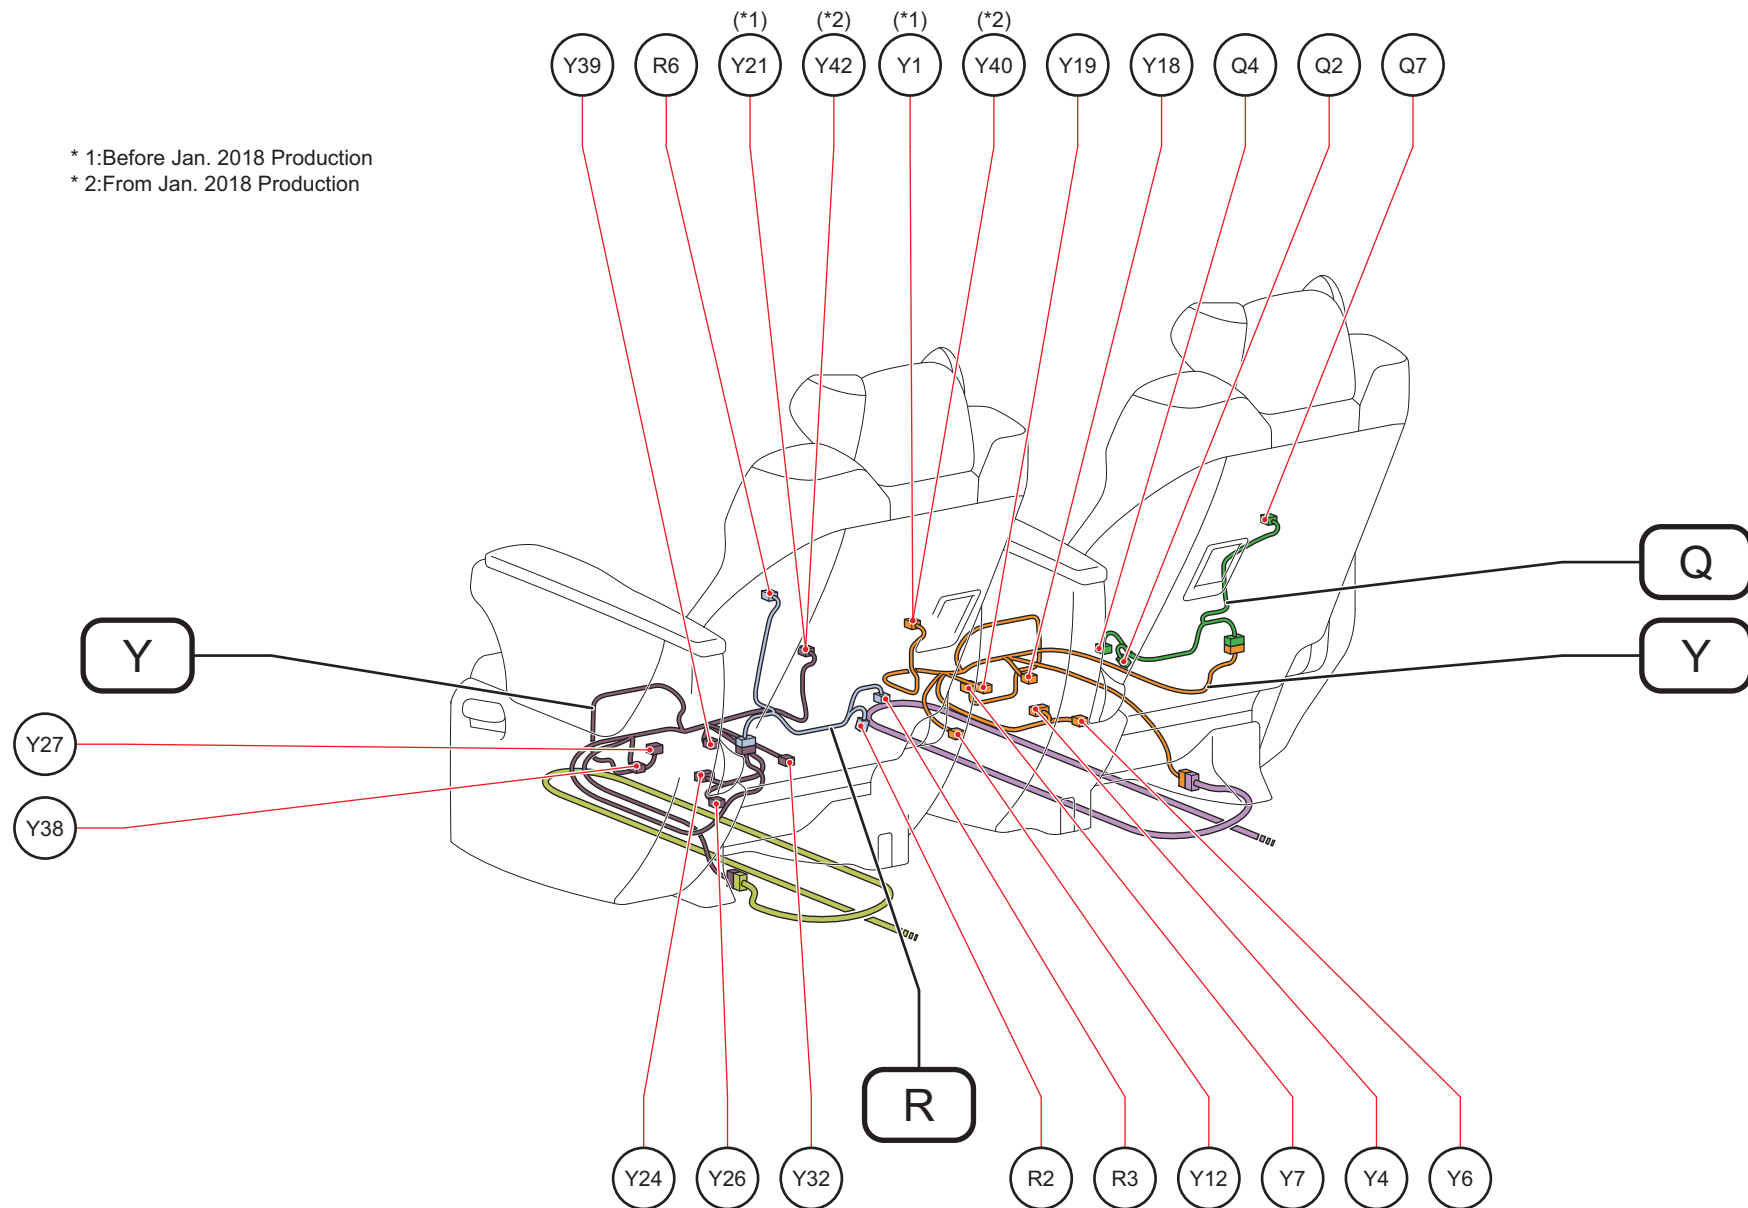


- Q 2 Seat Heater Assembly (Seat Back RH)
- Q 4 Reclining Motor Assembly (No. 1 Seat Back Frame Sub-Assembly RH)
- Q 7 No. 1 Seat 3 Point Type Belt Assembly RH
- R 2 Seat Heater Assembly (Seat Back LH)
- R 3 Reclining Motor Assembly (No. 1 Seat Back Frame Sub-Assembly LH)
- R 6 No. 1 Seat 3 Point Type Belt Assembly LH
- Y 1 Rear Power Seat Switch RH (Armrest)
- Y 4 Rear Seat Climate Control ECU RH
- Y 6 Seat Heater Assembly RH
- Y 7 Ottoman Motor (Rear Lower Inner Reclining Adjuster Arm Sub-Assembly RH)
- Y 12 Rear No. 1 Seat Inner Belt Assembly RH
- Y 18 No. 34 Junction Connector
- Y 19 No. 35 Junction Connector
- Y 21 Rear Power Seat Switch LH (Armrest)
- Y 24 Rear Seat Climate Control ECU LH
- Y 26 Seat Heater Assembly LH
- Y 27 Ottoman Motor (Rear Lower Inner Reclining Adjuster Arm Sub-Assembly LH)
- Y 32 Rear No. 1 Seat Inner Belt Assembly LH
- Y 38 No. 36 Junction Connector
- Y 39 No. 37 Junction Connector
- Y 40 Rear Power Seat Switch RH (Armrest)
- Y 42 Rear Power Seat Switch LH (Armrest)


Position of Parts in Seat (Rear No.1 Seat w/o Seat Position Memory)

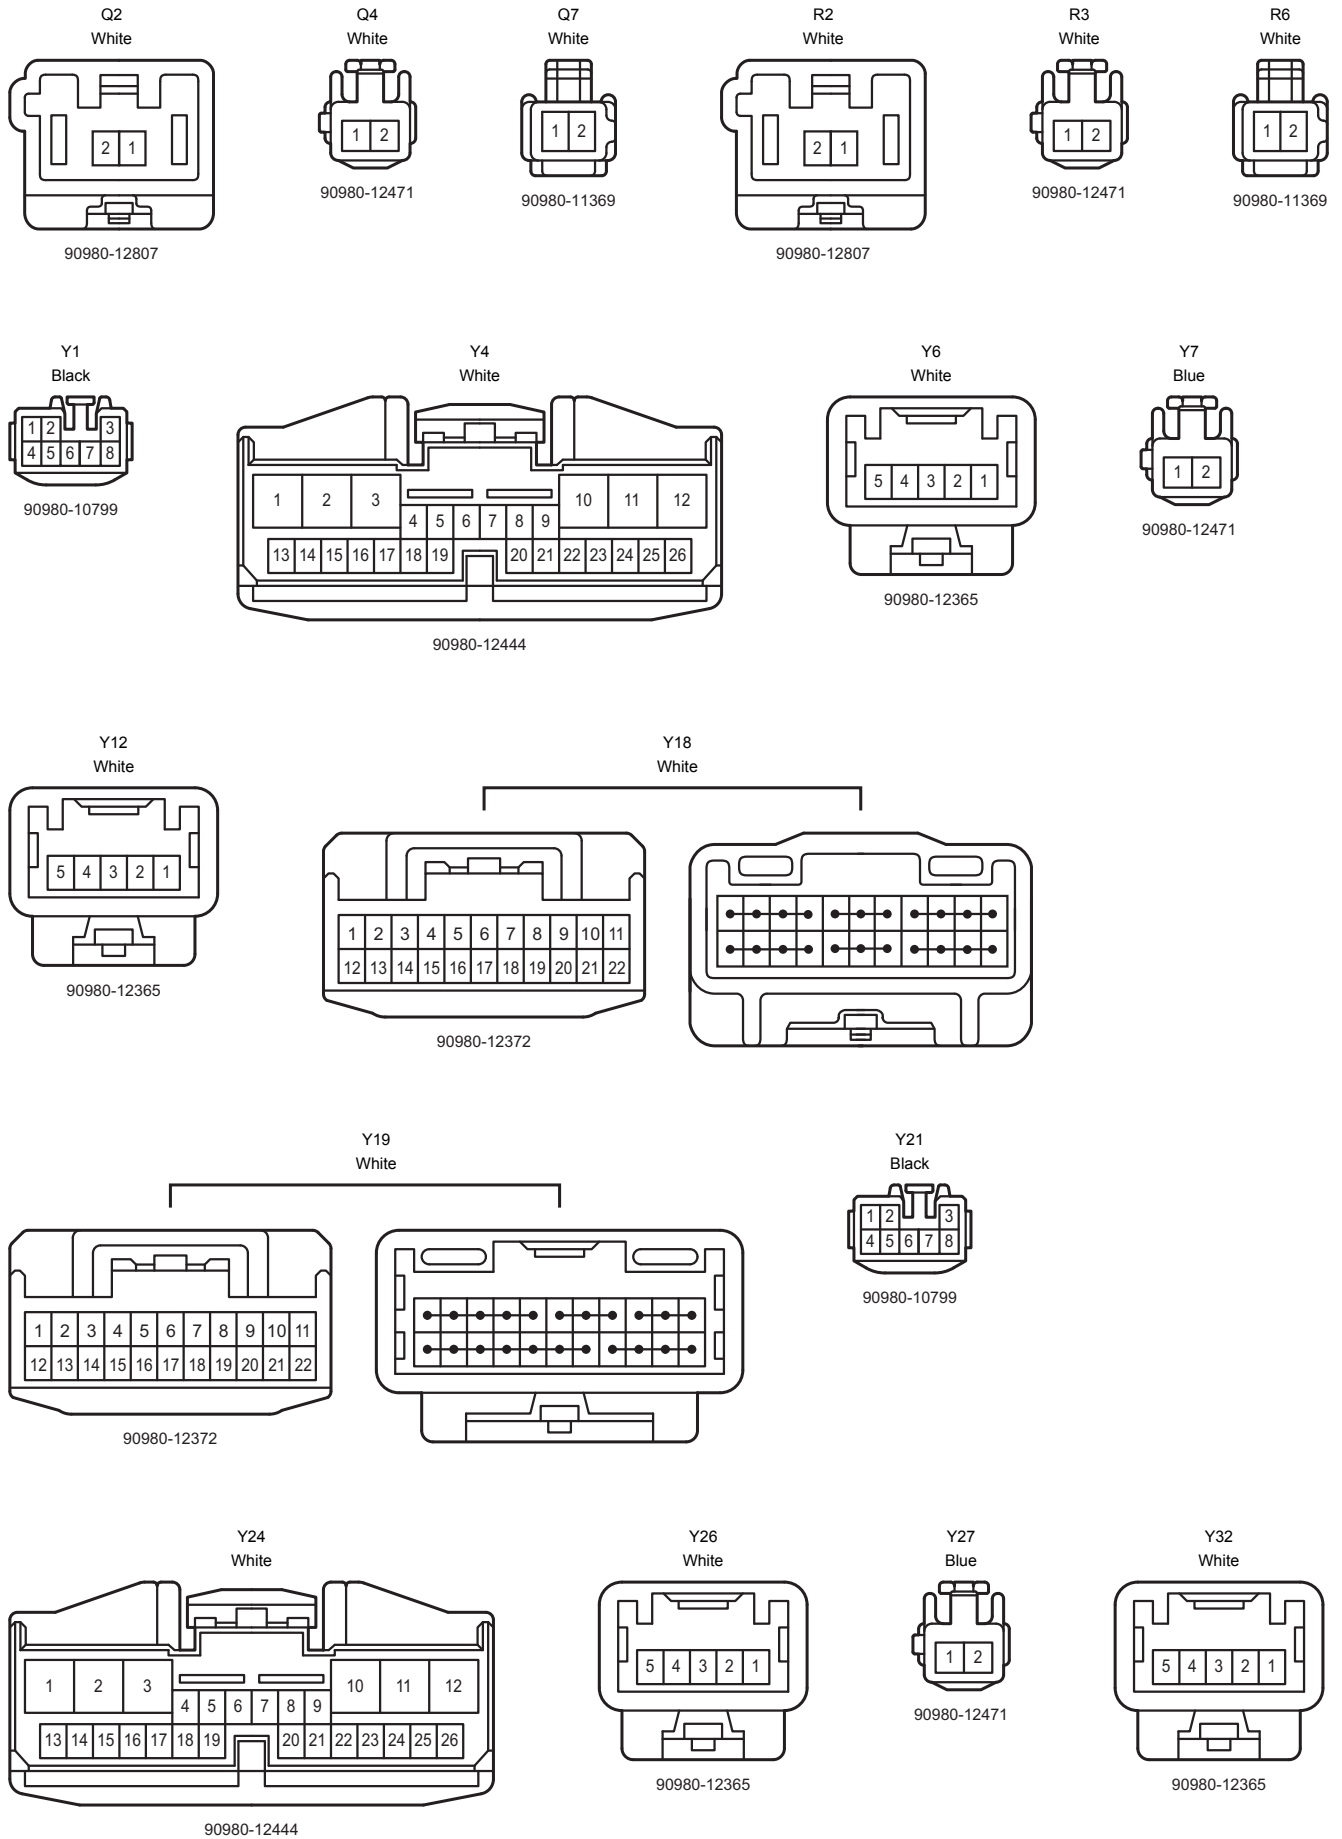


Y38
White

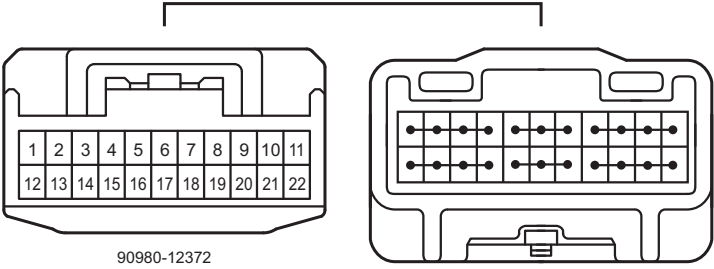

Y39
White

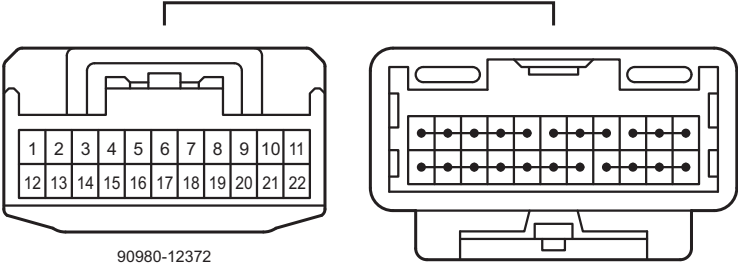

Y40
Black

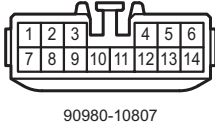

Y42
Black

