



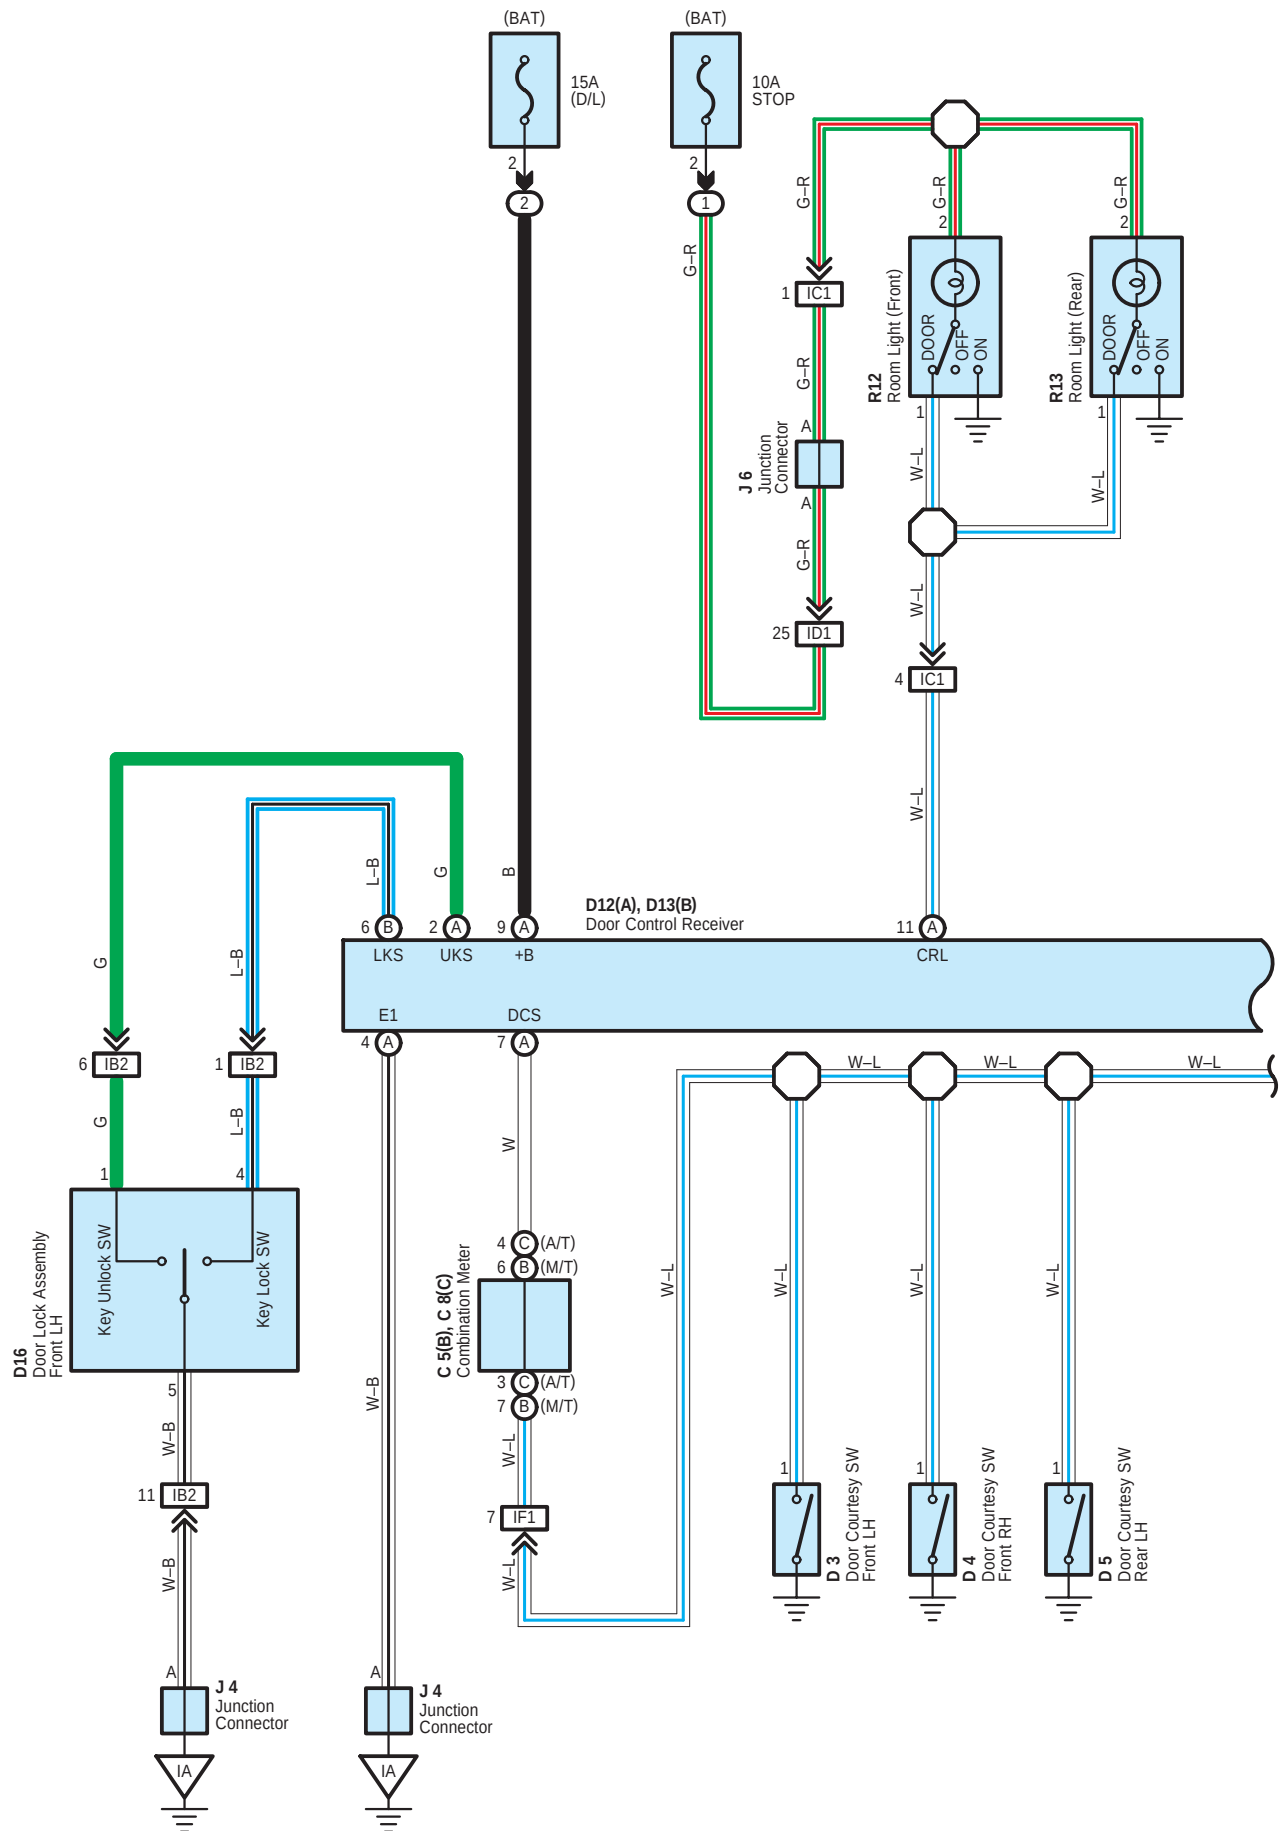

- * 4 : w/ Engine Immobiliser System
- * 5 : w/o Engine Immobiliser System

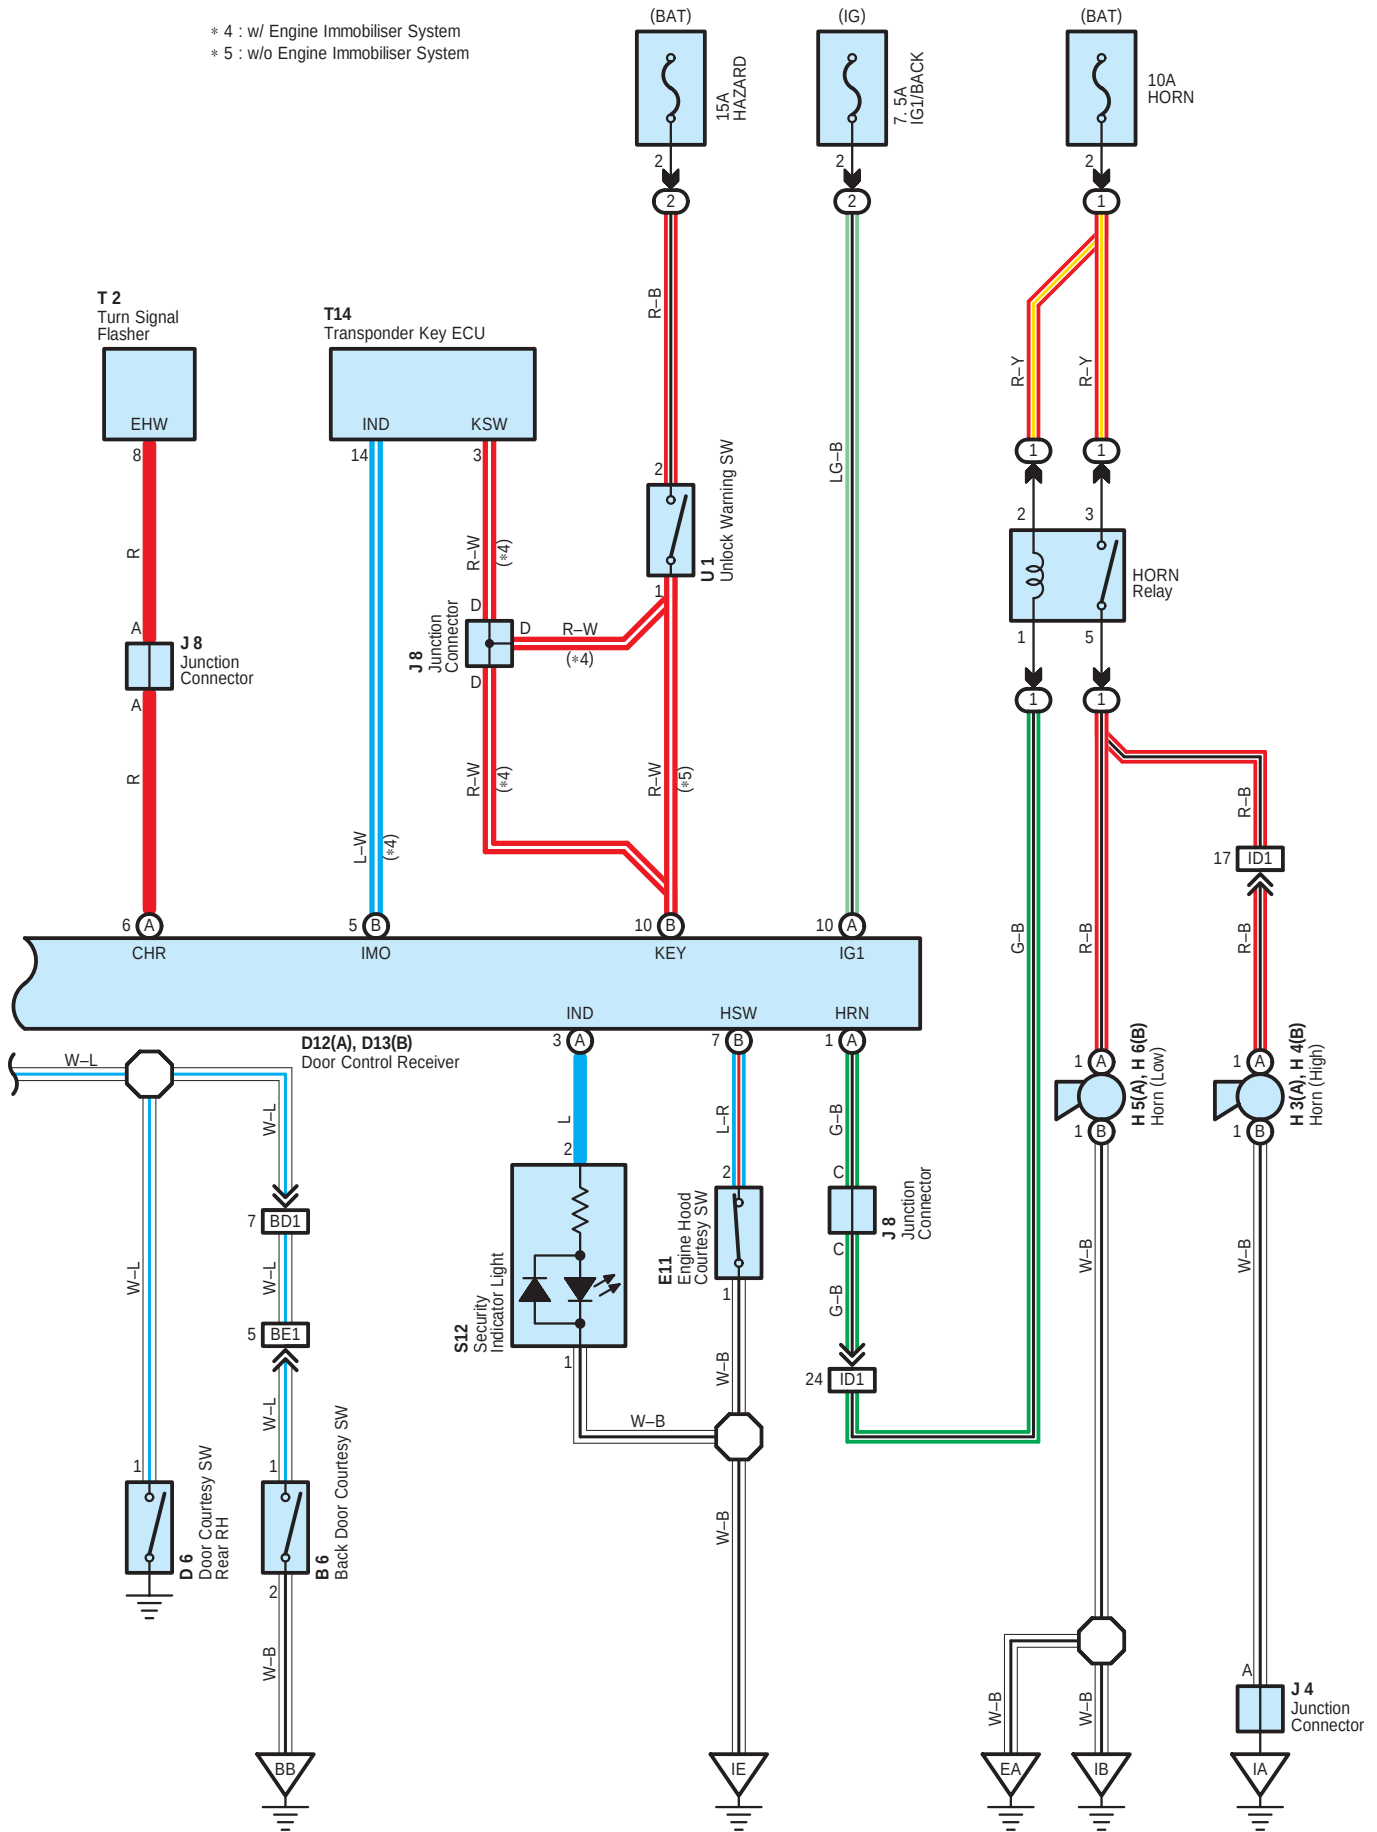

Theft Deterrent

: Parts Location

Code		See Page	Code		See Page	Code	See Page
B6		30 (LHD)	D13	B	28 (LHD)	J6	29 (LHD)
C5	B	28 (LHD)	D16		30 (LHD)	J8	29 (LHD)
C8	C	28 (LHD)	E11		24 (*1)	R12	31 (LHD)
D3		30 (LHD)	H3	A	24 (*1)	R13	31 (LHD)
D4		30 (LHD)	H4	B	24 (*1)	S12	29 (LHD)
D5		30 (LHD)	H5	A	24 (*1)	T2	29 (LHD)
D6		30 (LHD)	H6	B	24 (*1)	T14	29 (LHD)
D12	A	28 (LHD)	J4		29 (LHD)	U1	29 (LHD)

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Right)
2	23 (LHD)	Fuse Block (Left Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	44 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	44 (LHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
ID1	44 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
IF1	44 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
BD1	45 (LHD)	Back Door No.2 Wire and Floor Wire (Rear Quarter Panel RH)
BE1	45 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Right Side of Back Door)

: Ground Points

Code	See Page	Ground Points Location
EA	42 (*1)	Right Fender Apron
IA	44 (LHD)	Right Kick Panel
IB	44 (LHD)	Cowl Side Panel RH
IE	44 (LHD)	Cowl Side Panel LH
BB	45 (LHD)	Right Side of Back Door

* 1 : LHD 3SZ-VE * 2 : LHD K3-VE * 3 : RHD 3SZ-VE * 4 : RHD K3-VE * 5 : RHD w/ Heater * 6 : RHD w/o Heater

