


Remote Control Mirror

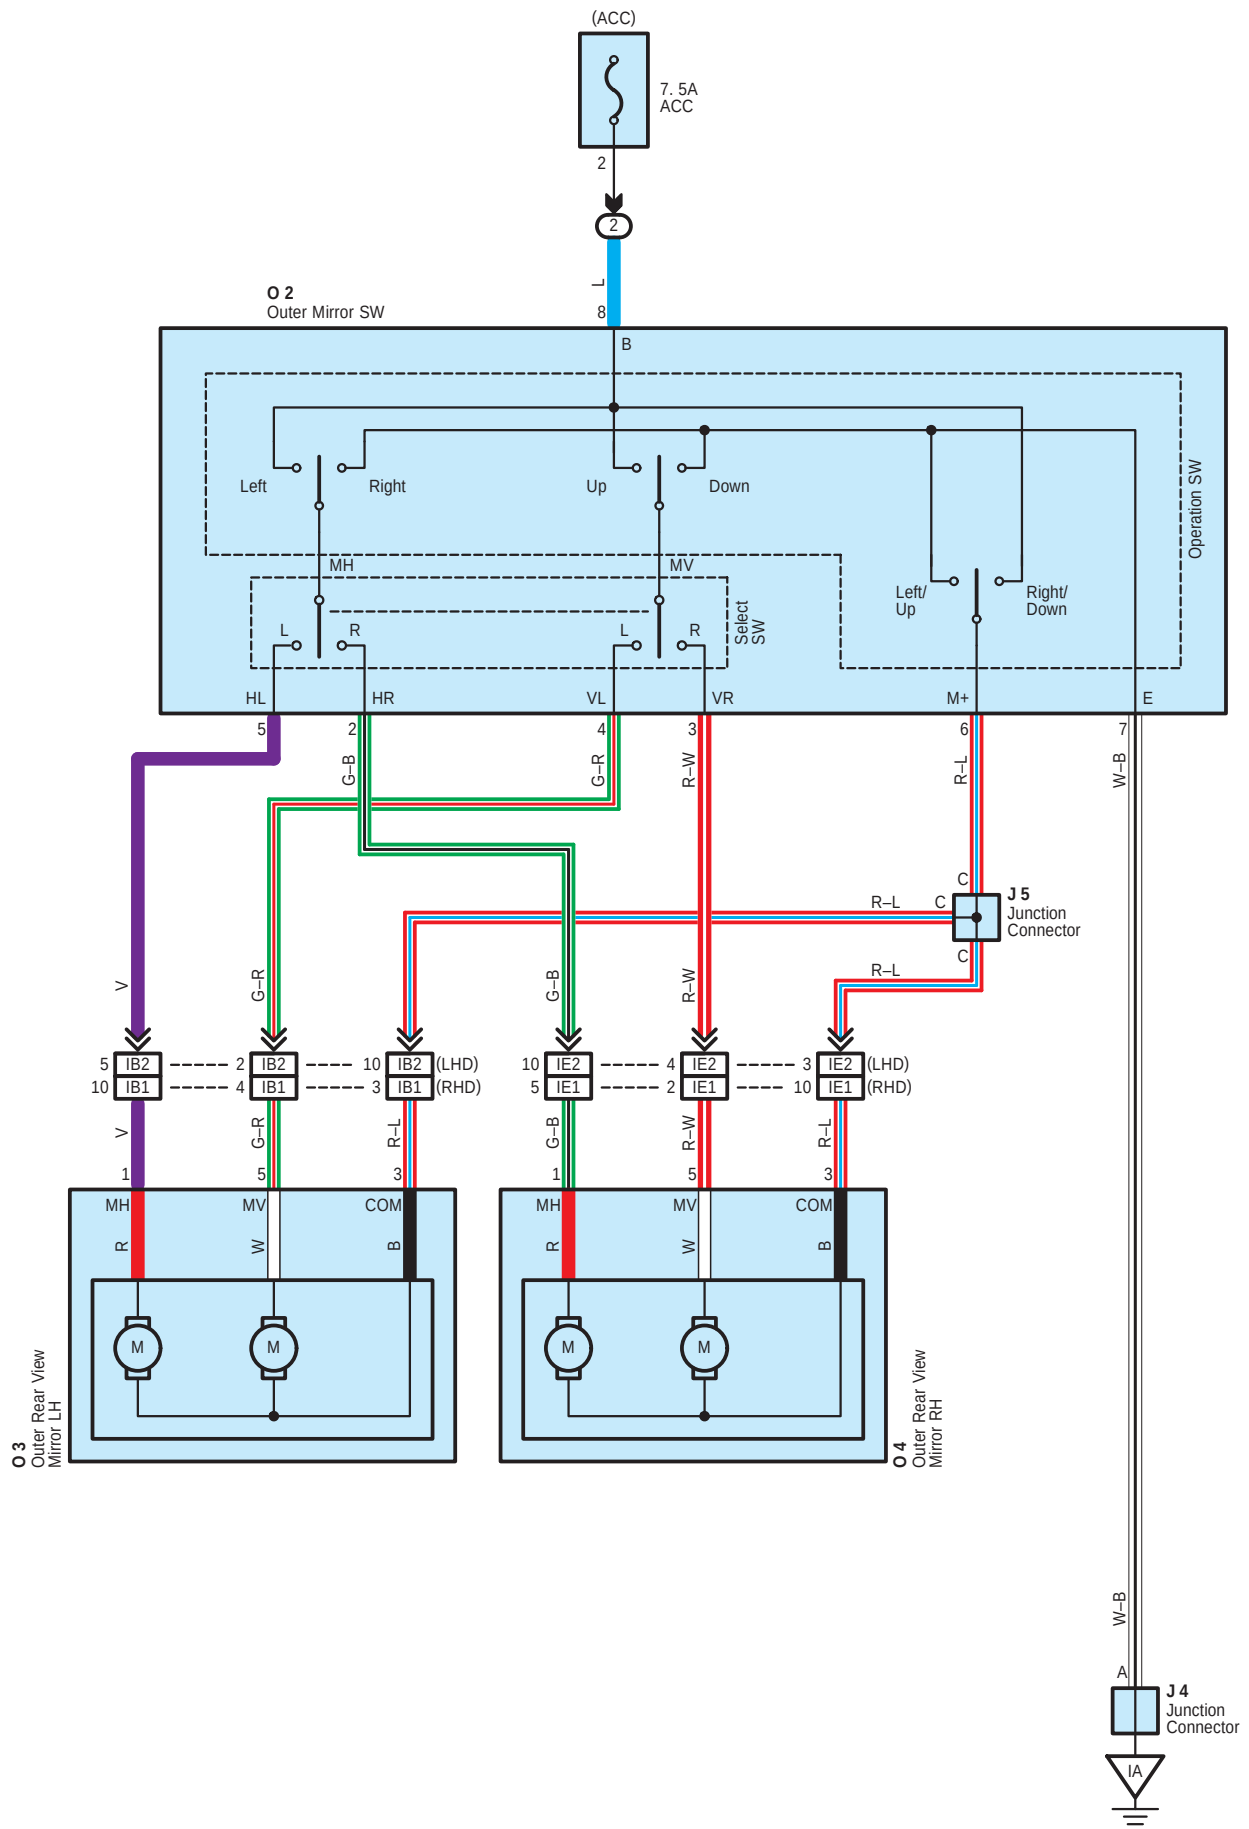

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
J4	29 (LHD)	J5	39 (*6)	O3	40 (RHD)
	37 (*5)	O2	29 (LHD)	O4	30 (LHD)
	39 (*6)		37 (*5)		40 (RHD)
J5	29 (LHD)		39 (*6)		
	37 (*5)	O3	30 (LHD)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	23 (LHD)	Fuse Block (Left Kick Panel)
	23 (RHD)	Fuse Block (Right Kick Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	48 (*5)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
	49 (*6)	
IB2	44 (LHD)	
IE1	48 (*5)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
	49 (*6)	
IE2	44 (LHD)	

 : Ground Points

Code	See Page	Ground Points Location
IA	44 (LHD)	Right Kick Panel
	48 (*5)	Left Kick Panel
	49 (*6)	

* 1 : LHD 3SZ-VE * 2 : LHD K3-VE * 3 : RHD 3SZ-VE * 4 : RHD K3-VE * 5 : RHD w/ Heater * 6 : RHD w/o Heater