


Rear Window Defogger

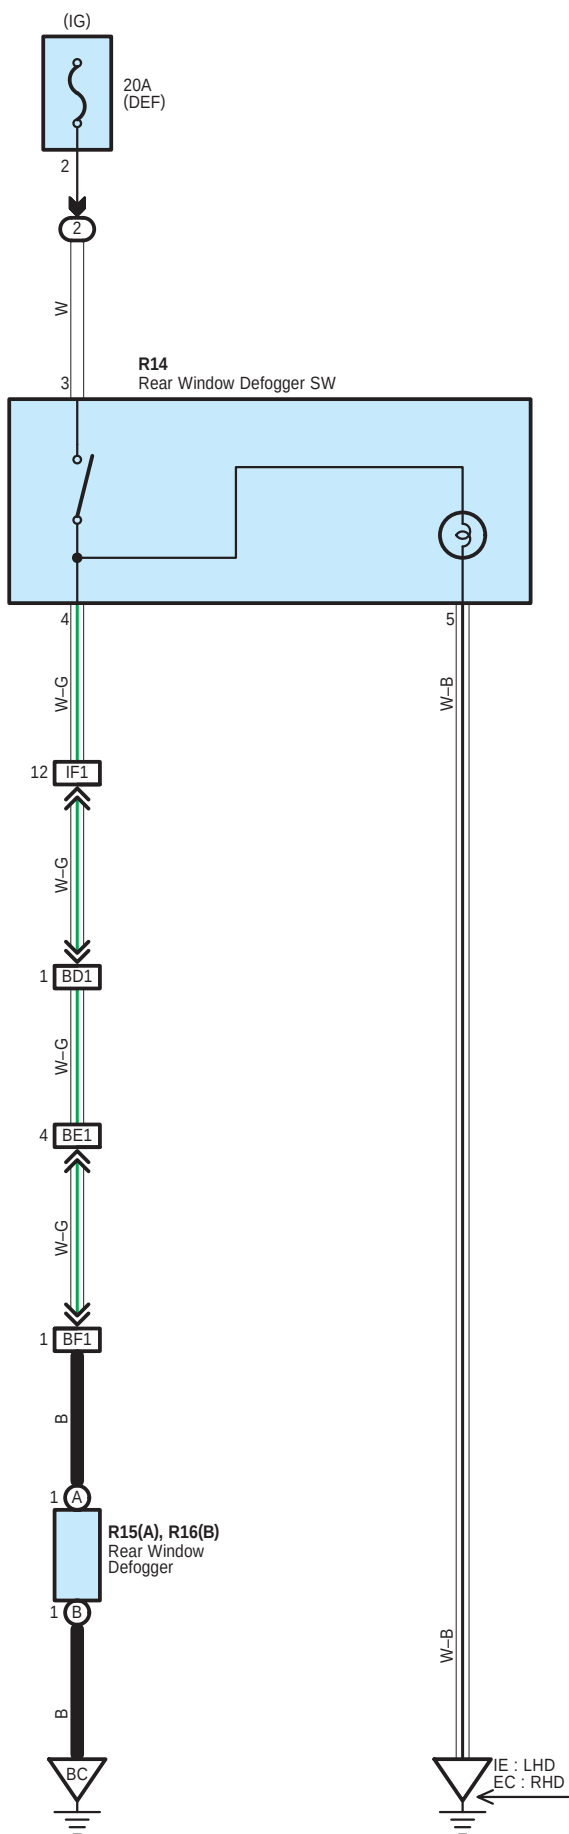

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
R14	29 (LHD)	R15	A	31 (LHD)	R16 B 41 (RHD)
	37 (*5)			41 (RHD)	
	39 (*6)	R16	B	31 (LHD)	

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	23 (LHD)	Fuse Block (Left Kick Panel)
	23 (RHD)	Fuse Block (Right Kick Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	44 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	48 (*5)	Instrument Panel Wire and Floor Wire (Right Kick Panel)
	49 (*6)	
BD1	45 (LHD)	Back Door No.2 Wire and Floor Wire (Rear Quarter Panel RH)
	50 (RHD)	
BE1	45 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Right Side of Back Door)
	50 (RHD)	
BF1	45 (LHD)	Rear Window No.1 Wire and Back Door No.1 Wire (Right Side of Back Door)
	50 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
EC	46 (*3)	Left Fender Apron
	47 (*4)	
IE	44 (LHD)	Cowl Side Panel LH
BC	45 (LHD)	Left Side of Back Door
	50 (RHD)	

* 1 : LHD 3SZ-VE * 2 : LHD K3-VE * 3 : RHD 3SZ-VE * 4 : RHD K3-VE * 5 : RHD w/ Heater * 6 : RHD w/o Heater