



Audio System

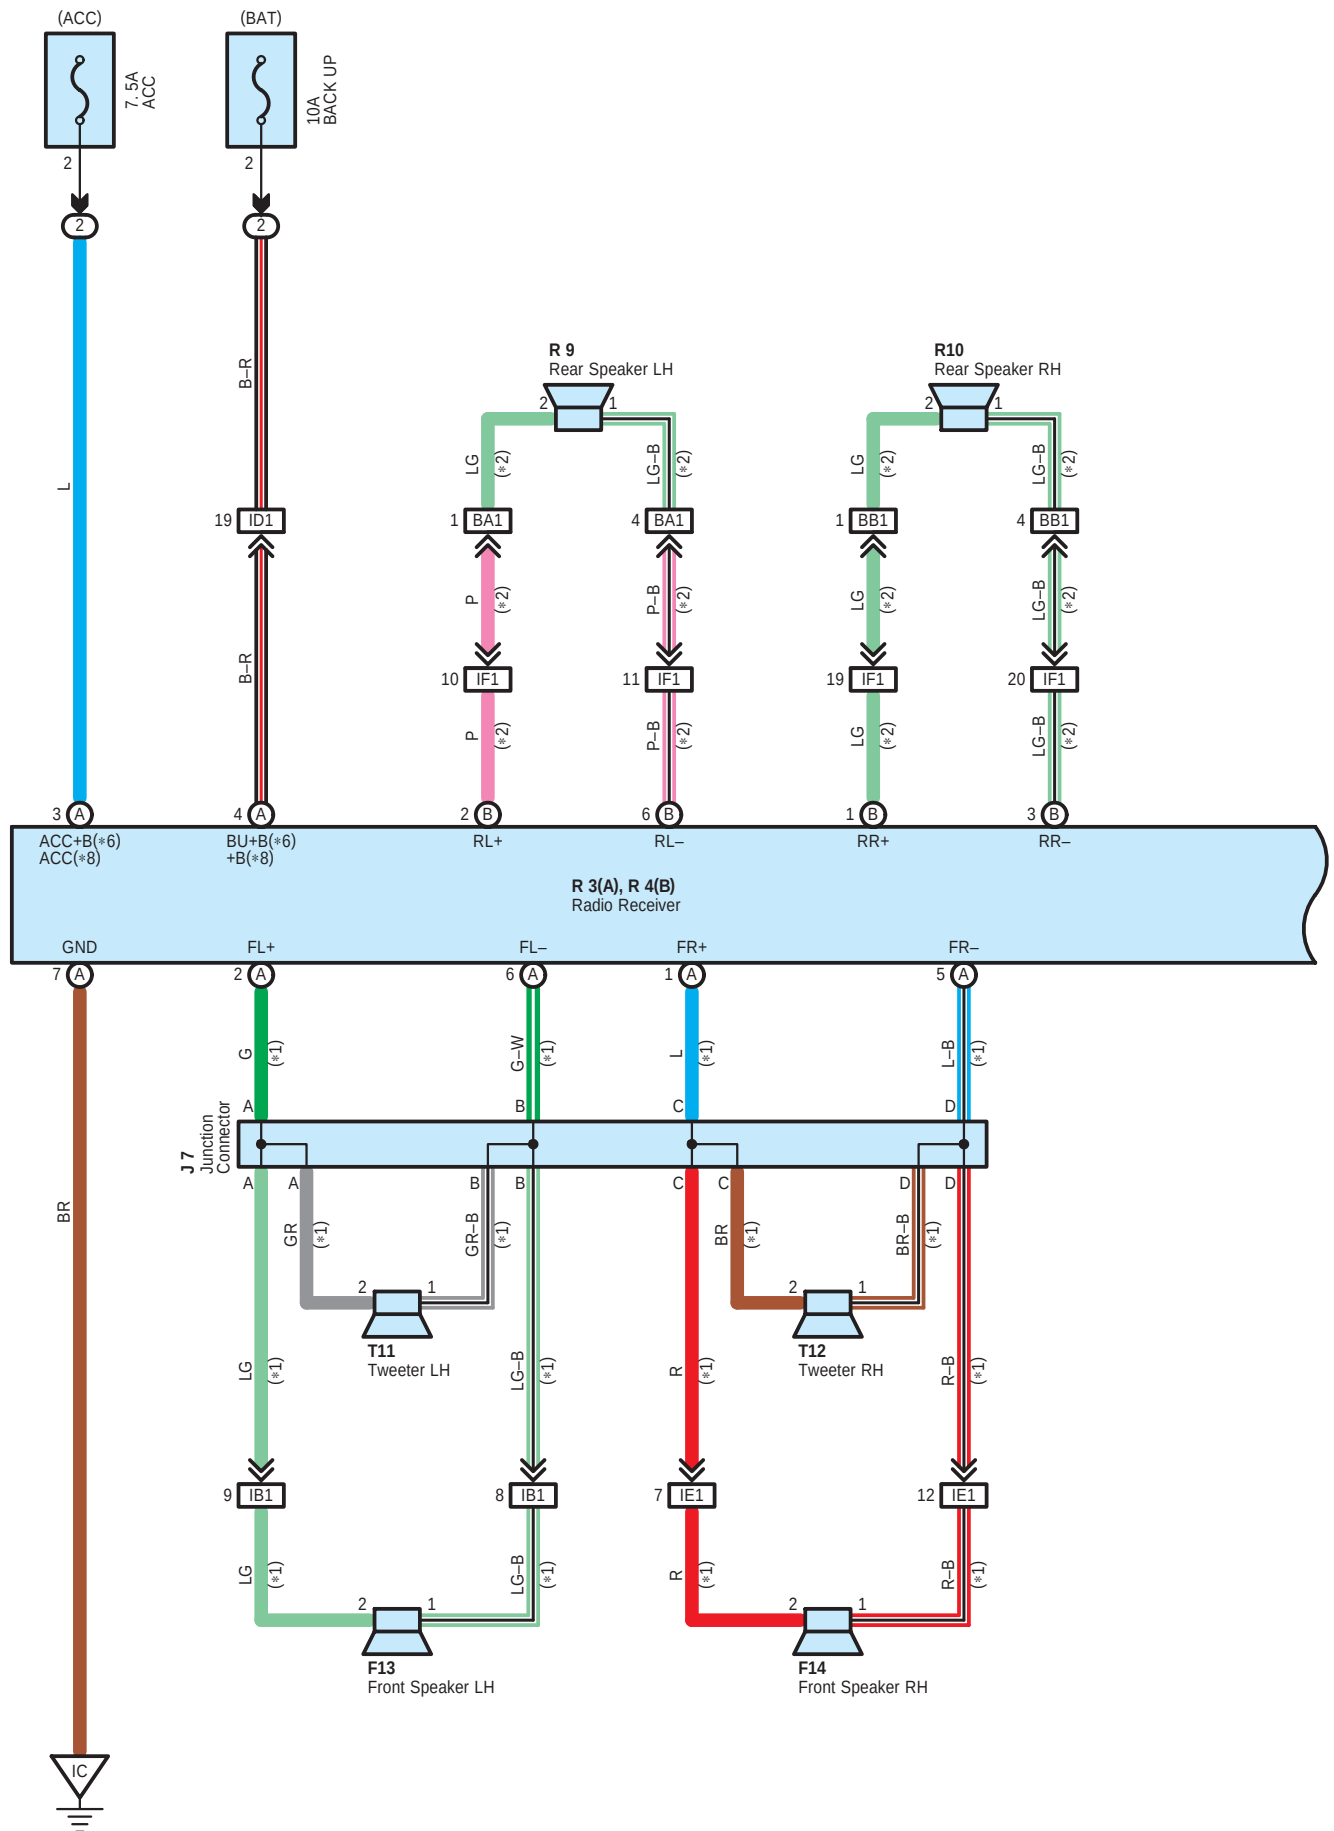

- * 1 : 6 Speaker
- * 2 : 4 Speaker, 6 Speaker
- * 3 : 2 Speaker, 4 Speaker
- * 6 : w/o CD Player
- * 8 : w/ CD Player

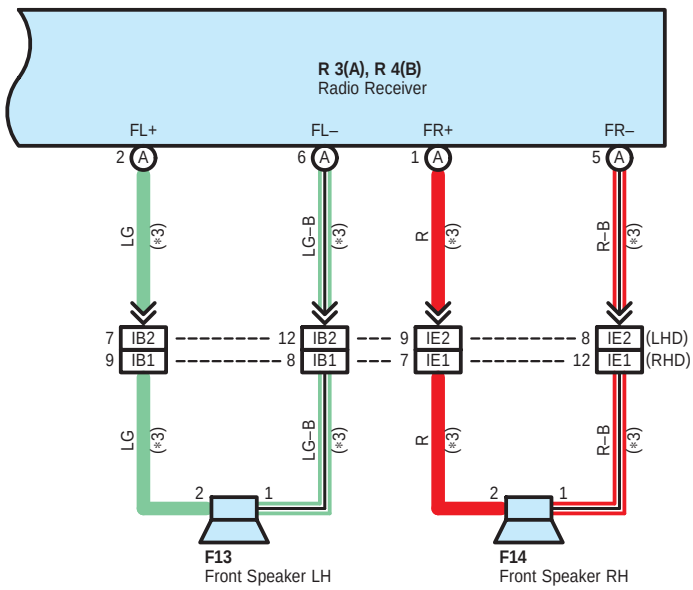

Audio System

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
F13		30 (LHD)		R3	A	37 (*5)		R9		41 (RHD)	
		40 (RHD)				39 (*6)		R10		31 (LHD)	
F14		30 (LHD)		R4	B	29 (LHD)					
		40 (RHD)				37 (*5)		T11		39 (*6)	
J7		39 (*6)				39 (*6)		T12		39 (*6)	
R3	A	29 (LHD)				R9		31 (LHD)			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	23 (LHD)	Fuse Block (Left Kick Panel)
	23 (RHD)	Fuse Block (Right Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	48 (*5)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
	49 (*6)	
IB2	44 (LHD)	
ID1	44 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
	48 (*5)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	49 (*6)	
IE1	48 (*5)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
	49 (*6)	
IE2	44 (LHD)	
IF1	44 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	48 (*5)	Instrument Panel Wire and Floor Wire (Right Kick Panel)
	49 (*6)	
BA1	45 (LHD)	Rear Door No.1 Wire LH and Floor Wire (Center Pillar LH)
	50 (RHD)	
BB1	45 (LHD)	Rear Door No.1 Wire RH and Floor Wire (Center Pillar RH)
	50 (RHD)	

: Ground Points

Code	See Page	Ground Points Location
IC	44 (LHD)	Cowl Side Panel LH
	48 (*5)	Right Kick Panel
	49 (*6)	

* 1 : LHD 3SZ-VE * 2 : LHD K3-VE * 3 : RHD 3SZ-VE * 4 : RHD K3-VE * 5 : RHD w/ Heater * 6 : RHD w/o Heater

