


Radiator Fan

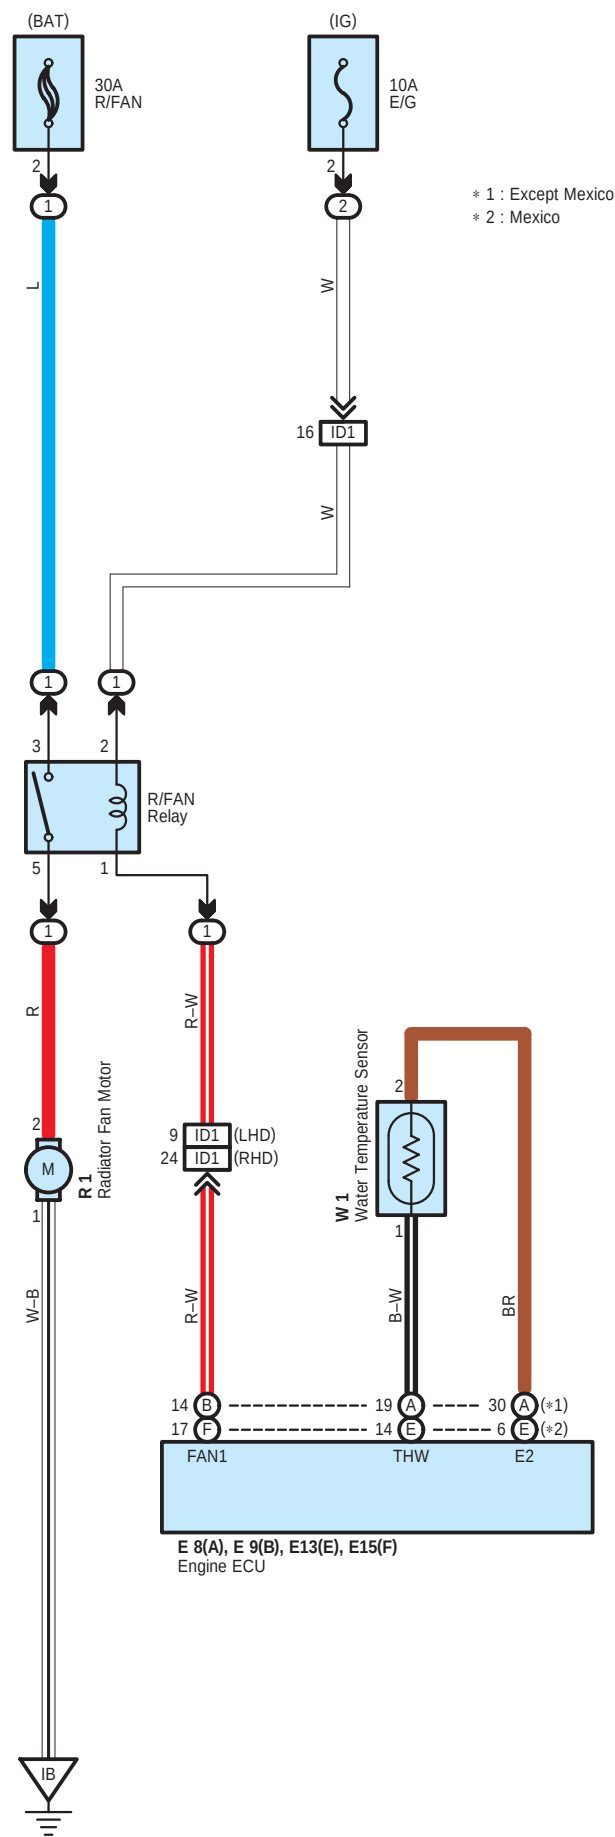

 : Parts Location

Code		See Page	Code		See Page	Code	See Page
E8	A	28 (LHD)	E13	E	28 (LHD)	W1	25 (*1)
		36 (*5)	E15	F	28 (LHD)		27 (*2)
		38 (*6)	R1		25 (*1)		33 (*3)
E9	B	28 (LHD)			27 (*2)		35 (*4)
		36 (*5)			33 (*3)		
		38 (*6)			35 (*4)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Right)
2	23 (LHD)	Fuse Block (Left Kick Panel)
	23 (RHD)	Fuse Block (Right Kick Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	44 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
	48 (*5)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	49 (*6)	

 : Ground Points

Code	See Page	Ground Points Location
IB	44 (LHD)	Cowl Side Panel RH
	48 (*5)	
	49 (*6)	

* 1 : LHD 3SZ-VE * 2 : LHD K3-VE * 3 : RHD 3SZ-VE * 4 : RHD K3-VE * 5 : RHD w/ Heater * 6 : RHD w/o Heater