



 : Parts Location

Code		See Page	Code	See Page	Code	See Page
E8	A	28 (LHD)	I2	35 (*4)	I4	33 (*3)
		36 (*5)	I3	25 (*1)		35 (*4)
		38 (*6)		27 (*2)	I6	25 (*1)
E12	D	28 (LHD)		33 (*3)		27 (*2)
I2		25 (*1)		35 (*4)		33 (*3)
		27 (*2)	I4	25 (*1)		35 (*4)
		33 (*3)		27 (*2)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	23 (LHD)	Fuse Block (Left Kick Panel)
	23 (RHD)	Fuse Block (Right Kick Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	44 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)
	48 (*5)	Engine Wire and Instrument Panel Wire (Left Kick Panel)
	49 (*6)	

 : Ground Points

Code	See Page	Ground Points Location
ED	42 (*1)	Rear Side of Engine Block
	43 (*2)	
	46 (*3)	
	47 (*4)	

* 1 : LHD 3SZ-VE * 2 : LHD K3-VE * 3 : RHD 3SZ-VE * 4 : RHD K3-VE * 5 : RHD w/ Heater * 6 : RHD w/o Heater