


Engine Immobiliser System

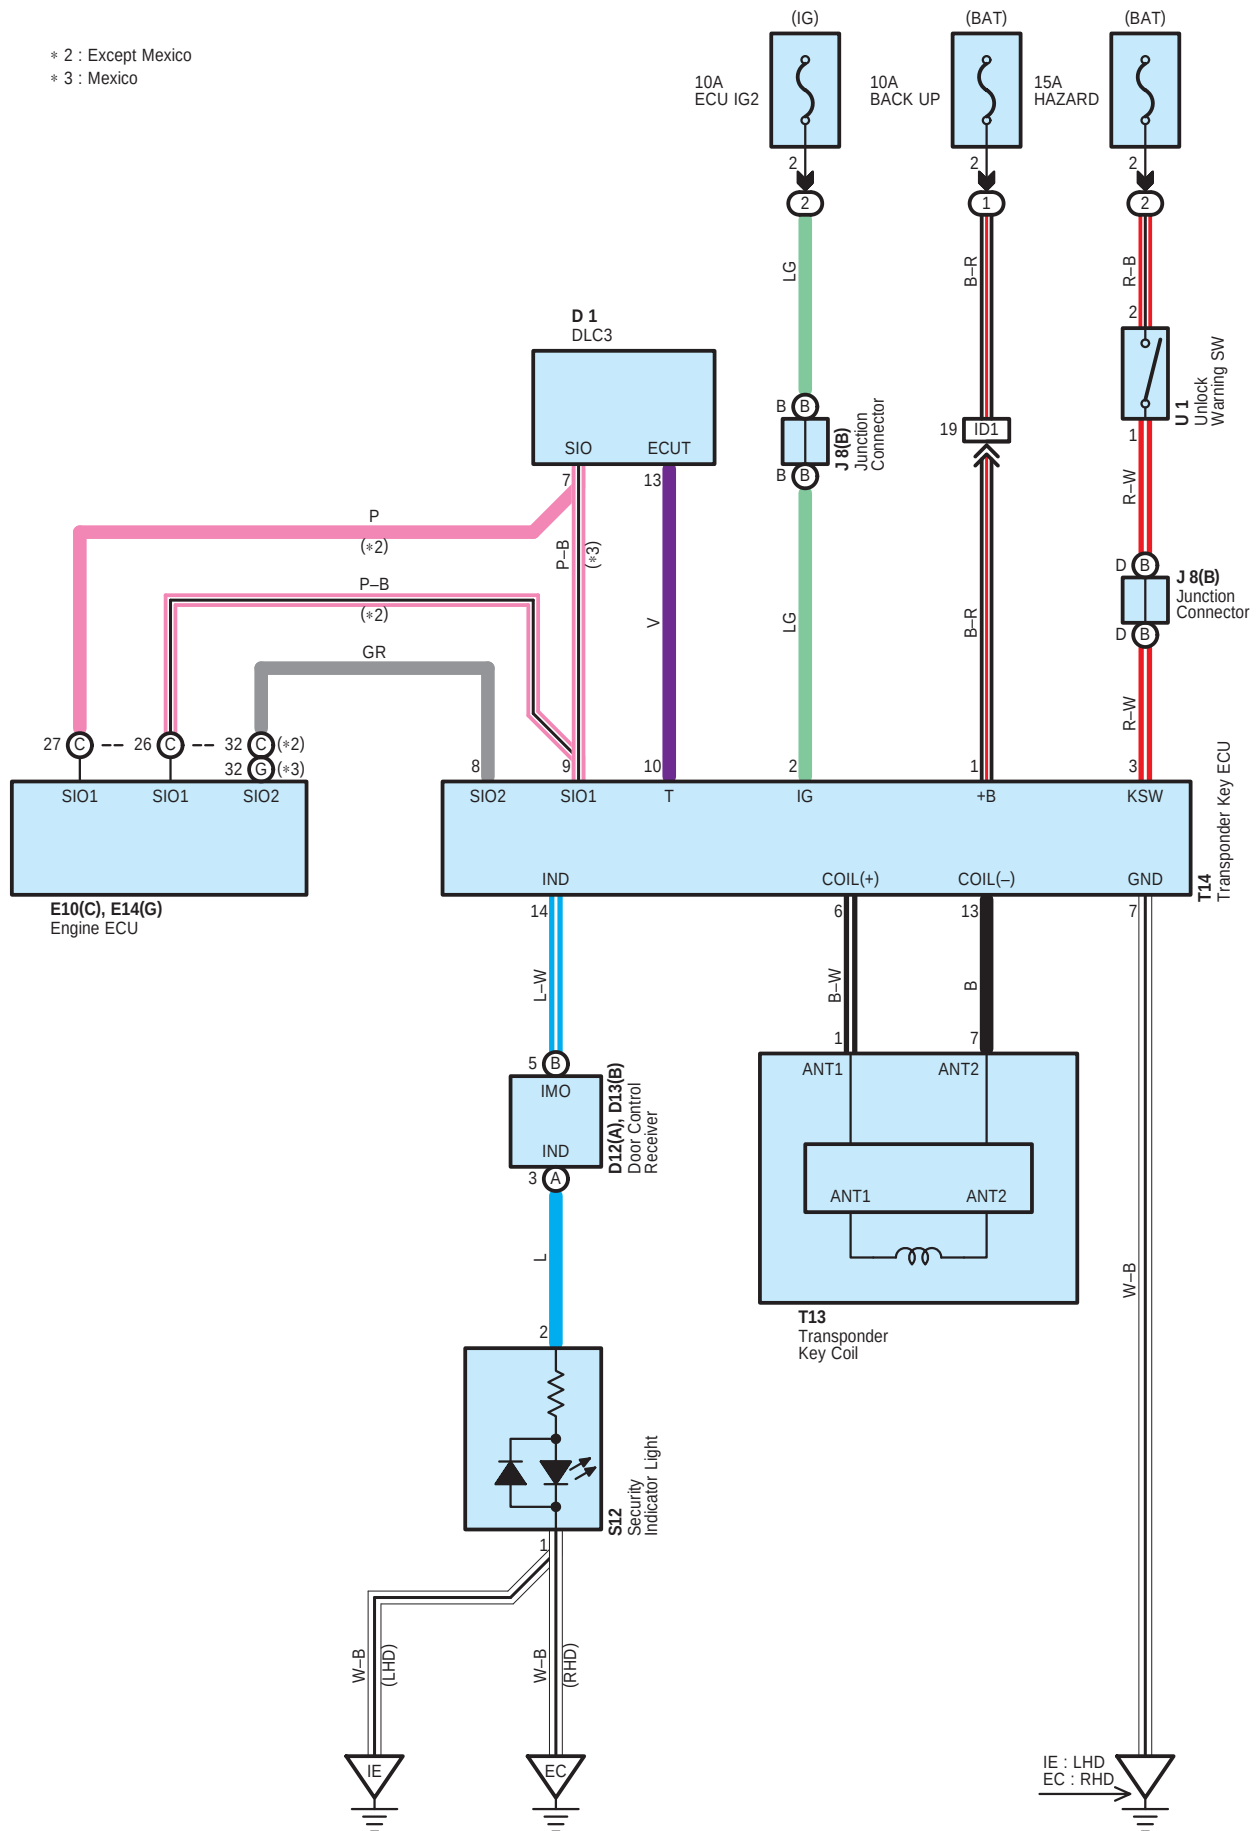

 : Parts Location

Code		See Page		Code		See Page		Code		See Page	
D1		28 (LHD)		E10	C	36 (*5)		T13		37 (*5)	
		36 (*5)		E14	G	28 (LHD)		T14		29 (LHD)	
D12	A	28 (LHD)		J8	B	29 (LHD)				U1	
		36 (*5)				37 (*5)		29 (LHD)			
D13	B	28 (LHD)		S12		29 (LHD)		U1		37 (*5)	
		36 (*5)				37 (*5)					
E10	C	28 (LHD)		T13		29 (LHD)					

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Right)
2	23 (LHD)	Fuse Block (Left Kick Panel)
	23 (RHD)	Fuse Block (Right Kick Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	44 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
	48 (*5)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)

 : Ground Points

Code	See Page	Ground Points Location
EC	46 (*3)	Left Fender Apron
	47 (*4)	
IE	44 (LHD)	Cowl Side Panel LH

* 1 : LHD 3SZ-VE * 2 : LHD K3-VE * 3 : RHD 3SZ-VE * 4 : RHD K3-VE * 5 : RHD w/ Heater * 6 : RHD w/o Heater