


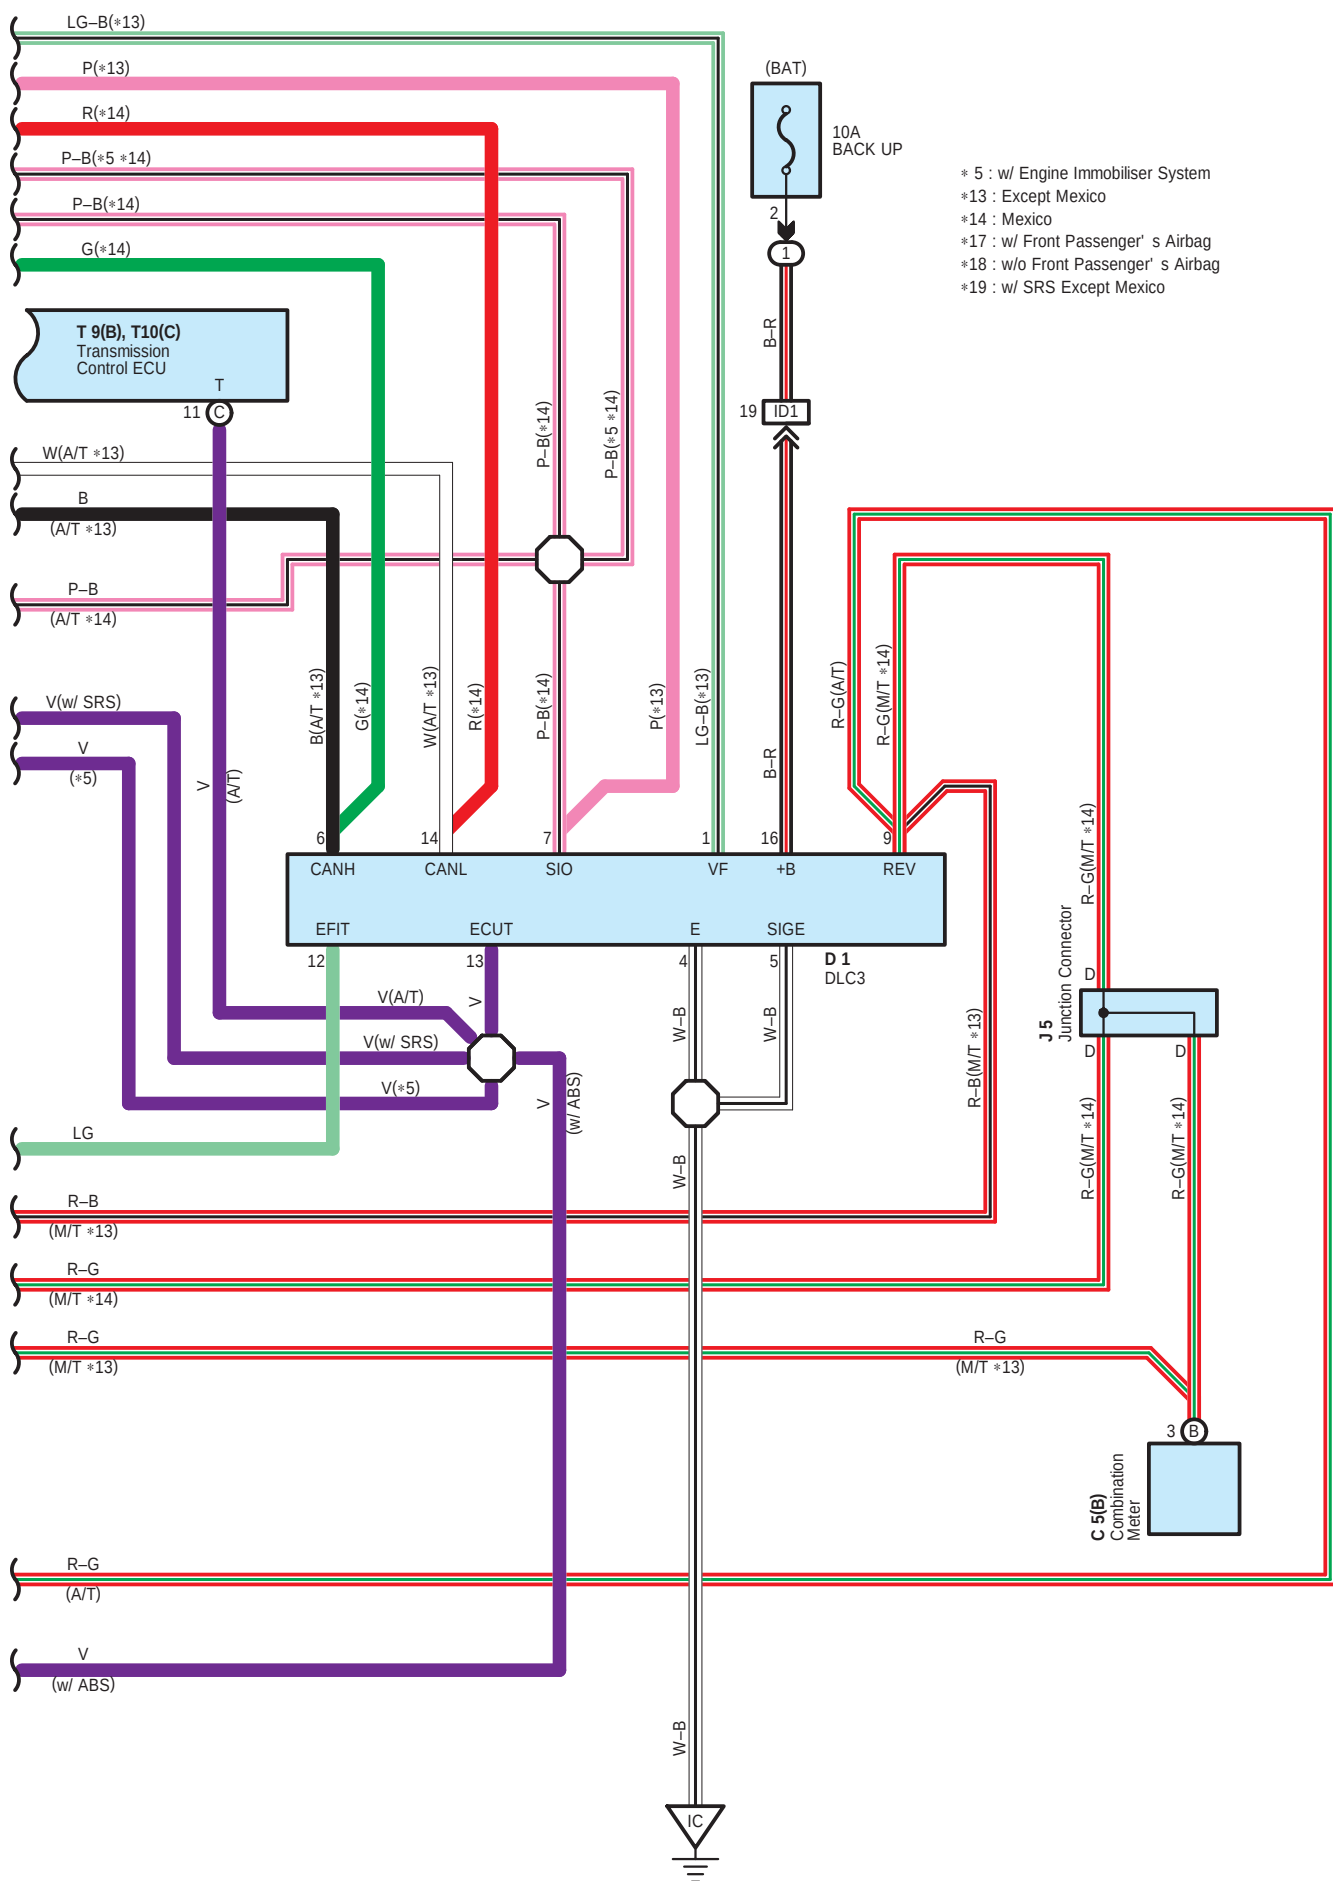

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A10	A	28 (LHD)		E9	B	28 (LHD)		S4		25 (*1)	
		36 (*5)				33 (*3)					
	B	28 (LHD)				38 (*6)				35 (*4)	
C5	B	28 (LHD)		E10	C	28 (LHD)		T9	B	29 (LHD)	
C8		28 (LHD)				36 (*5)				39 (*6)	
		38 (*6)				38 (*6)		T10	C	29 (LHD)	
D1		28 (LHD)		E14	G	28 (LHD)				T14	
		36 (*5)		E15	F	28 (LHD)		29 (LHD)			
		38 (*6)		J5		29 (LHD)		37 (*5)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Right)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	44 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
	48 (*5)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	49 (*6)	
IH1	44 (LHD)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel RH)
	48 (*5)	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel LH)

▽ : Ground Points

Code	See Page	Ground Points Location
IC	44 (LHD)	Cowl Side Panel LH
	48 (*5)	Right Kick Panel
	49 (*6)	

* 1 : LHD 3SZ-VE * 2 : LHD K3-VE * 3 : RHD 3SZ-VE * 4 : RHD K3-VE * 5 : RHD w/ Heater * 6 : RHD w/o Heater

