



Interior Light

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B6	30 (LHD)	D3	40 (RHD)	D12	36 (*5)
	40 (RHD)	D4	30 (LHD)	J6	29 (LHD)
C5	28 (LHD)		40 (RHD)		37 (*5)
	36 (*5)	D5	30 (LHD)		39 (*6)
	38 (*6)		40 (RHD)	R12	31 (LHD)
C8	28 (LHD)	D6	30 (LHD)		41 (RHD)
	38 (*6)		40 (RHD)	R13	31 (LHD)
D3	30 (LHD)	D12	28 (LHD)		41 (RHD)

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Right)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	44 (LHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
	48 (*5)	
	49 (*6)	
ID1	44 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
	48 (*5)	Engine Room Main Wire and Instrument Panel Wire (Cowl Side Panel RH)
	49 (*6)	
IF1	44 (LHD)	Instrument Panel Wire and Floor Wire (Left Kick Panel)
	48 (*5)	Instrument Panel Wire and Floor Wire (Right Kick Panel)
	49 (*6)	
BD1	45 (LHD)	Back Door No.2 Wire and Floor Wire (Rear Quarter Panel RH)
	50 (RHD)	
BE1	45 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Right Side of Back Door)
	50 (RHD)	

: Ground Points

Code	See Page	Ground Points Location
BB	45 (LHD)	Right Side of Back Door
	50 (RHD)	

* 1 : LHD 3SZ-VE * 2 : LHD K3-VE * 3 : RHD 3SZ-VE * 4 : RHD K3-VE * 5 : RHD w/ Heater * 6 : RHD w/o Heater

