

## FOREWORD

This wiring diagram manual has been prepared to provide information on the electrical system of the AVENSIS/CORONA.

Applicable models: ST220 Series  
AT220, 221 Series  
CT220 Series

For service specifications and repair procedures of the above models other than those listed in this manual, refer to the following manuals;

Manual Name	Pub. No.
● AVENSIS/CORONA Chassis and Body Repair Manual	RM599E
● 3S-FE Engine Repair Manual Supplement	RM609E
● 4A-F, FE/7A-FE Engine Repair Manual Supplement	RM611E
● 2C-TE Engine Repair Manual Supplement	RM612E
● AVENSIS/CORONA New Car Features	NCF145E

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice.

**TOYOTA MOTOR CORPORATION**

### NOTICE

**When handling supplemental restraint system components (removal, installation or inspection, etc.), always follow the direction given in the repair manuals listed above to prevent accidents and supplemental restraint system malfunction.**