

ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	= Anti-Lock Brake System
A/C	= Air Conditioner
A/T	= Automatic Transaxle
BACS	= Boost Altitude Compensational Stopper
COMB.	= Combination
DLC3	= Data Link Connector 3
ECT	= Electronically Controlled Transmission
ECU	= Electronic Control Unit
EFI	= Electronic Fuel Injection
EGR	= Exhaust Gas Recirculation
ESA	= Electronic Spark Advance
FL	= Fusible Link
IIA	= Integrated Ignition Assembly
ISC	= Idle Speed Control
J/B	= Junction Block
L/B	= Liftback Type
LH	= Left-Hand
LHD	= Left-Hand Drive
M/T	= Manual Transaxle
O/D	= Overdrive
R/B	= Relay Block
RH	= Right-Hand
RHD	= Right-Hand Drive
S/D	= Sedan Type
SRS	= Supplemental Restraint System
SW	= Switch
TEMP.	= Temperature
VRV	= Vacuum Regulating Valve
VSV	= Vacuum Switching Valve
w/	= With
W/G	= Wagon Type
w/o	= Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.