



F RELAY LOCATIONS


[Engine Compartment]

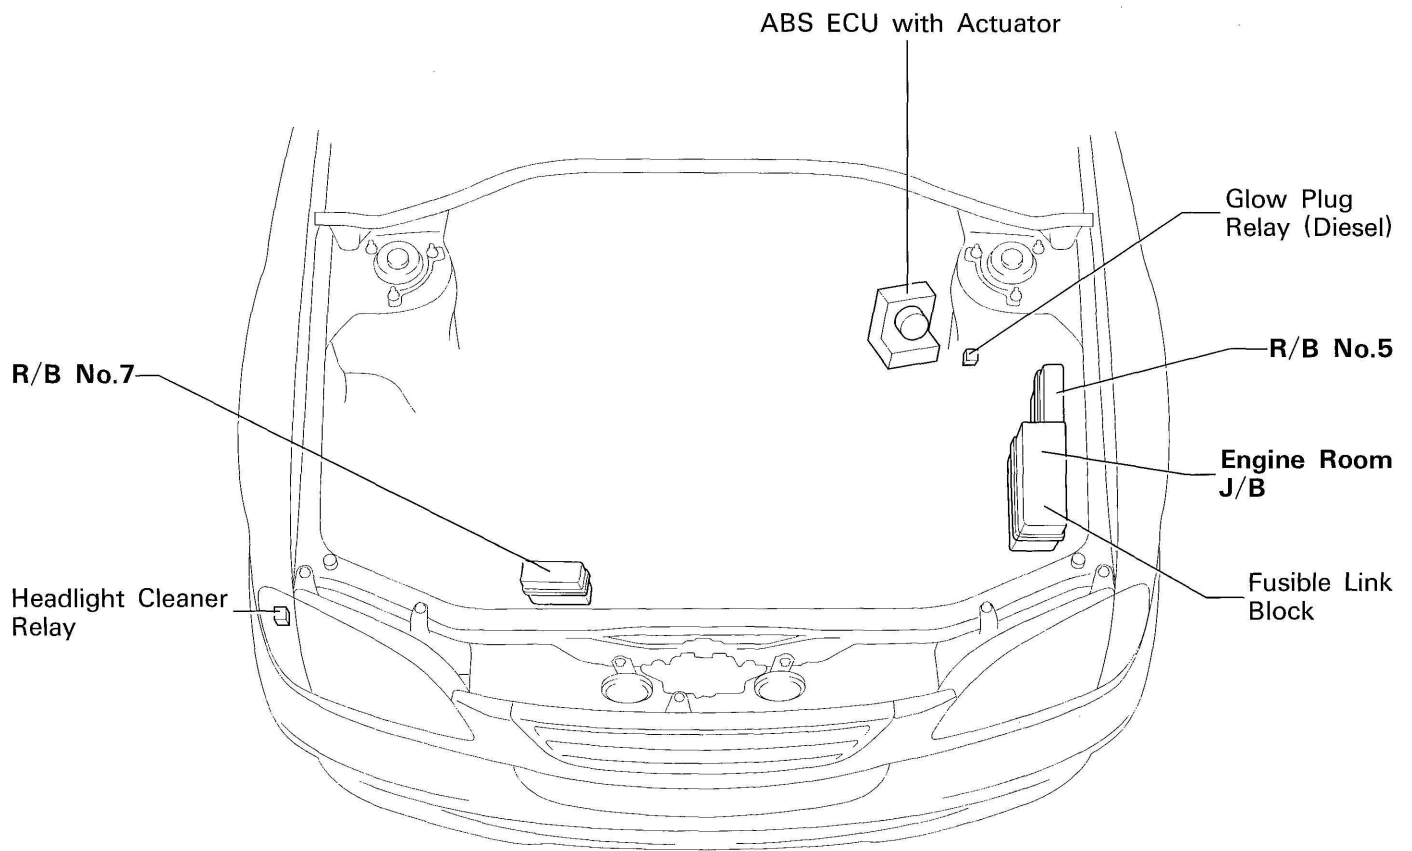

**[Instrument Panel]
(LHD)**

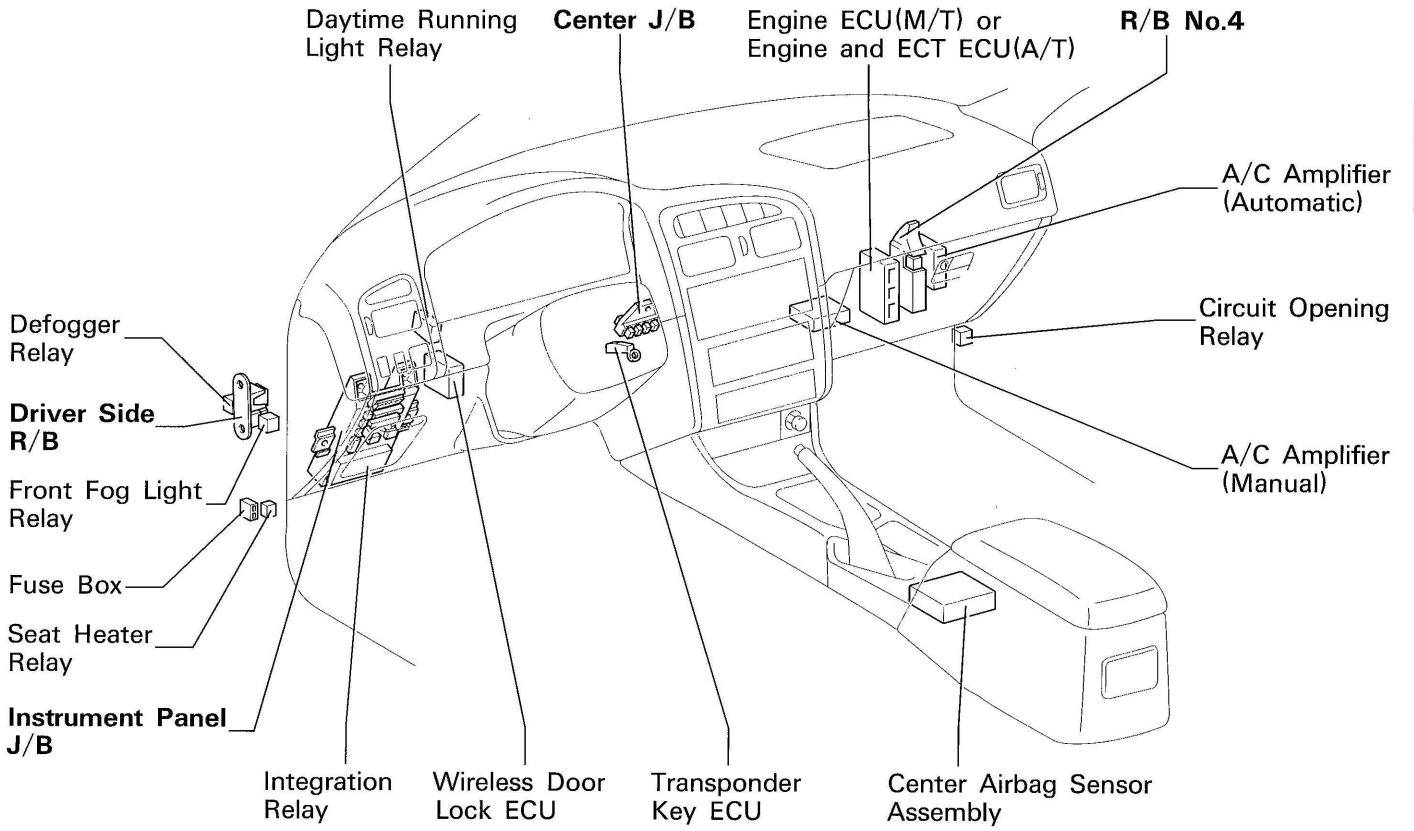


(RHD)

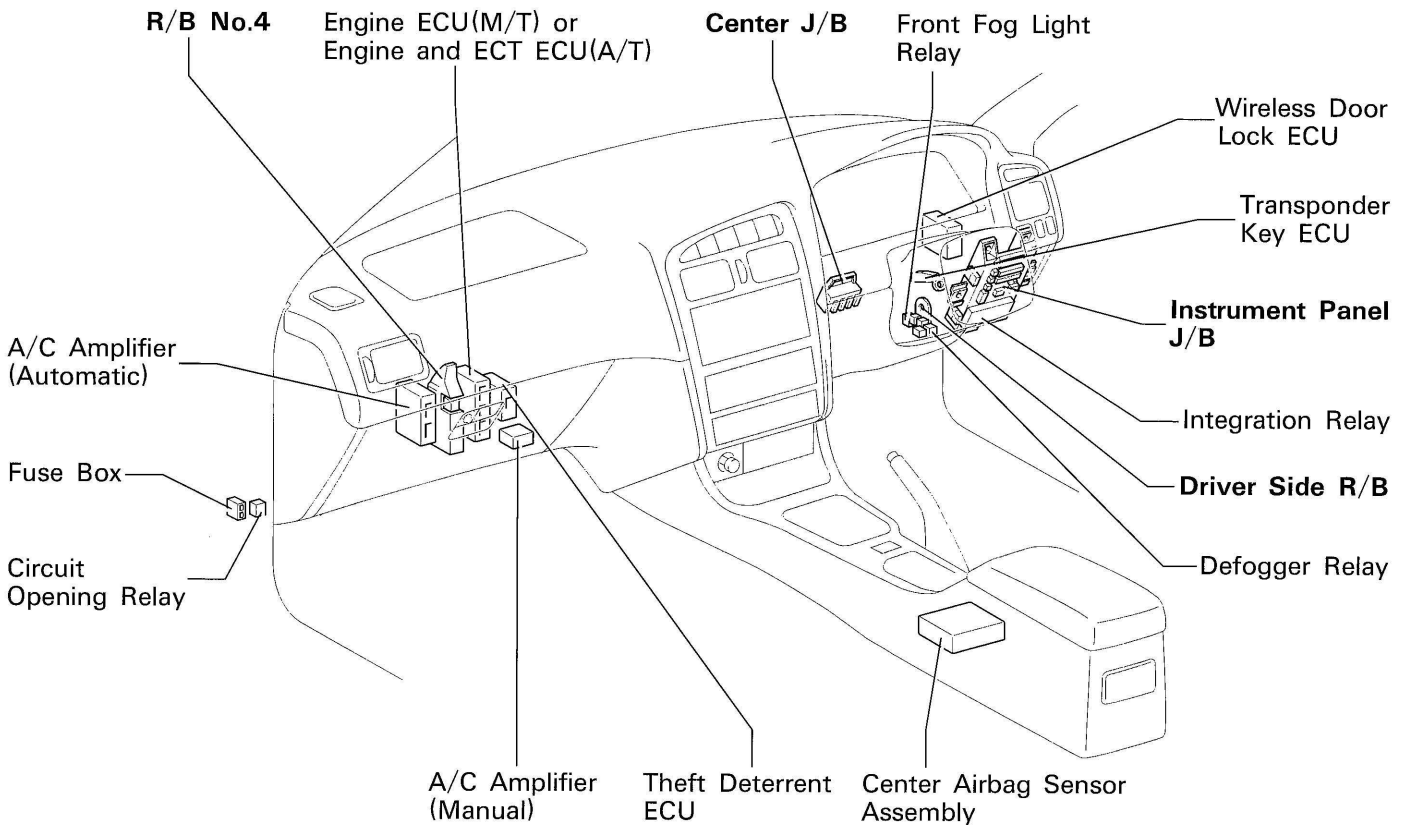


F RELAY LOCATIONS


[Body]
(S/D)

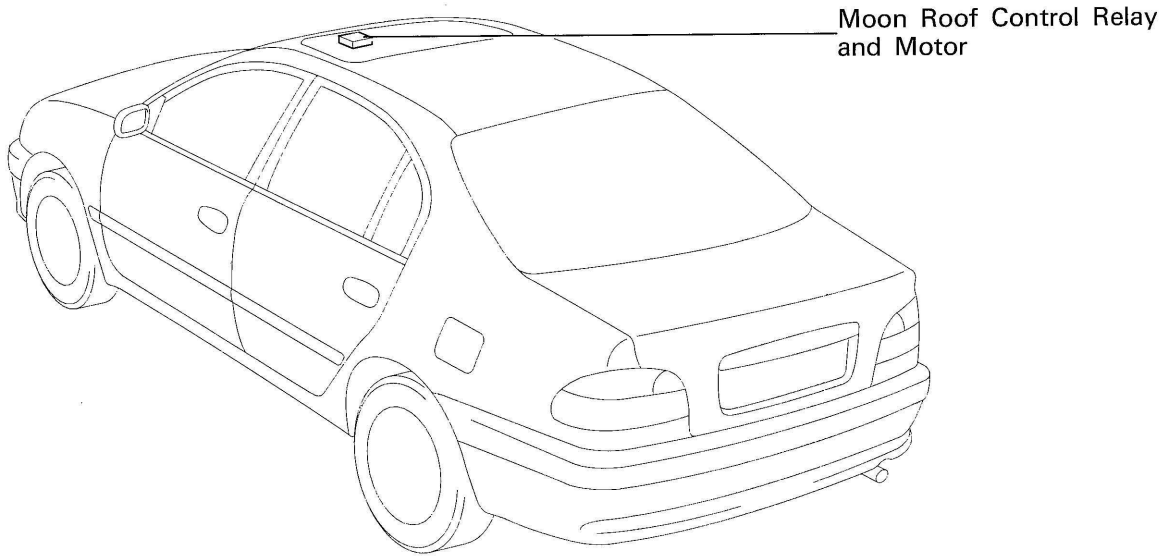


(L/B)

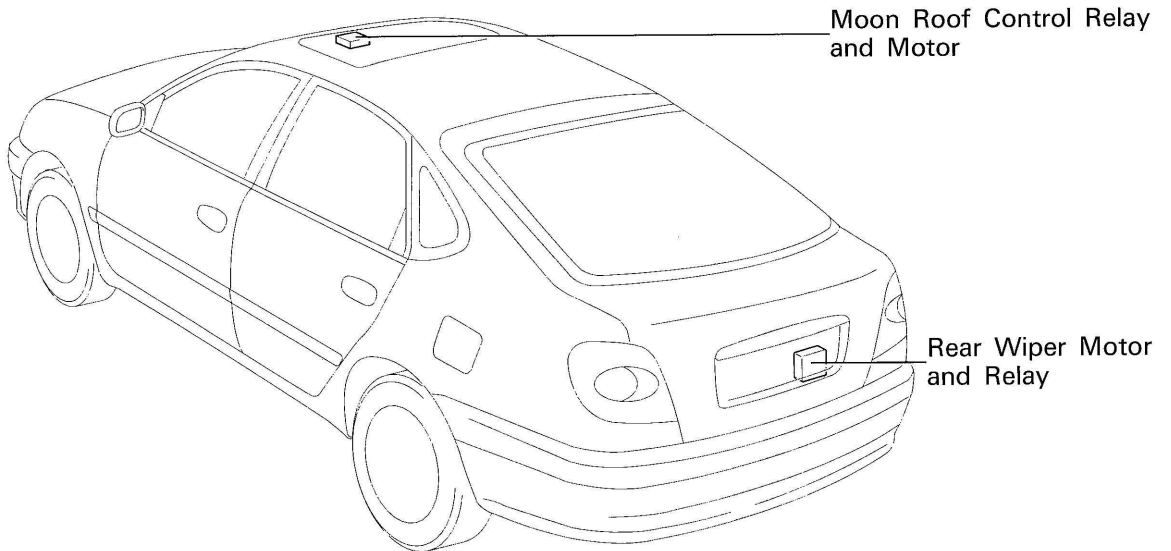


(W/G)

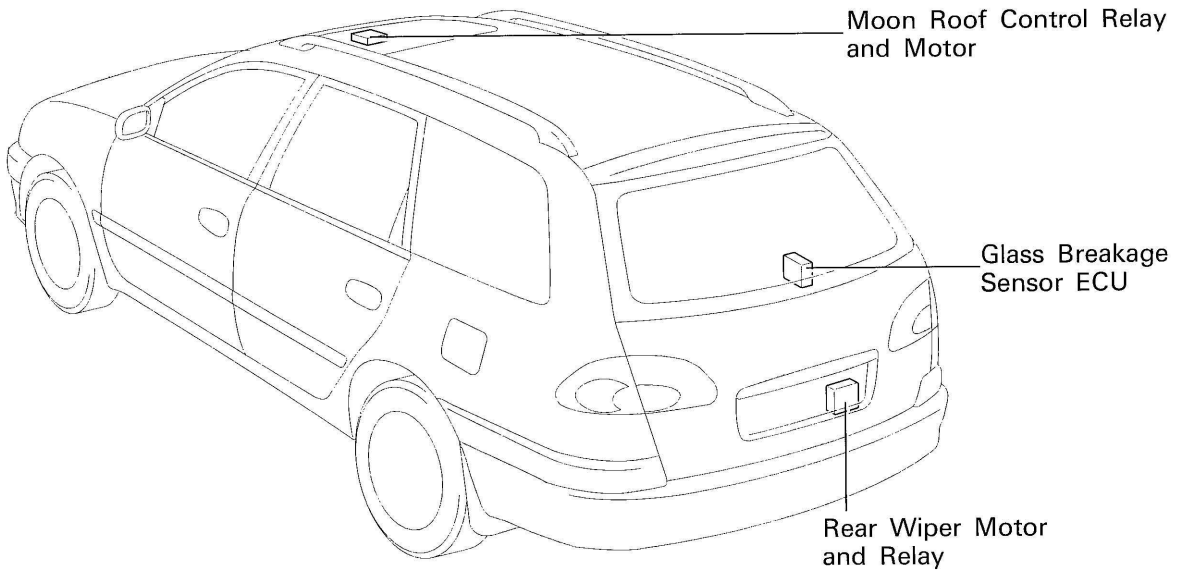

① : Driver Side R/B	LHD : Left Kick Panel (See Page 51)
	RHD : Right Kick Panel (See Page 51)

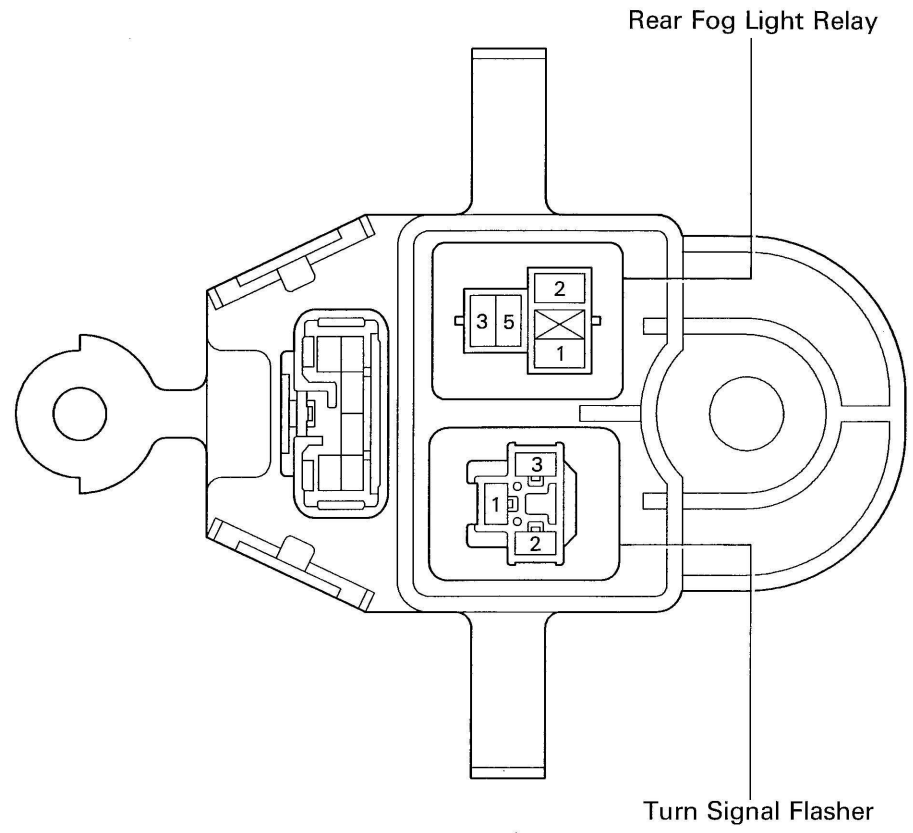


④ : R/B No.4	Passenger Side Dash Panel (See Page 51)
--------------	---

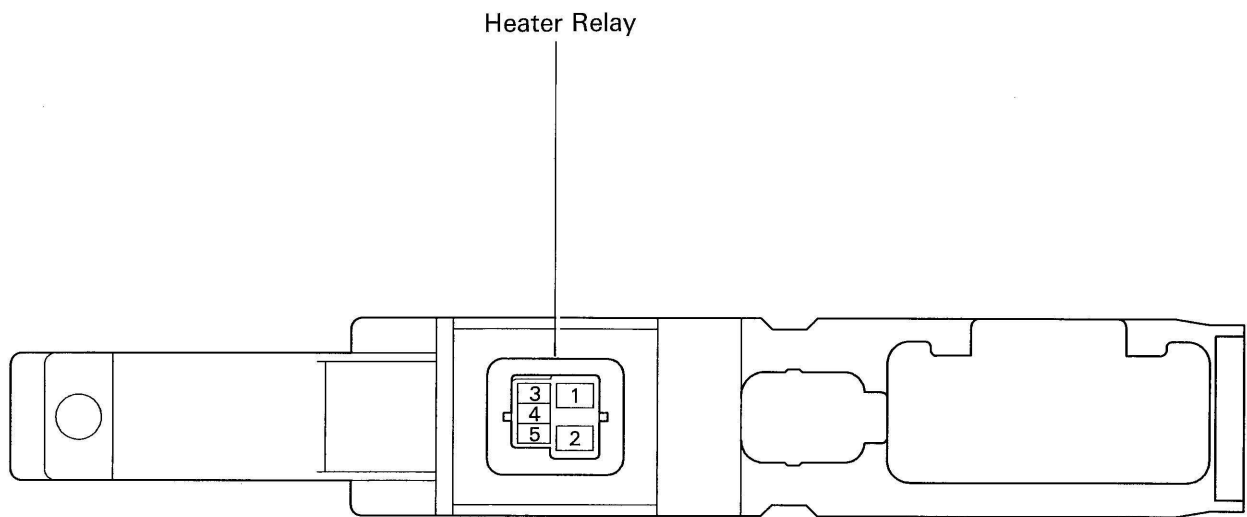

F RELAY LOCATIONS

⑤ : Engine Room R/B


Engine Compartment Left (See Page 50)
(Inside Engine Room J/B)

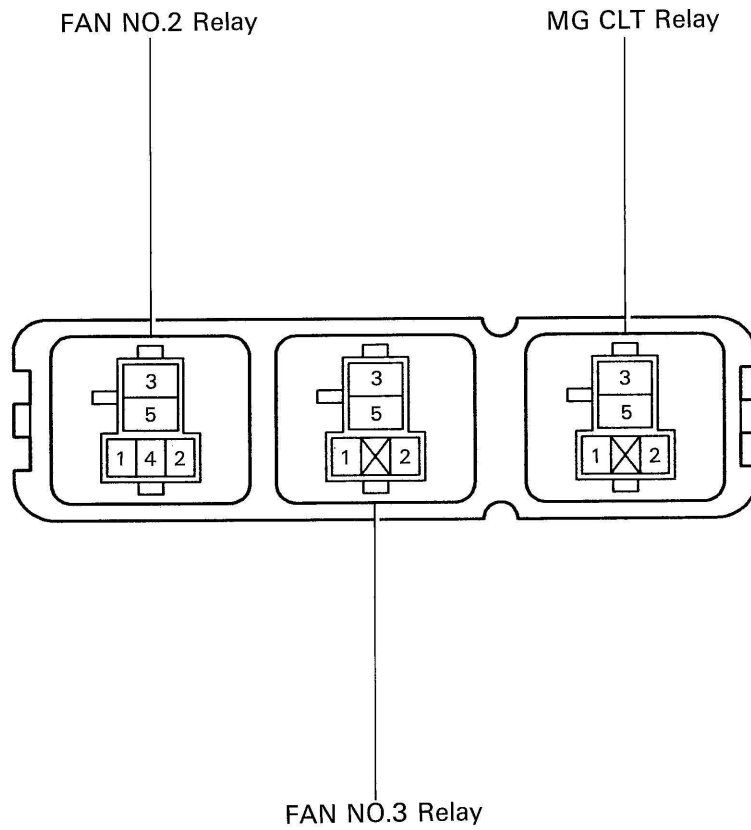


⑦ : R/B No.7

Radiator Upper Support RH (See Page 50)

(w/ Daytime Running Light)

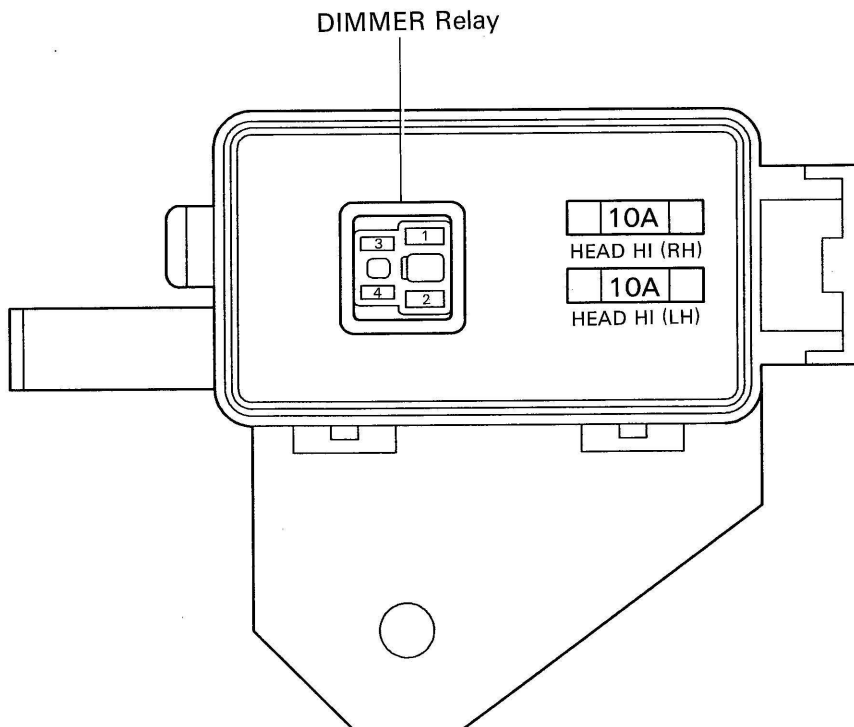


Fusible Link Block	Engine Compartment Left (See Page 50)
	(Inside Engine Room J/B)

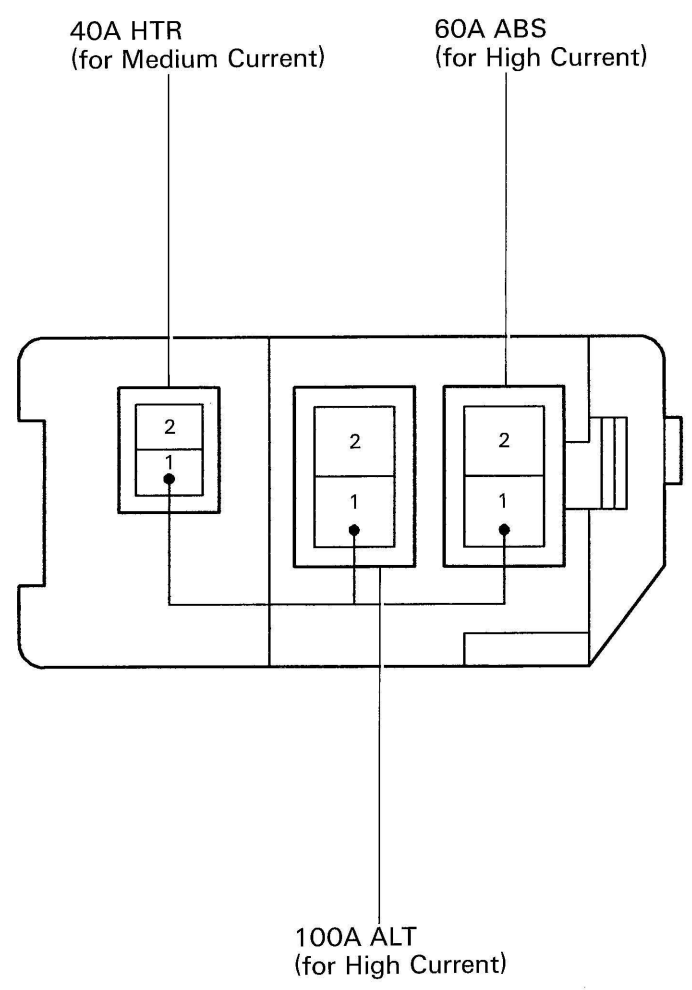


(Inner Circuit : See Page 62)


ENGINE

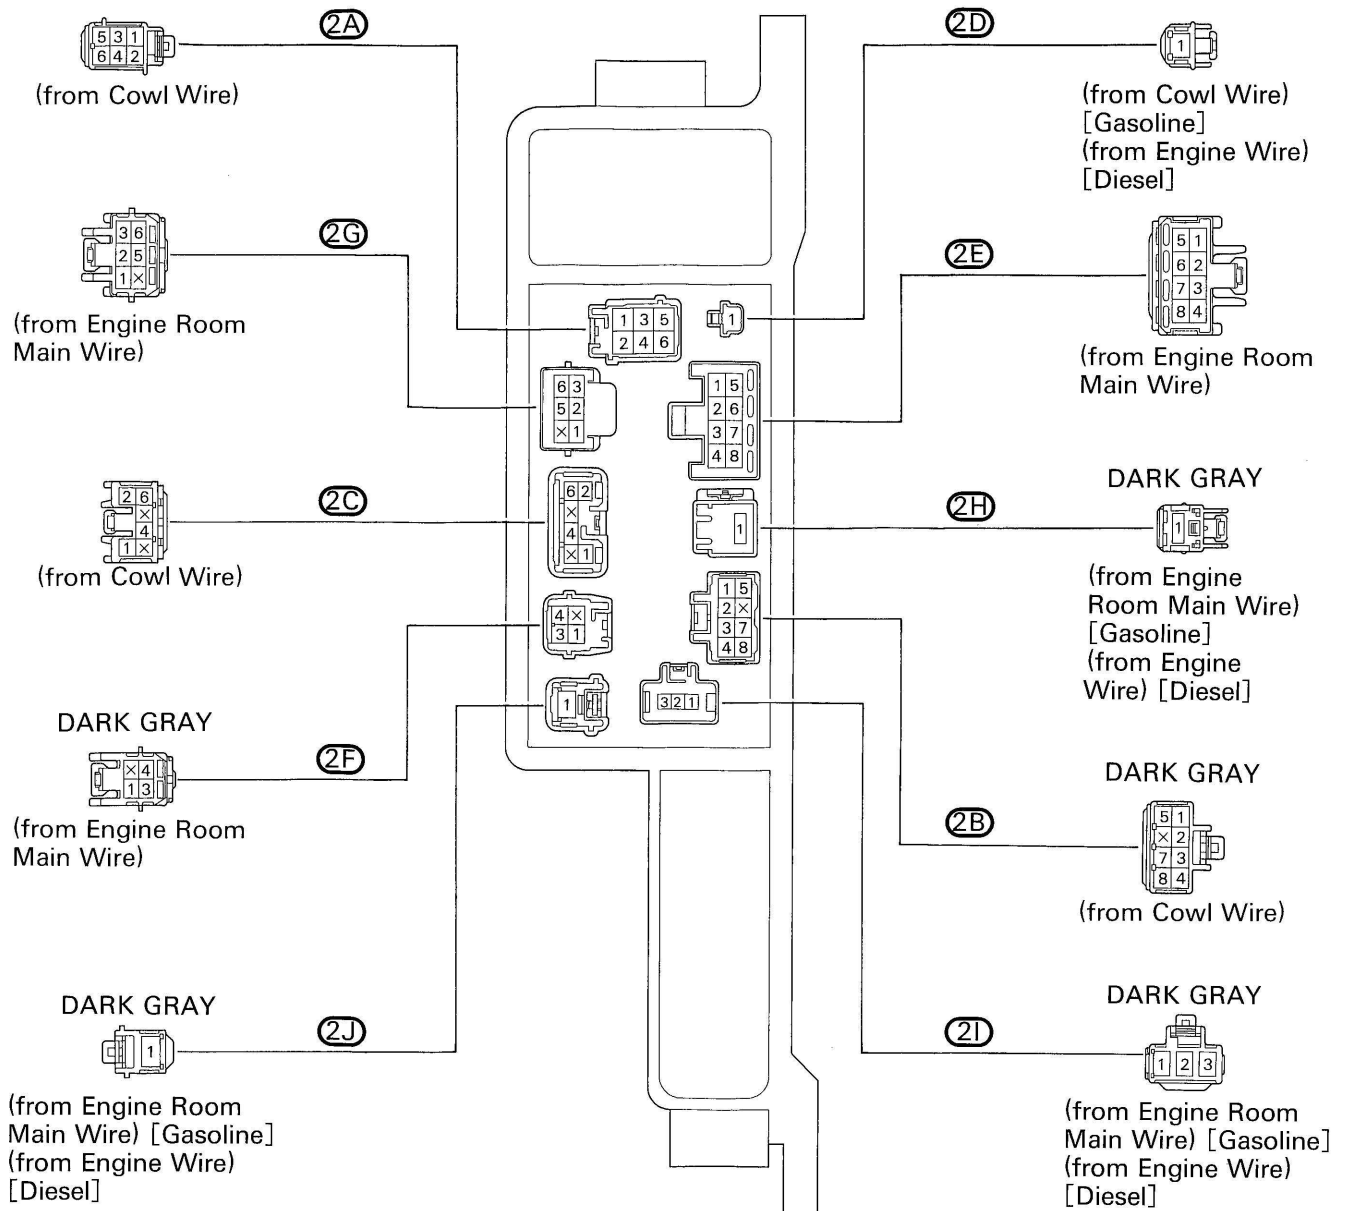

F RELAY LOCATIONS


○ : Instrument Panel J/B Lower Finish Panel (See Page 51)

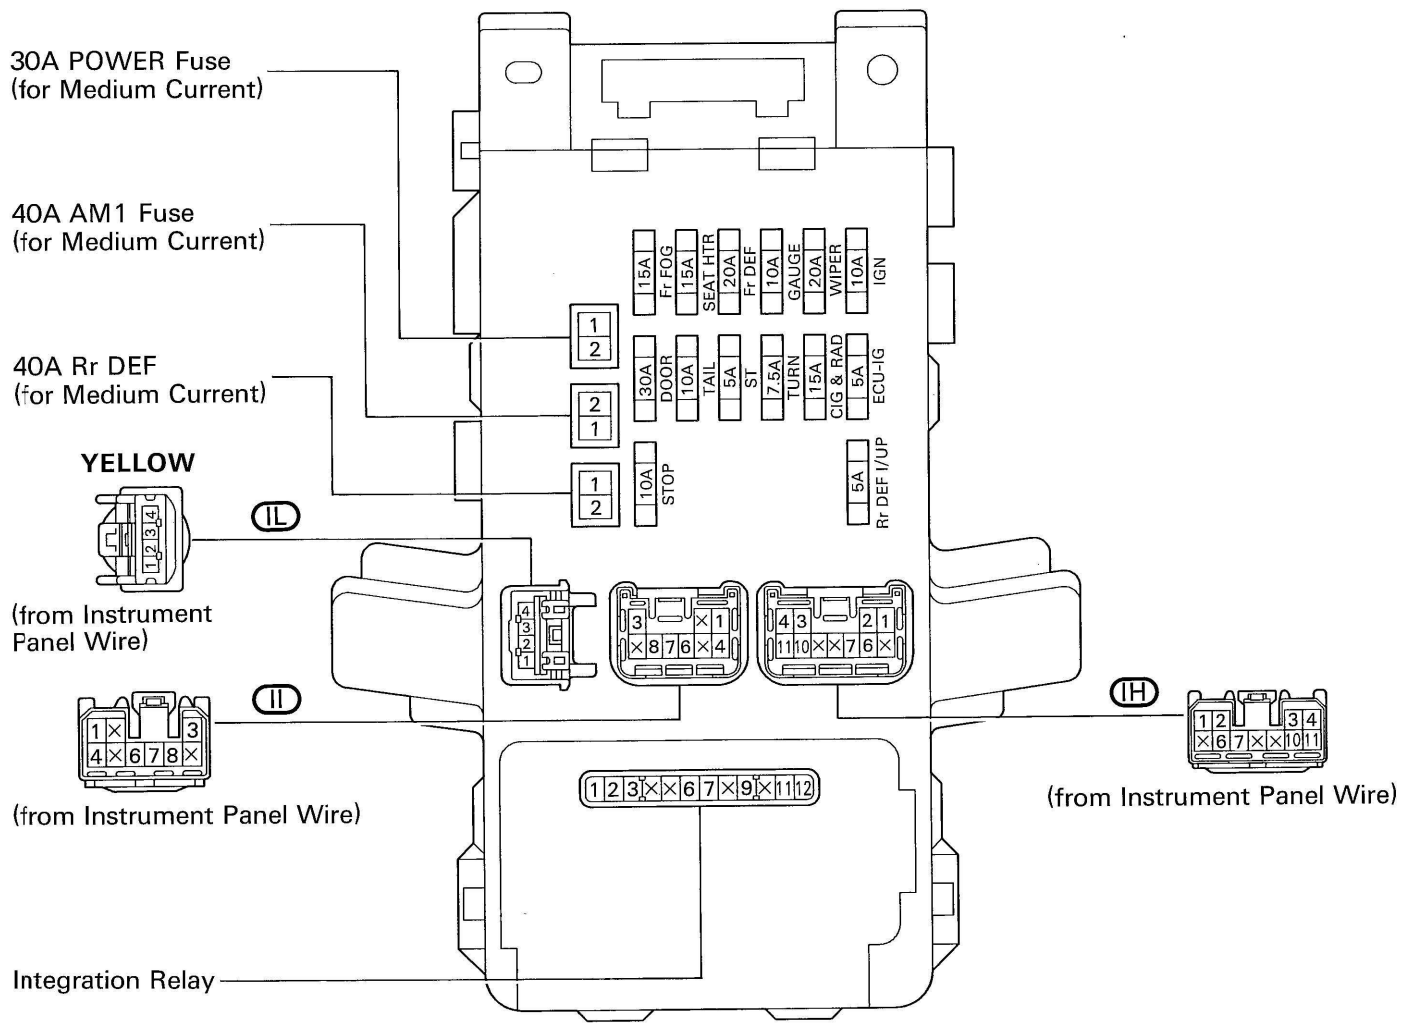

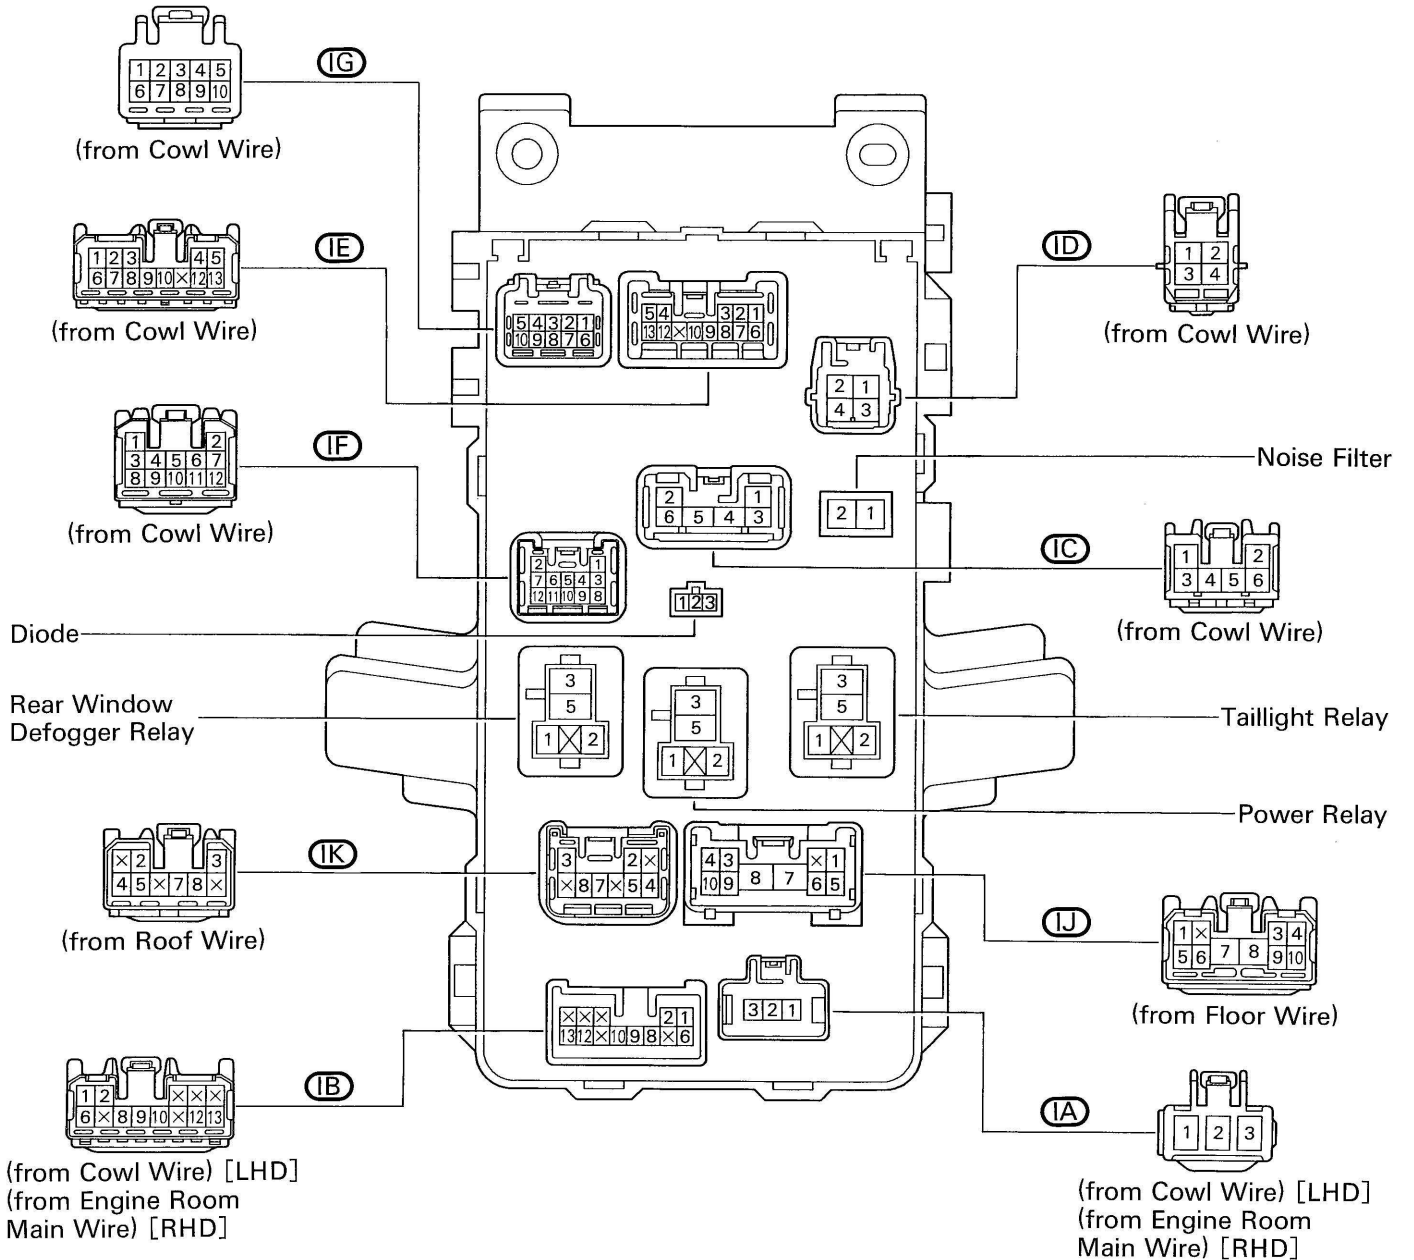


F RELAY LOCATIONS

○ : Center J/B	LHD : Left Side of Heater Unit (See Page 51)
	RHD : Right Side of Heater Unit (See Page 51)

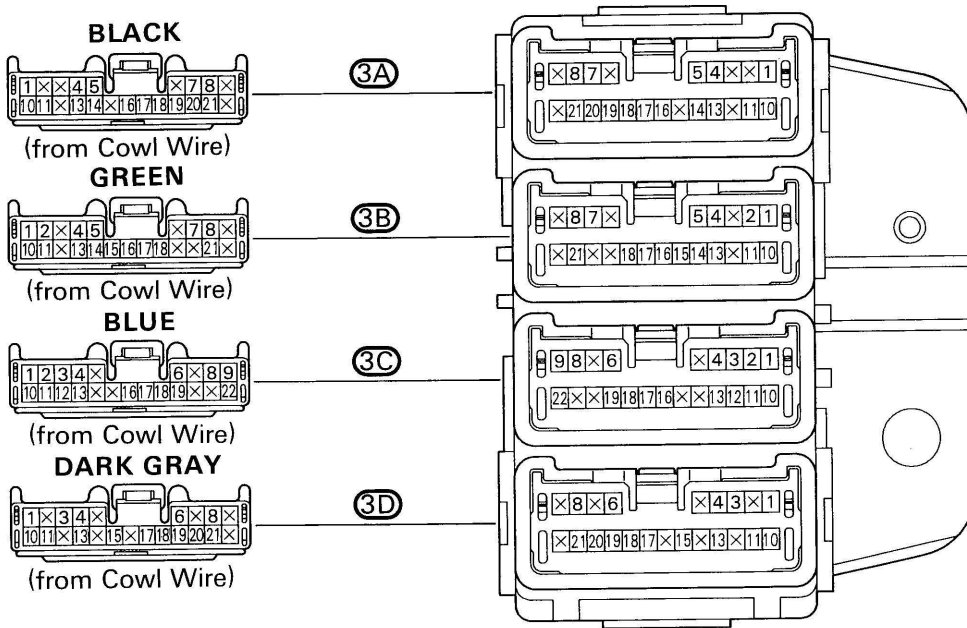


(Inner Circuit : See Page 64)

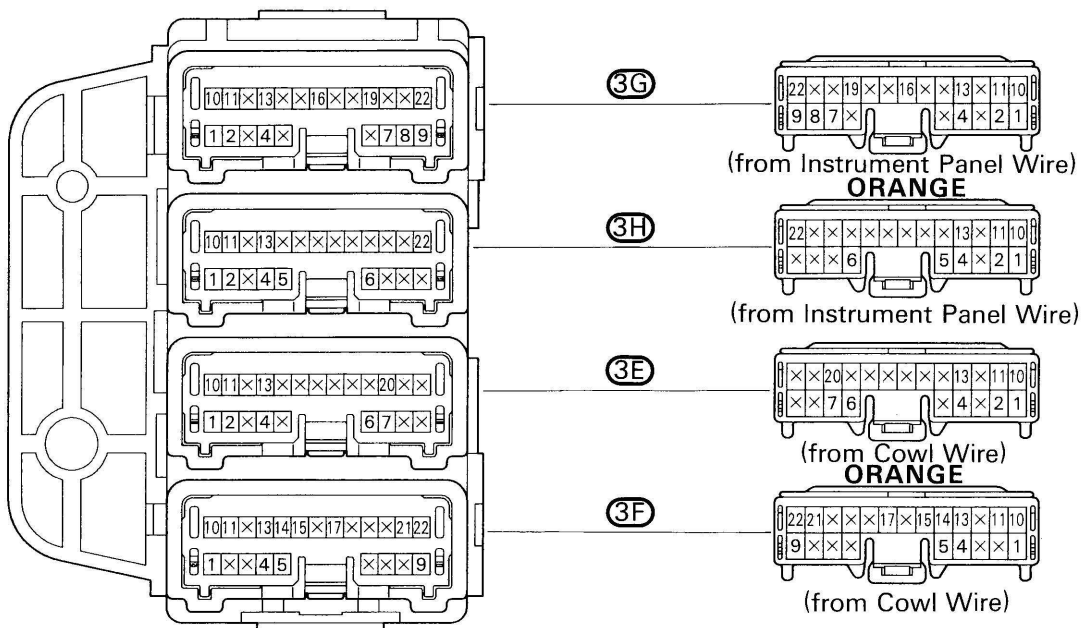

F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

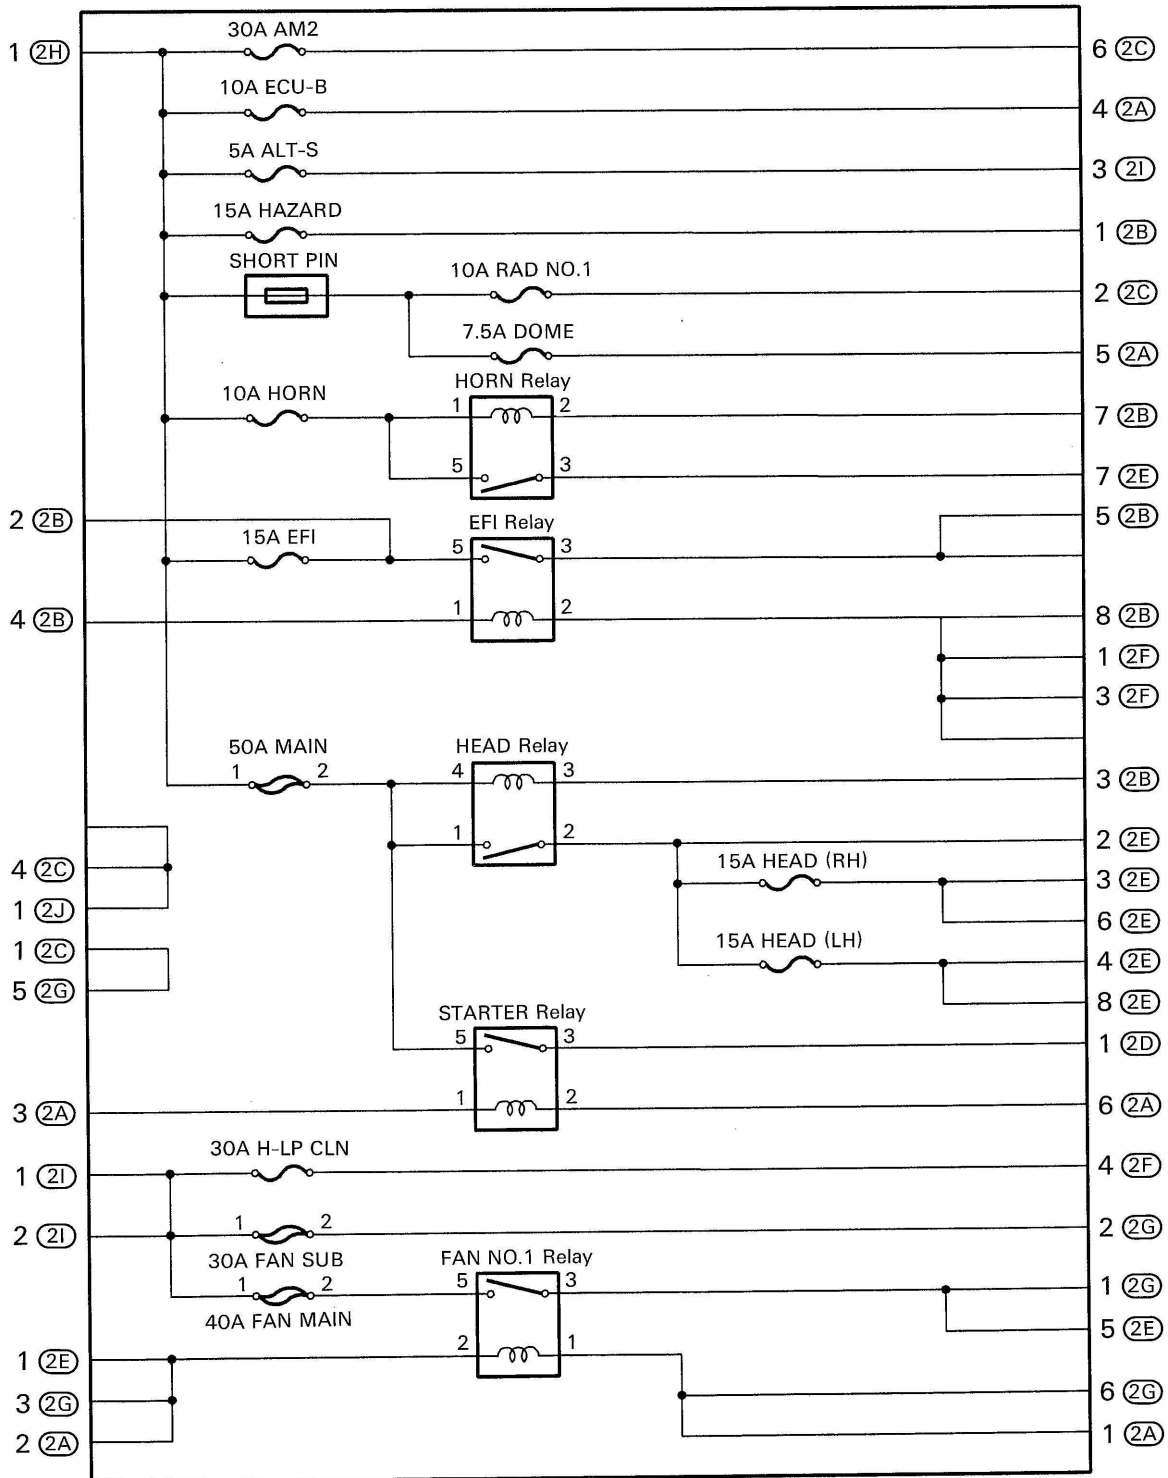

[Instrument Panel J/B Inner Circuit]

