

# FOREWORD

To assist you in your sales and service activities, this manual explains the main characteristics of the new AVENSIS/CORONA, in particular providing a technical explanation of the construction and operation of new mechanisms and new technology used.

Applicable models: AT220, 221, ST220, CT220, CDT220 Series

This manual is divided into 4 sections.

- 1. Introduction** – Exterior appearance and model code.
- 2. New Model Outline** – Explanation of the product to give a general understanding of its features.
- 3. Technical Description** – Technical explanation of the construction and operation of each new system and component.
- 4. Appendix** – Major technical specifications of the vehicle.

**CAUTION, NOTICE, REFERENCE and NOTE** are used in the following ways:

<b>CAUTION</b>	A potentially hazardous situation which could result in injury to people occur if instructions on what to do or not to do are ignored.
<b>NOTICE</b>	Damage to the vehicle or components may occur if instructions on what to do or not to do are ignored.
<b>REFERENCE</b>	Explains the theory behind mechanisms and techniques.
<b>NOTE</b>	Notes or comments not included under the above 3 titles.

For detailed service specifications and repair procedures, refer to the following Repair Manuals:

Manual Name	Pub. No.
• AVENSIS/CORONA Chassis and Body Repair Manual	RM599E
• 4A-F, FE/7A-FE Engine Repair Manual Supplement	RM611E
• 3S-FE Engine Repair Manual Supplement	RM609E
• 2C-TE Engine Repair Manual Supplement	RM612E
• AVENSIS/CORONA Electrical Wiring Diagram	EWD330Y

All information contained herein is the most up-to-date at the time of publication. We reserve the right to make changes without prior notice.

This manual is for the exclusive use of the dealers.

**TOYOTA MOTOR CORPORATION**

**© 1997 TOYOTA MOTOR CORPORATION**  
All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.  
First Printing: Nov. 26, 1997 01-971126-00