


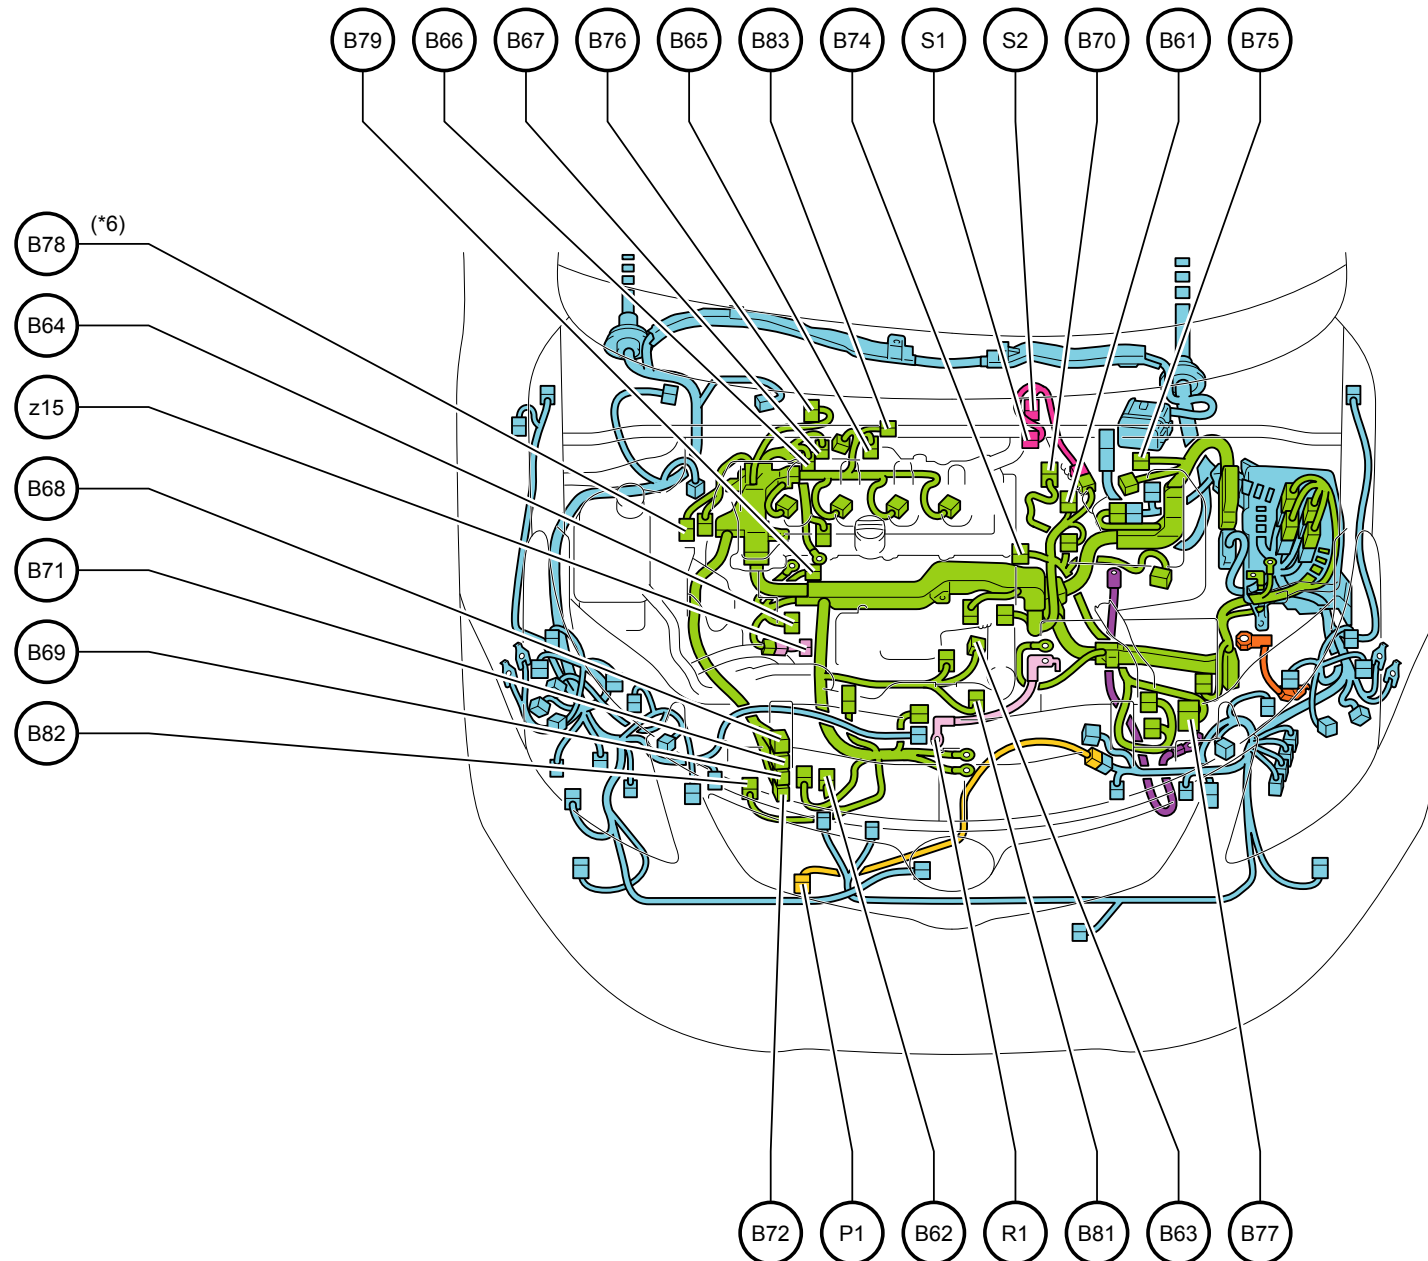

* 6: From Nov. 2011 Production

- B 61 Suction Control Valve
- B 62 Engine Oil Level Sensor
- B 63 Turbo Pressure Sensor
- B 64 Fuel Pressure Sensor
- B 65 Vacuum Regulating Valve Assembly (EGR)
- B 66 Rear Exhaust Gas Temperature Sensor
- B 67 Front Exhaust Gas Temperature Sensor
- B 68 Injector Driver
- B 69 Injector Driver
- B 70 Air Fuel Ratio Sensor (Bank 1 Sensor 2)
- B 71 Injector Driver
- B 72 Injector Driver
- B 74 Exhaust Fuel Addition Injector Assembly
- B 75 Fuel Sedimentary Level Warning Switch
- B 76 Differential Pressure Sensor
- B 77 Transmission Control ECU Assembly
- B 78 Cam Position Sensor
- B 79 No. 1 Glow Plug Connector
- B 81 Oil Pressure Sender Gage Assembly
- B 82 Differential Pressure Sensor Assembly
- B 83 Diesel Engine Coolant Temperature Sensor

- P 1 Diesel Turbo Inlet Air Temperature Sensor

- R 1 Starter Assembly

- S 1 Turbocharger Sub-Assembly
- S 2 Turbocharger Sub-Assembly

- z 15 Electric EGR Control Valve Assembly

