



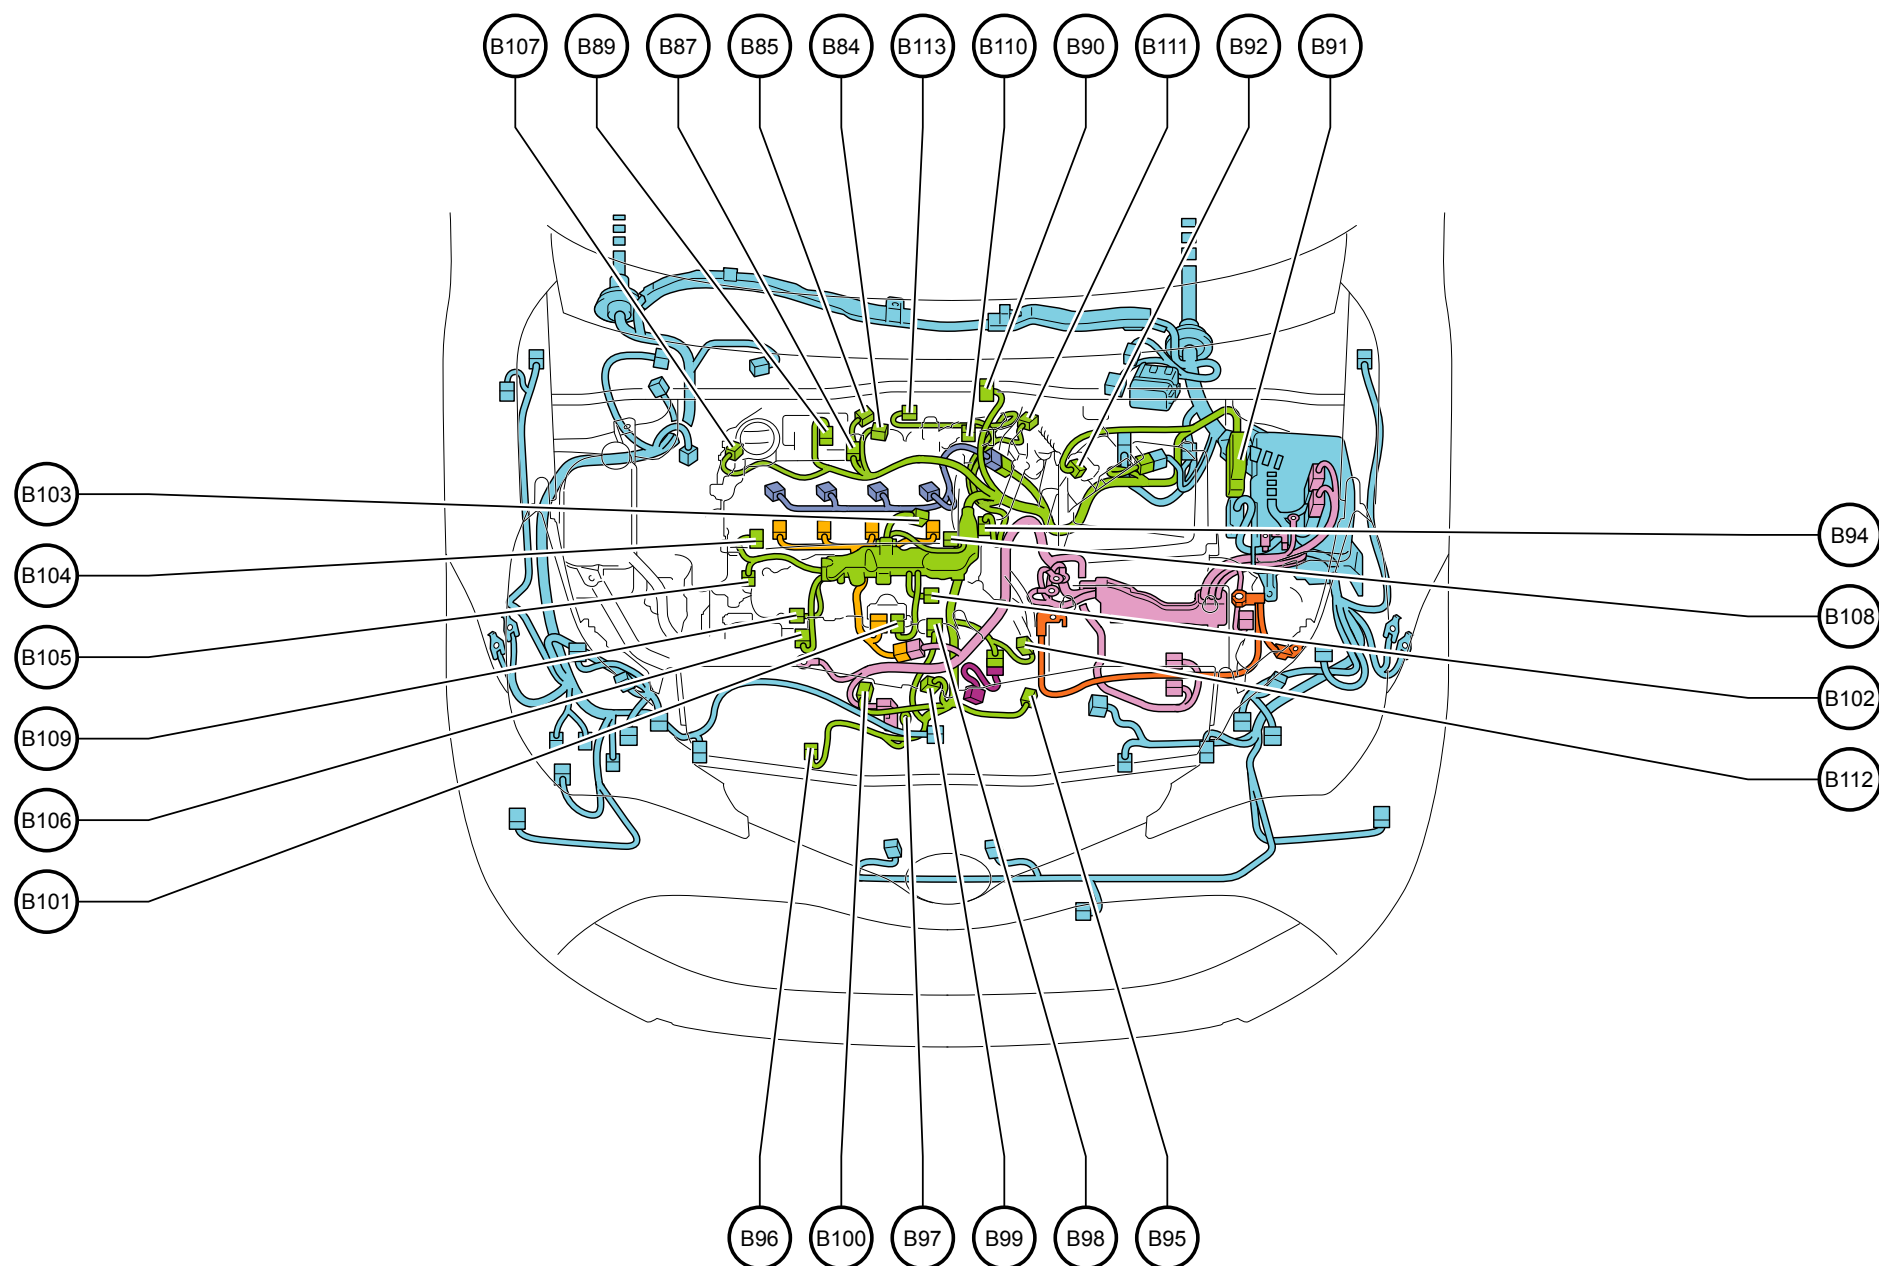


- B 84 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 85 Exhaust Gas Temperature Sensor
- B 87 VSV (EGR)
- B 89 No. 2 Exhaust Gas Temperature Sensor
- B 90 Turbocharger Sub-Assembly
- B 91 ECM
- B 92 Mass Air Flow Meter
- B 94 Crank Position Sensor
- B 95 Intake Air Temperature Sensor
- B 96 Cooler Compressor Assembly
- B 97 Starter Assembly
- B 98 Engine Oil Pressure Switch Assembly
- B 99 Suction Control Valve
- B 100 Fuel Temperature Sensor
- B 101 Glow Plug Controller
- B 102 Turbo Pressure Sensor
- B 103 Cam Position Sensor
- B 104 Rail Pressure Sensor
- B 105 E.F.I. Engine Coolant Temperature Sensor
- B 106 Generator Assembly
- B 107 Differential Pressure Sensor
- B 108 Fuel Pressure Control Valve
- B 109 Swirl Control Valve
- B 110 Exhaust Gas Pressure Sensor
- B 111 EGR Valve Assembly
- B 112 EGR Valve Temperature Sensor
- B 113 Air Fuel Ratio Sensor (Bank 1 Sensor 2)

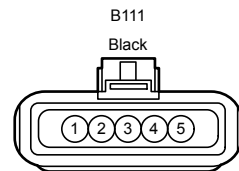

B112

Black

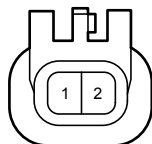

B113

Black

