


Position of Parts in Instrument Panel <LHD Before May 2015 Production>

- * 1:w/ Entry & Start System
- * 2:Automatic A/C
- * 5:w/ Lane Keeping Assist
- * 6:w/ Headlight Beam Level Control
- * 7:Refer to the Service Bulletin
for the installation position of the parts.
- * 8:Before Jun. 2010 Production
- * 10:Before Nov. 2011 Production
- * 15:Before Feb. 2014 Production

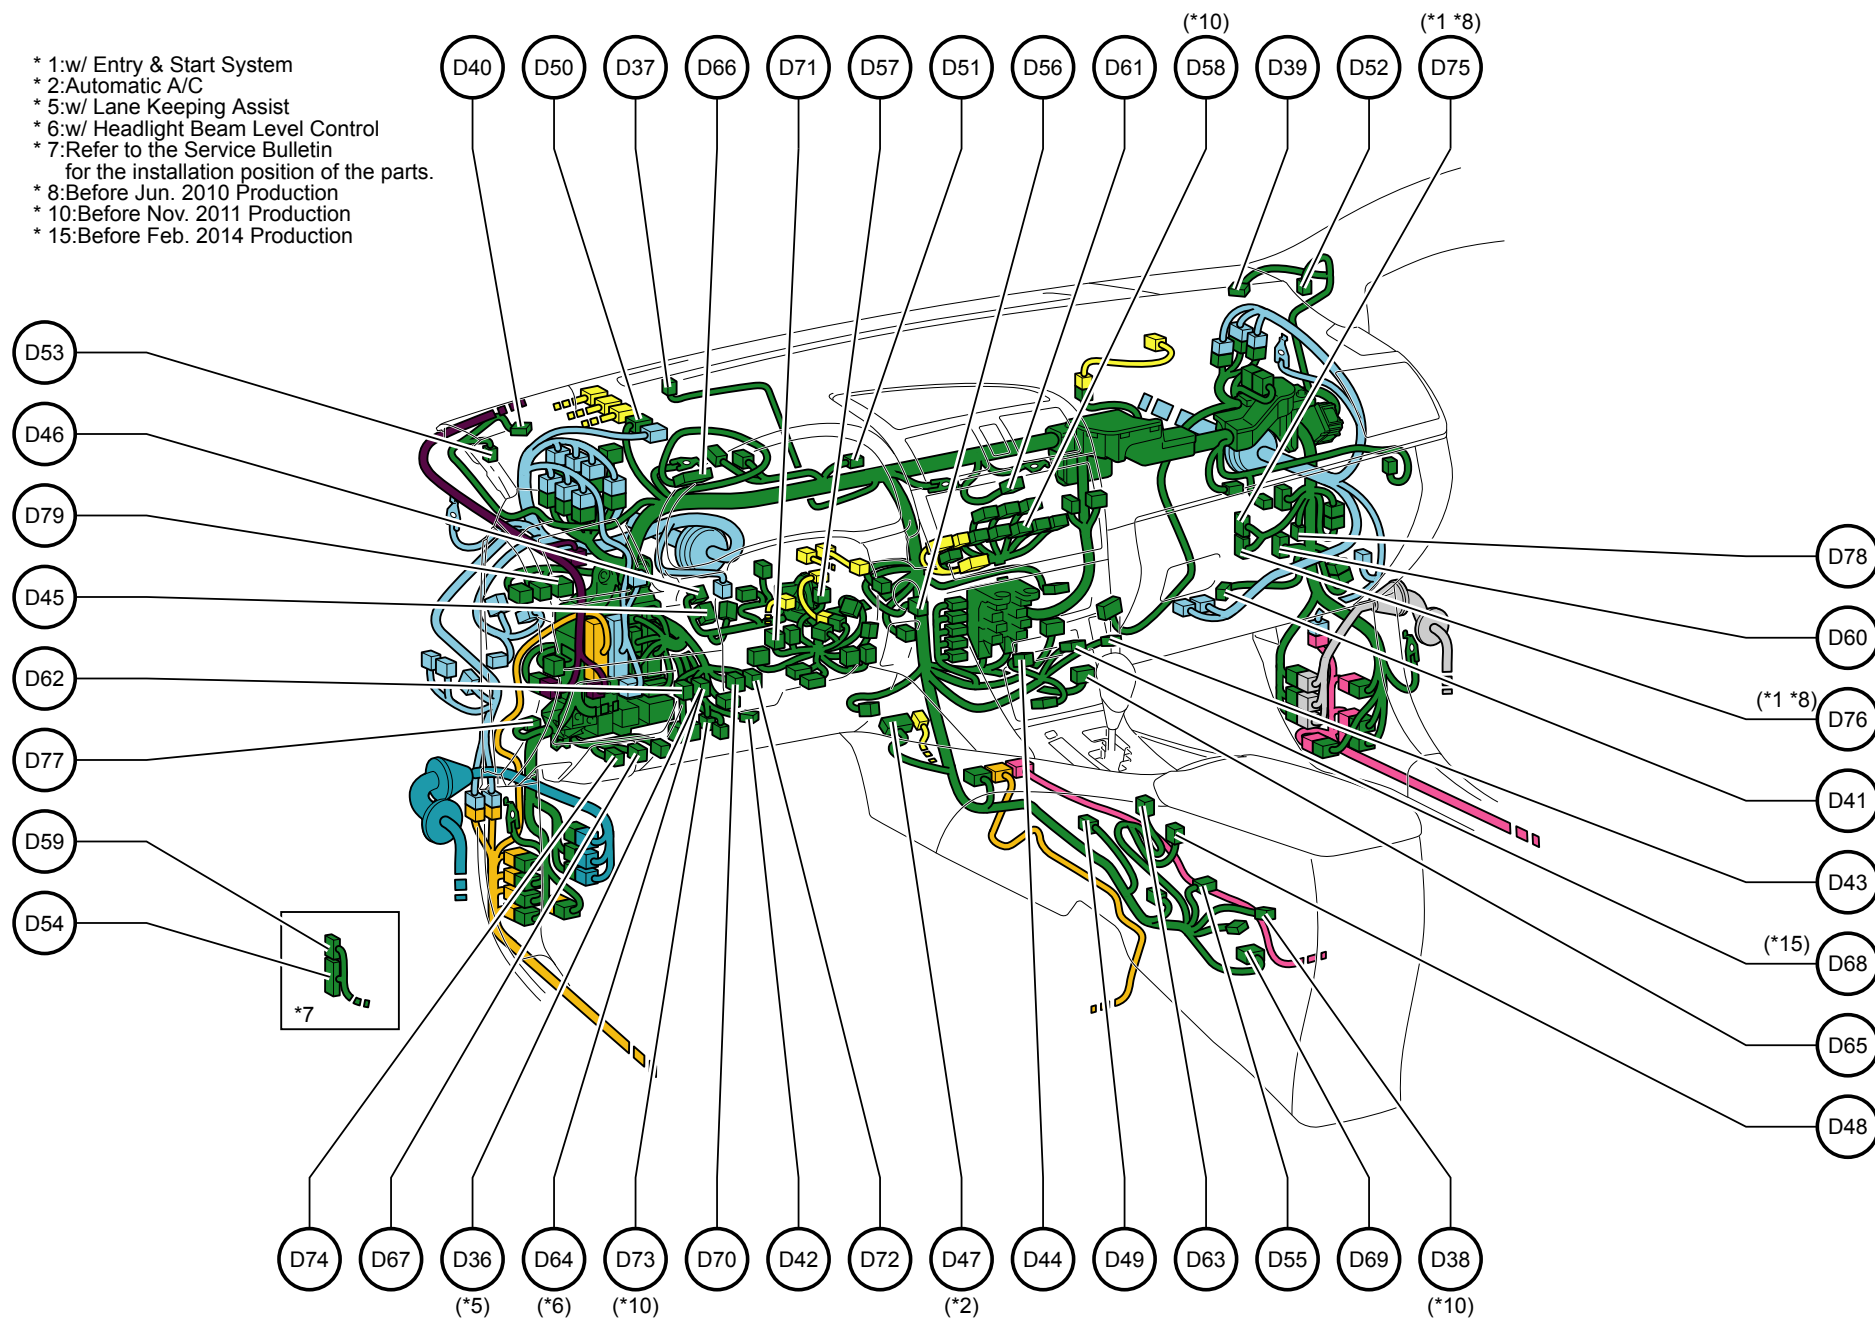

- D 36 Lane Keeping Assist Main Switch Assembly
- D 37 Solar Sensor
- D 38 Stereo Jack Adapter Assembly
- D 39 Front No. 1 Speaker RH
- D 40 Front No. 1 Speaker LH
- D 41 No. 1 Interior Illumination Light Assembly RH
- D 42 No. 1 Interior Illumination Light Assembly LH
- D 43 Seat Heater Switch RH
- D 44 Seat Heater Switch LH
- D 45 Multiplex Tilt and Telescopic ECU
- D 46 Multiplex Tilt and Telescopic ECU
- D 47 Air Conditioning Amplifier Assembly
- D 48 Shift Position Indicator
- D 49 Transmission Control Switch
- D 50 Power Steering ECU Assembly
- D 51 Front No. 3 Speaker
- D 52 Front No. 2 Speaker RH
- D 53 Front No. 2 Speaker LH
- D 54 Certification ECU Assembly
- D 55 Front Indoor Electrical Key Oscillator
- D 56 Engine Switch
- D 57 Steering Lock Actuator Assembly
- D 58 Radio Receiver Assembly
- D 59 Certification ECU Assembly
- D 60 Windshield Wiper Relay Assembly
- D 61 Hazard Warning Signal Switch Assembly
- D 62 Headlight Cleaner Switch Assembly
- D 63 Pattern Select Switch Assembly
- D 64 Headlight Leveling Switch
- D 65 Clearance Warning ECU Assembly
- D 66 Combination Meter
- D 67 VSC Off Switch
- D 68 Telltale Light Assembly
- D 69 Yaw Rate Sensor
- D 70 Warning Canceling Switch Assembly
- D 71 Steering Sensor
- D 72 Back Sonar or Clearance Sonar Switch Assembly
- D 73 Pre-Crash System Cancel Switch Assembly
- D 74 Fuel Lid Opener Switch
- D 75 Power Management Control ECU
- D 76 Power Management Control ECU
- D 77 Diode (Front Door Courtesy Switch LH)
- D 78 Diode (Front Door Courtesy Switch RH)
- D 79 Main Body ECU

Position of Parts in Instrument Panel <LHD Before May 2015 Production>

