


- * 2:Display Audio Type
- * 3:Except Display Audio Type
- * 4:w/ Entry & Start System
- * 5:w/o Entry & Start System

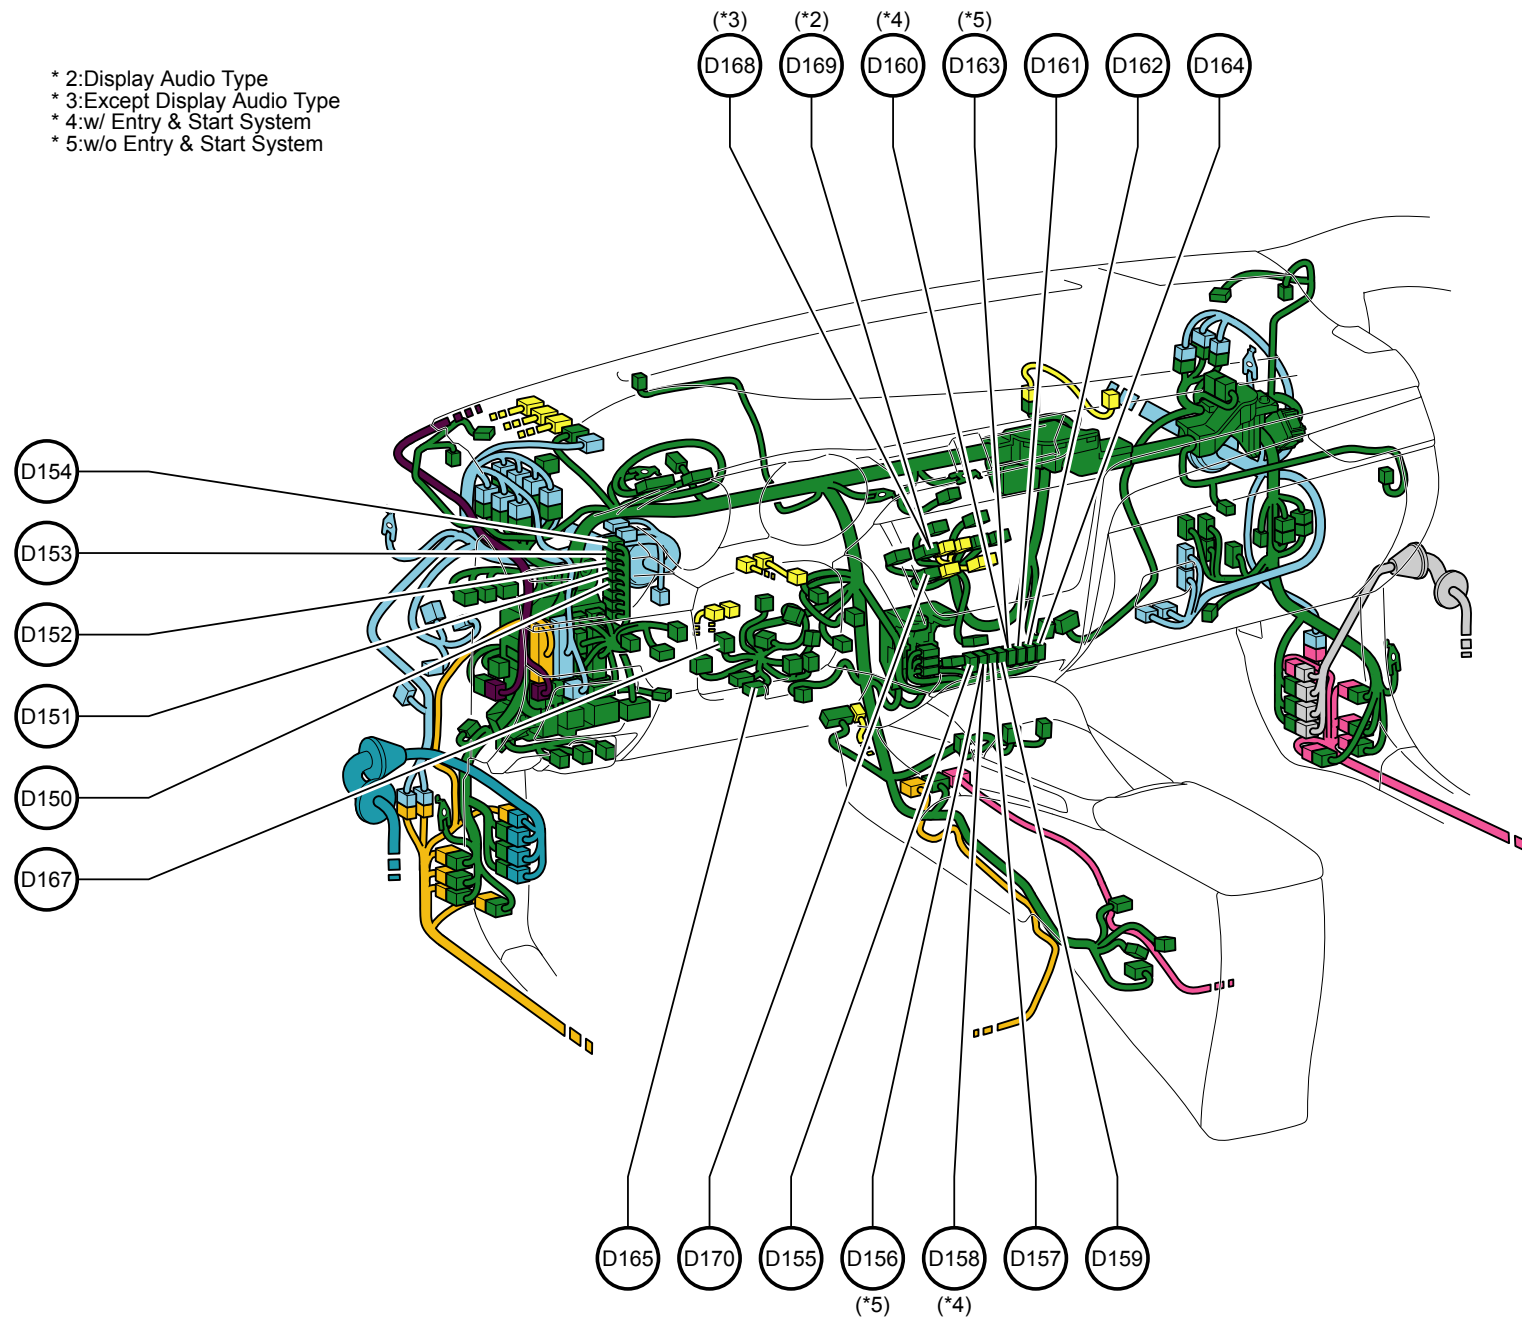

D 150	Junction Connector
D 151	Junction Connector
D 152	Junction Connector
D 153	Junction Connector
D 154	Junction Connector
D 155	Junction Connector
D 156	Junction Connector
D 157	Junction Connector
D 158	Junction Connector
D 159	Junction Connector
D 160	Junction Connector
D 161	Junction Connector
D 162	Junction Connector
D 163	Junction Connector
D 164	Junction Connector
D 165	Spiral Cable Sub-Assembly
D 167	Steering Sensor
D 168	Radio Receiver Assembly
D 169	Radio & Display Receiver Assembly
D 170	Extension Module

Position of Parts in Instrument Panel <LHD From May 2015 Production>

