

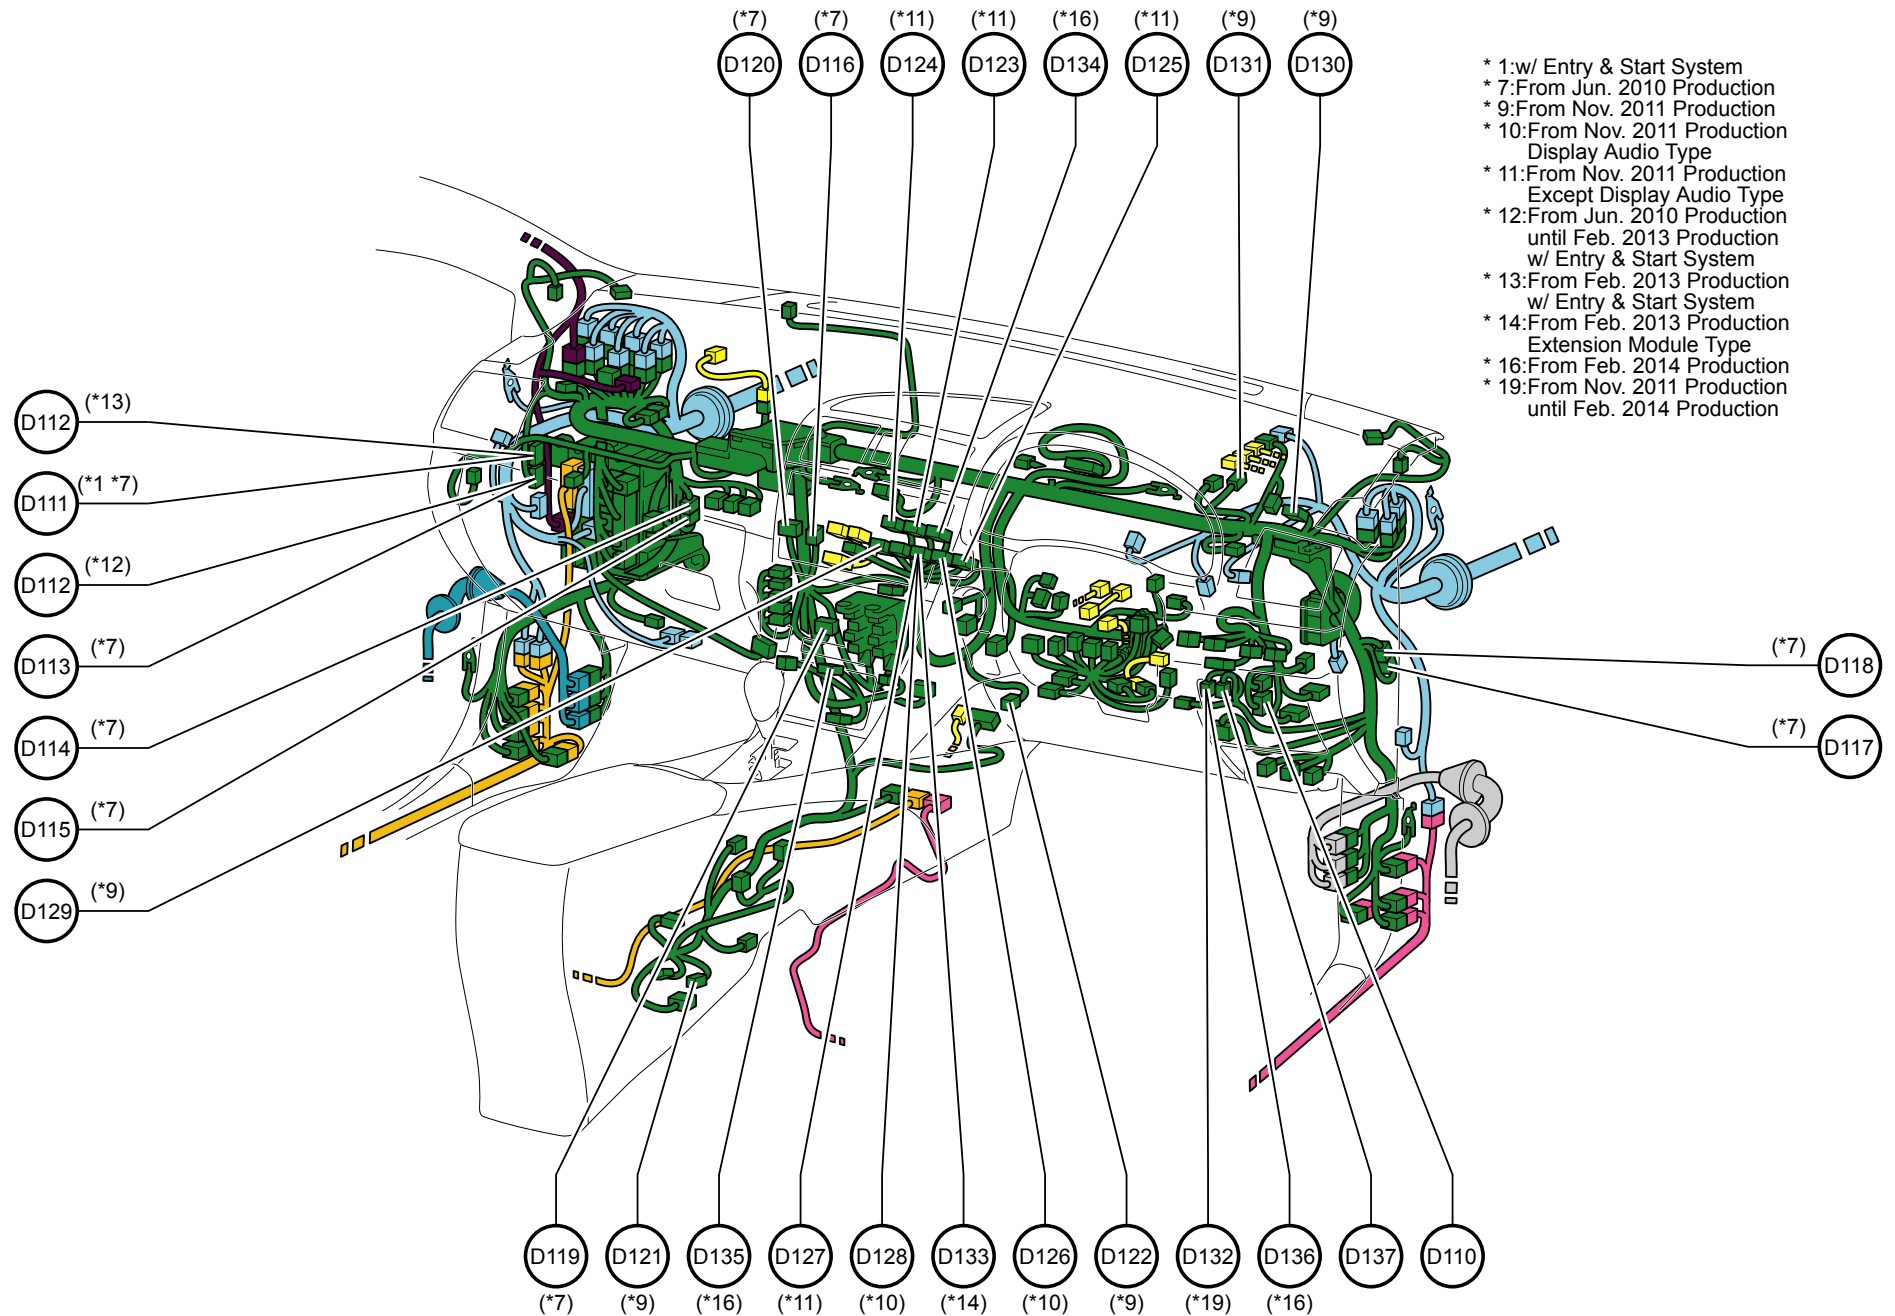
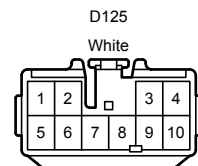
 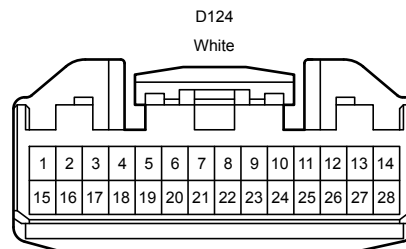
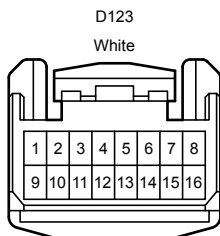

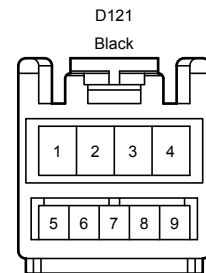
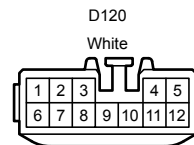
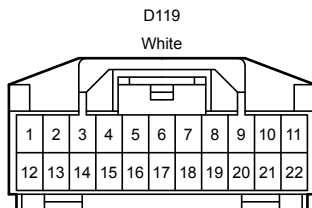
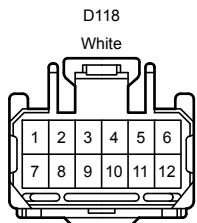
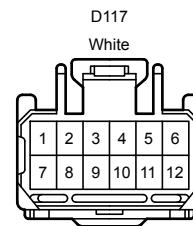
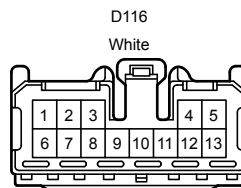
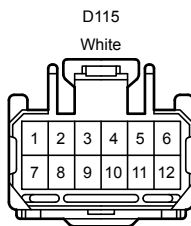
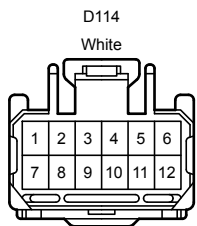
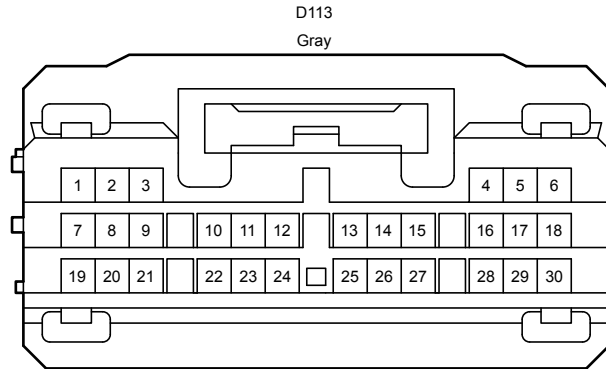
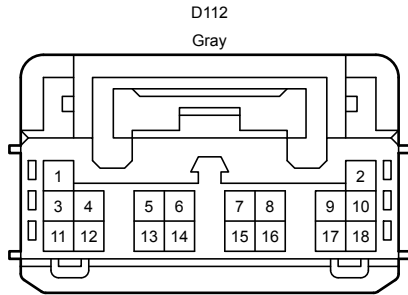


Position of Parts in Instrument Panel <RHD Before May 2015 Production>

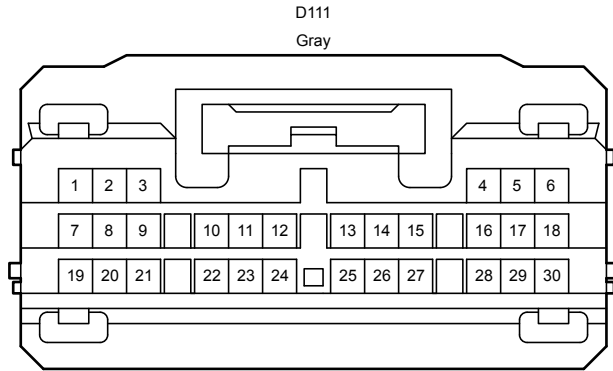

- D 110 Seat Belt Control ECU Assembly
- D 111 Power Management Control ECU
- D 112 Power Management Control ECU
- D 113 Power Management Control ECU
- D 114 Junction Connector
- D 115 Junction Connector
- D 116 Junction Connector
- D 117 Junction Connector
- D 118 Junction Connector
- D 119 Junction Connector
- D 120 Junction Connector
- D 121 Stereo Jack Adapter Assembly
- D 122 Lower No. 1 Instrument Panel Airbag Assembly
- D 123 Radio & Display Receiver Assembly
- D 124 Radio & Display Receiver Assembly
- D 125 Radio & Display Receiver Assembly
- D 126 Radio & Display Receiver Assembly
- D 127 Radio Receiver Assembly
- D 128 Radio & Display Receiver Assembly
- D 129 Radio Receiver Assembly
- D 130 Turn Signal Flasher Assembly
- D 131 No. 1 Clearance Warning Buzzer
- D 132 Pre-Crash System Cancel Switch Assembly
- D 133 Extension Module
- D 134 Radio & Display Receiver Assembly
- D 135 Telltale Light Assembly
- D 136 Pre-Crash System Cancel Switch Assembly
- D 137 Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)

Position of Parts in Instrument Panel <RHD Before May 2015 Production>

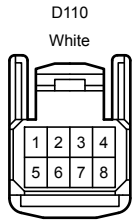

Position of Parts in Instrument Panel <RHD Before May 2015 Production>

