

Position of Parts in Instrument Panel <RHD From May 2015 Production>

* 1:Refer to the Service Bulletin
for the installation position of the parts.


* 2:Display Audio Type

* 3:Except Display Audio Type

* 4:w/ Entry & Start System


* 5:w/o Entry & Start System

* 7:Manual A/C

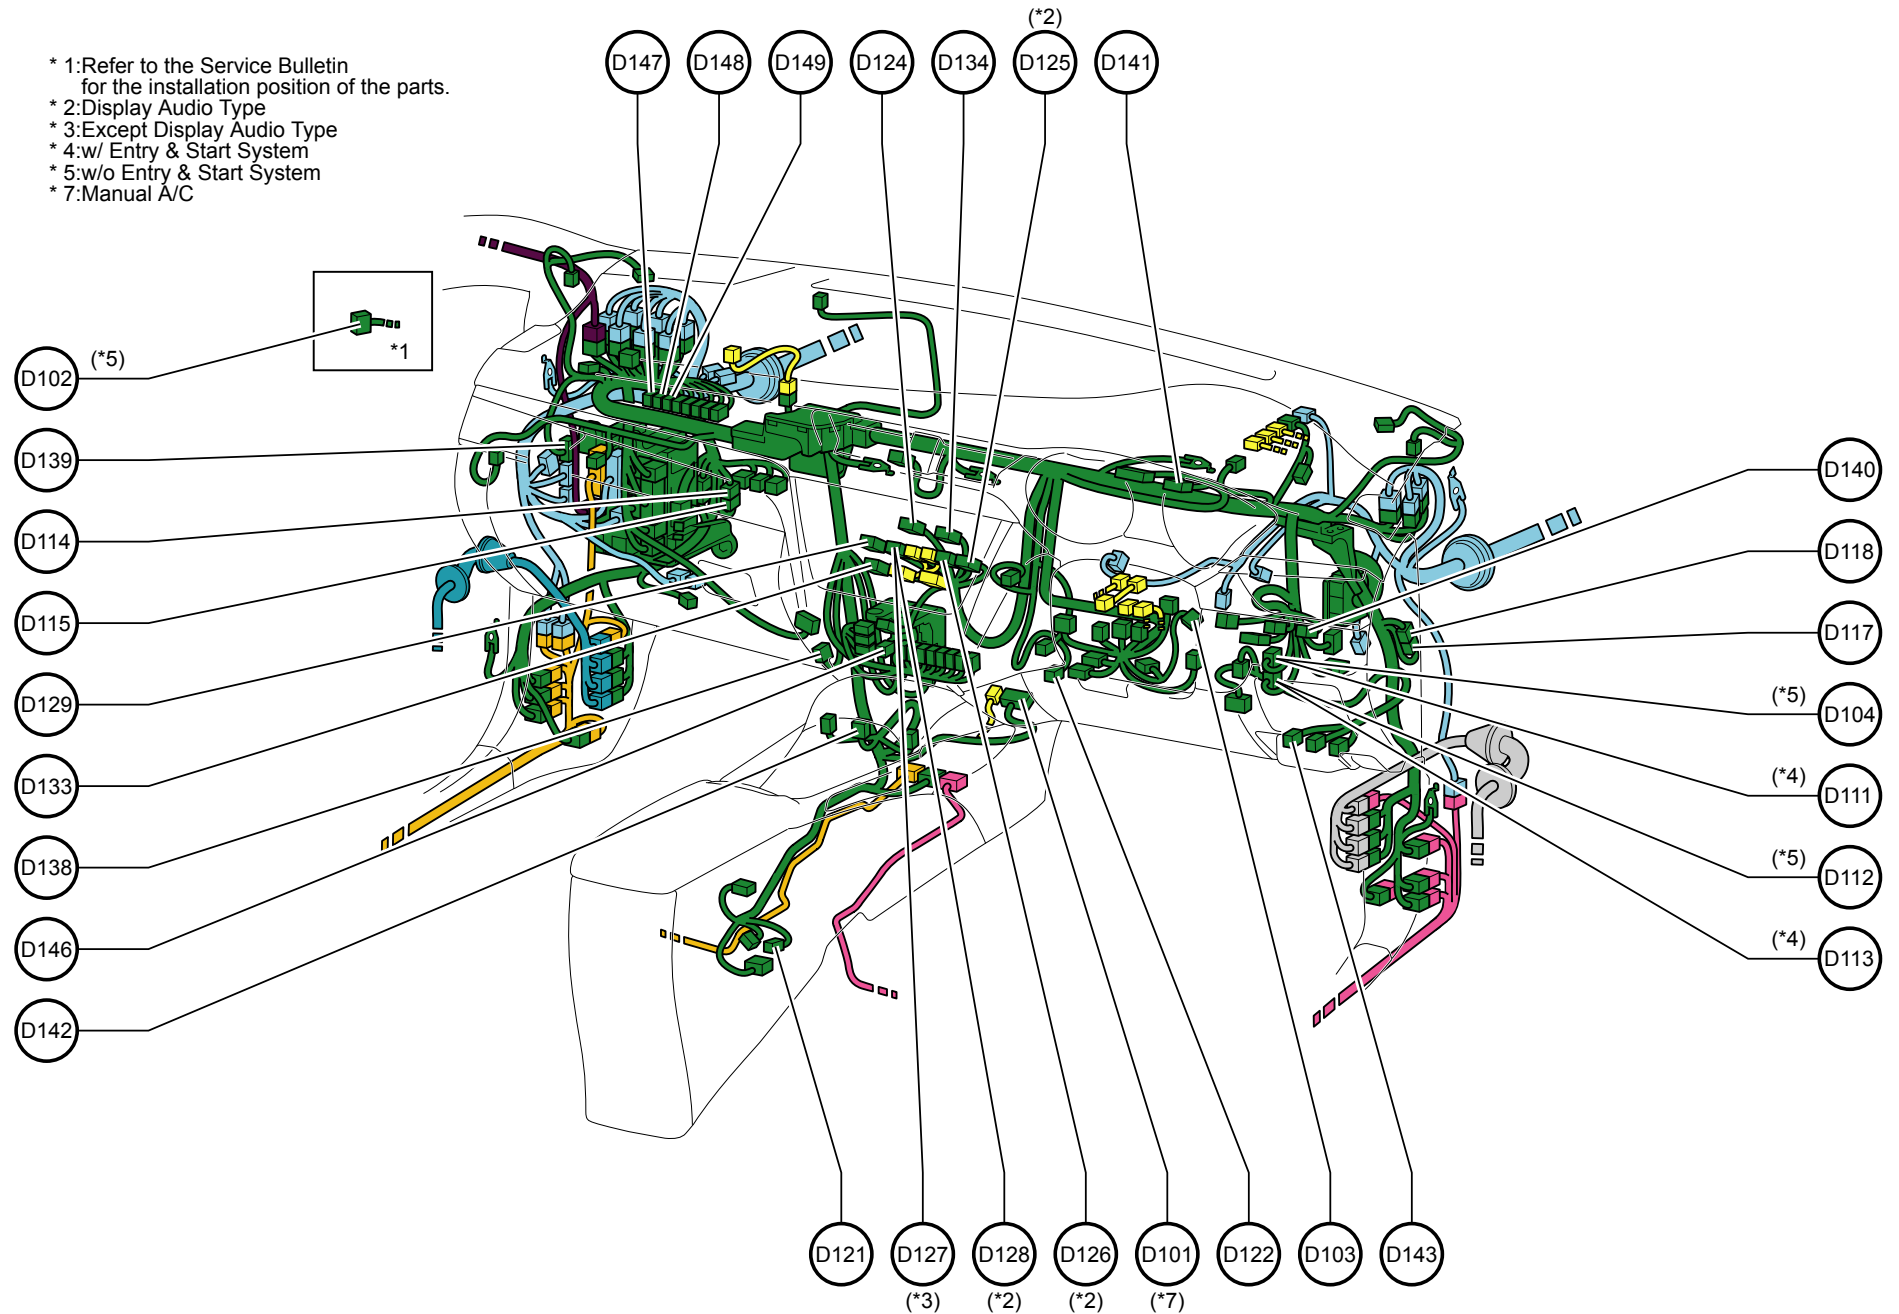


D 101	Air Conditioning Amplifier Assembly
D 102	Transponder Key ECU Assembly
D 103	Transponder Key Amplifier
D 104	Power Management Control ECU
D 111	Power Management Control ECU
D 112	Power Management Control ECU
D 113	Power Management Control ECU
D 114	Junction Connector
D 115	Junction Connector
D 117	Junction Connector
D 118	Junction Connector
D 121	Stereo Jack Adapter Assembly
D 122	Lower No. 1 Instrument Panel Airbag Assembly
D 124	Radio & Display Receiver Assembly
D 125	Radio & Display Receiver Assembly
D 126	Radio & Display Receiver Assembly
D 127	Radio Receiver Assembly
D 128	Radio & Display Receiver Assembly
D 129	Radio Receiver Assembly
D 133	Extension Module
D 134	Radio & Display Receiver Assembly
D 138	Door Control Battery
D 139	Engine Stop and Start ECU
D 140	ECO Run Cancel Switch Assembly
D 141	Combination Meter
D 142	Telltale Light Assembly
D 143	Pre-Crash System Cancel Switch Assembly
D 146	Interior Illumination Light Assembly No. 1
D 147	Junction Connector
D 148	Junction Connector
D 149	Junction Connector


D101
White

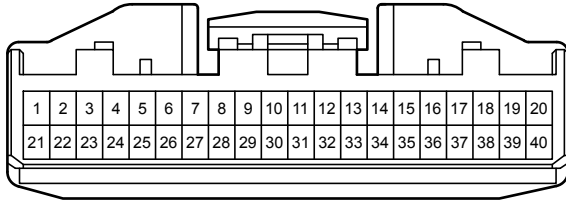


D102
White

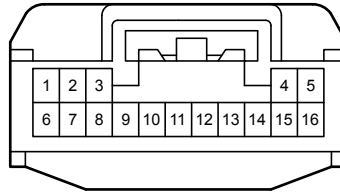


D103
Black

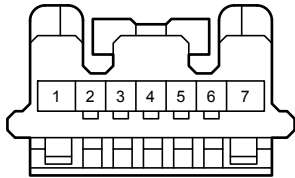


D104
White

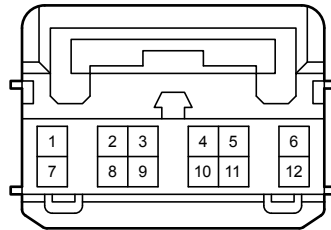


D111
Gray

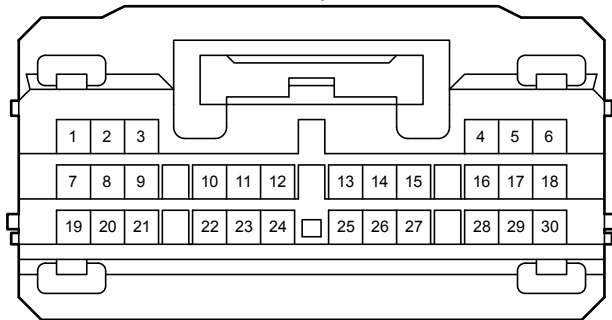


D112
Gray

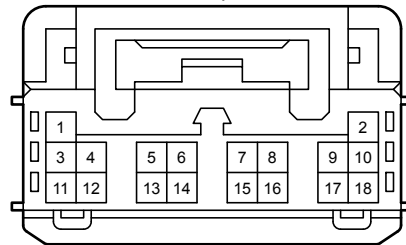


D113
Gray

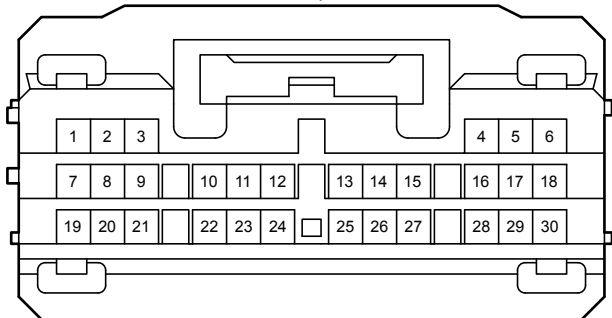


D114
White

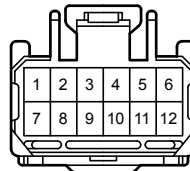


D115
White

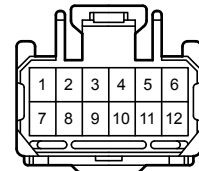


D117
White

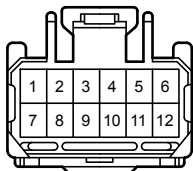


D118
White

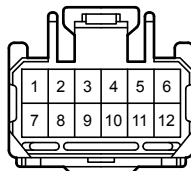

D121
Black

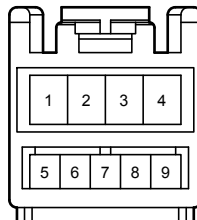

D122
Black

 

Position of Parts in Instrument Panel <RHD From May 2015 Production>

