


Position of Parts in Seat <RHD>

- * 1:w/ Pre-Crash Safety System
- * 2:w/o Pre-Crash Safety System
- * 3:w/ Power Seat
- * 4:w/o Power Seat
- * 5:w/ Pre-Crash Safety System
Before May 2015 Production
- * 6:w/o Pre-Crash Safety System
Before May 2015 Production
- * 7:From May 2015 Production












 




 



 
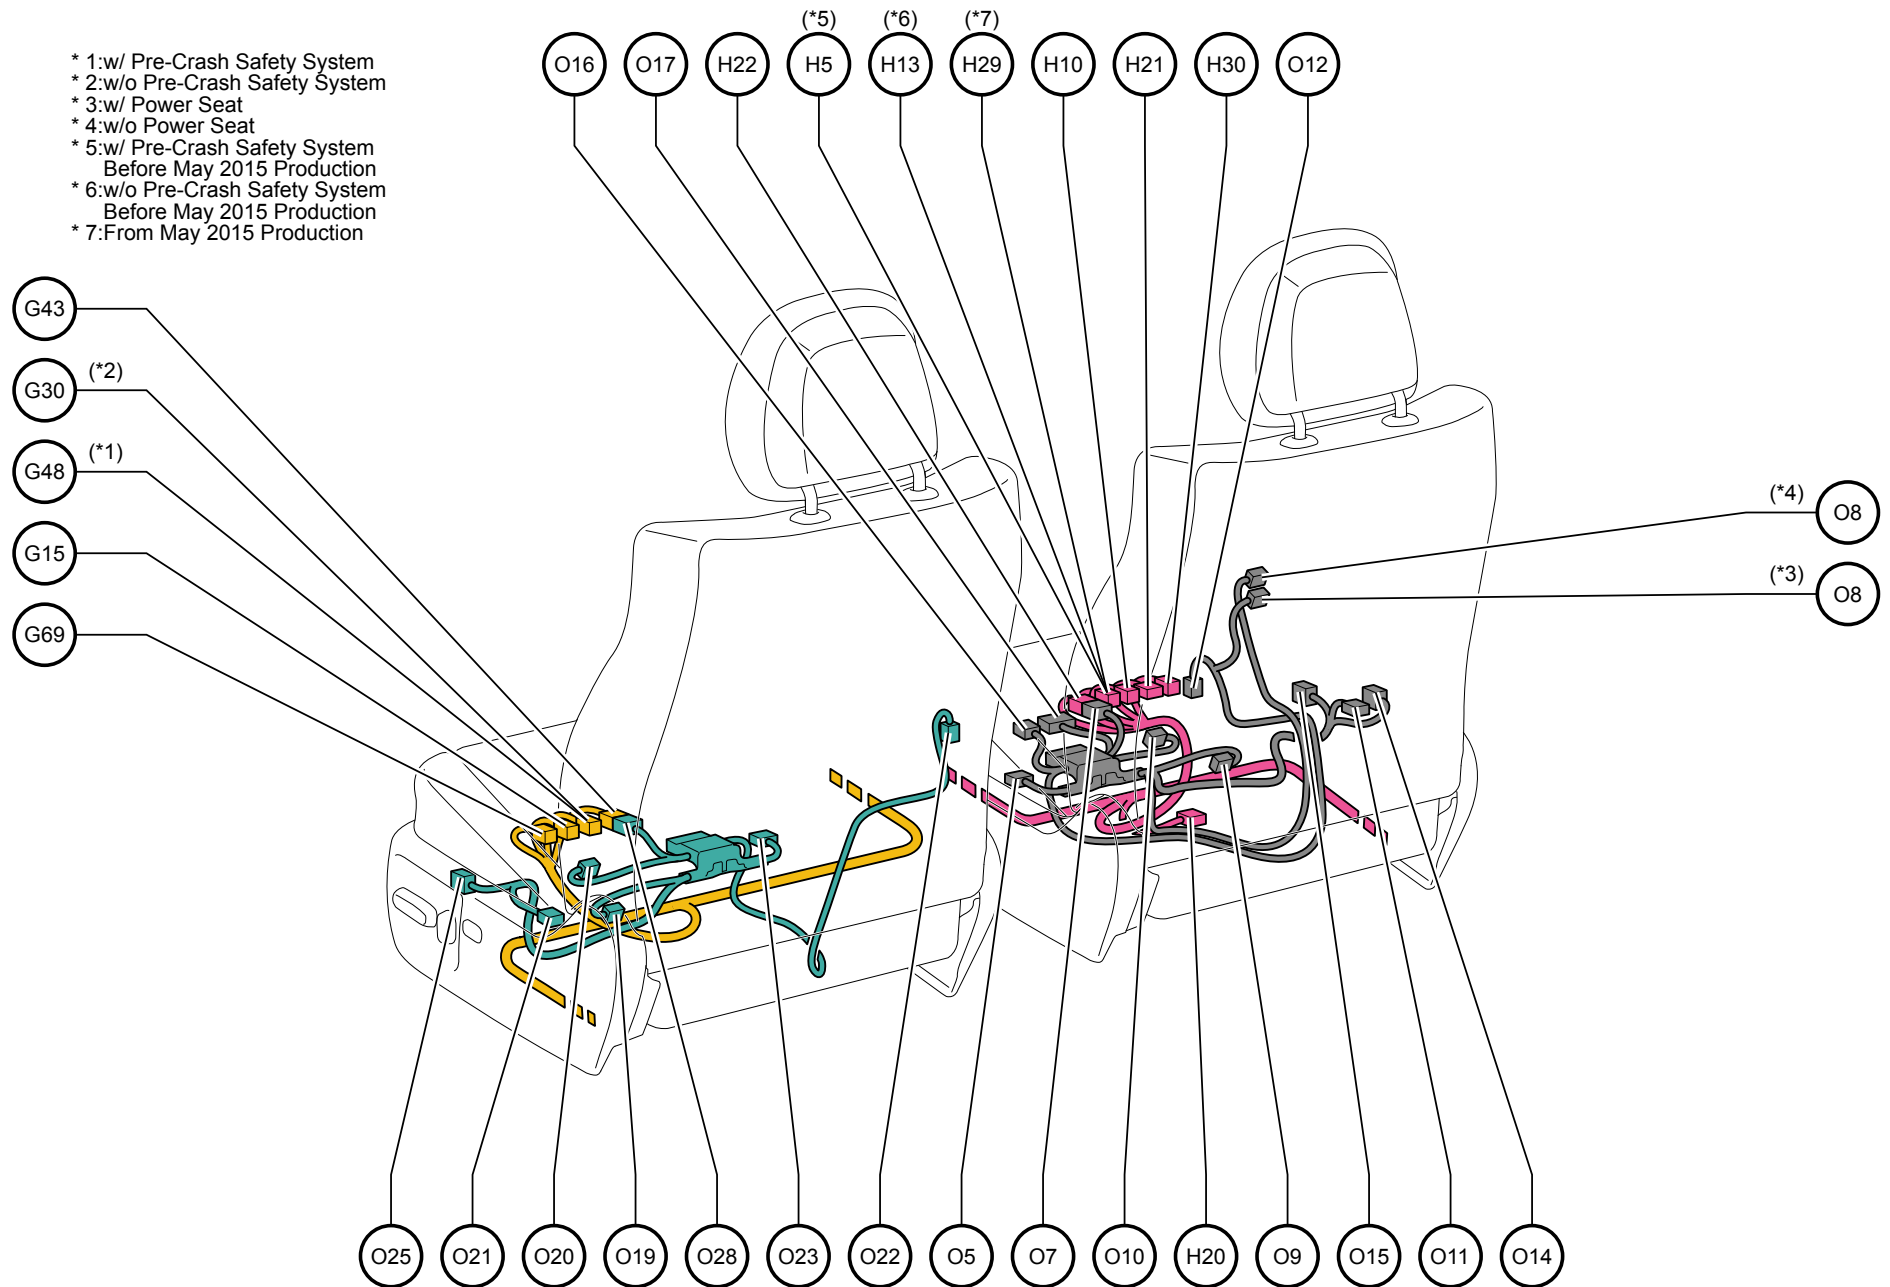


- G 15 Front Side Airbag Squib Circuit LH
- G 30 Front Seat Inner Belt Assembly LH
- G 43 Junction Connector
- G 48 Front Seat Inner Belt Assembly LH
- G 69 Seat Heater LH (Climate Control Controller)

- H 5 Front Seat Inner Belt Assembly RH
- H 10 Front Side Airbag Squib Circuit RH
- H 13 Front Seat Inner Belt Assembly RH
- H 20 Stereo Component Amplifier Assembly
- H 21 Junction Connector
- H 22 Junction Connector
- H 29 Front Seat Inner Belt Assembly RH
- H 30 Seat Heater RH (Climate Control Controller)

- O 5 Seat Heater RH (Climate Control Controller)
- O 7 Junction Connector
- O 8 Front Lumbar Support Motor Assembly RH
- O 9 Front Power Seat Slide Position Motor Assembly RH
- O 10 Front Power Seat Vertical Position Motor Assembly RH
- O 11 Front Power Seat Lift Position Motor Assembly RH
- O 12 Front Power Seat Reclining Position Motor Assembly RH
- O 14 Front Power Seat Switch Assembly RH
- O 15 Front Power Seat Switch
- O 16 Position Control ECU Assembly
- O 17 Position Control ECU Assembly
- O 19 Front Power Seat Slide Position Motor Assembly LH
- O 20 Front Power Seat Vertical Position Motor Assembly LH
- O 21 Front Power Seat Lift Position Motor Assembly LH
- O 22 Front Power Seat Reclining Position Motor Assembly LH
- O 23 Seat Heater LH (Climate Control Controller)
- O 25 Front Power Seat Switch LH
- O 28 Junction Connector

Position of Parts in Seat <RHD>

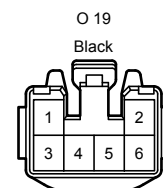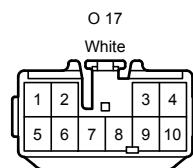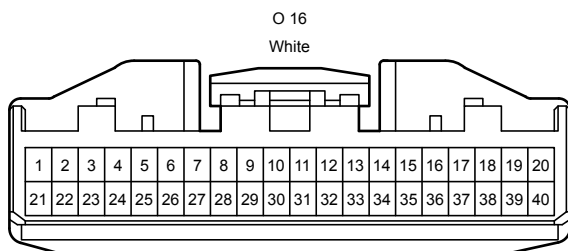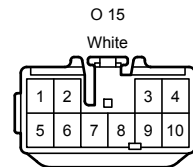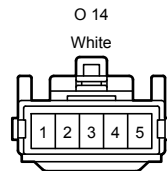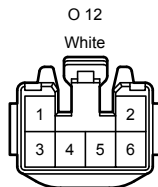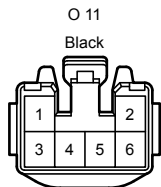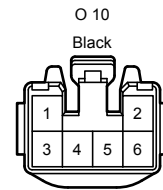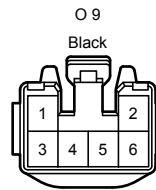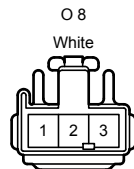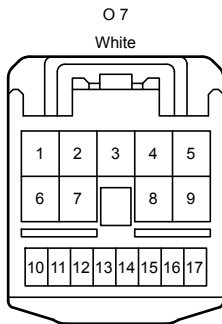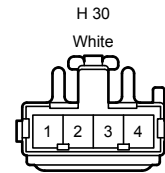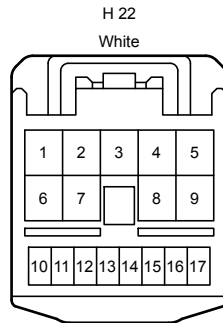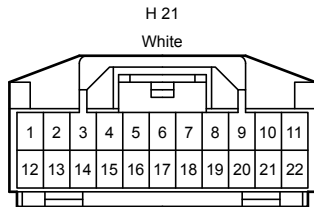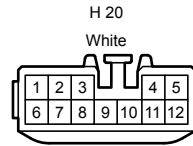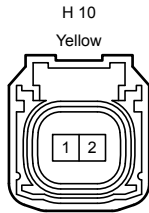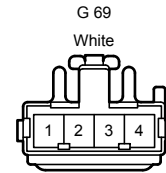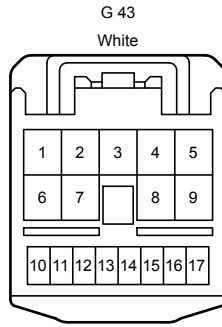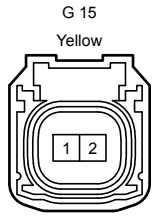

Position of Parts in Seat <RHD>

