

Legend:

- * 1 : w/ Curtain Shield Airbag
- * 2 : w/o Curtain Shield Airbag
- * 5 : Before Nov. 2011 Production
- * 6 : From Nov. 2011 Production
- * 7 : Before Mar. 2012 Production
- * 8 : From Mar. 2012 Production until May 2015 Production
- * 11 : Before May 2015 Production
- * 12 : From May 2015 Production

Diagram Details:

- Section 1:** Ignition (IG) and Power (E1, E2). IG2 is connected to the Airbag ECU Assembly. E1 and E2 are connected to the Airbag ECU Assembly.
- Section 2:** Communication (CANH, CANL) and Diagnostic (DLC3-14-2, DLC3-14-4). CANH and CANL are connected to the Airbag ECU Assembly. DLC3-14-2 and DLC3-14-4 are connected to the Airbag ECU Assembly.
- Section 3:** Front Airbag Sensors (A8, A17) and Side Airbag Sensors (G10, H8). A8 (Front Airbag Sensor LH) and A17 (Front Airbag Sensor RH) are connected to the Airbag ECU Assembly. G10 (Rear Airbag Sensor LH) and H8 (Rear Airbag Sensor RH) are connected to the Airbag ECU Assembly.
- Section 4:** Front Side Airbag Squib Circuits (G15, H10, G2, H2). G15 (Front Side Airbag Squib Circuit LH), H10 (Front Side Airbag Squib Circuit RH), G2 (Front Pretensioner LH), and H2 (Front Pretensioner RH) are connected to the Airbag ECU Assembly.

- * 1 : w/ Curtain Shield Airbag
- * 2 : w/o Curtain Shield Airbag
- * 5 : Before Nov. 2011 Production
- * 6 : From Nov. 2011 Production
- * 7 : Before Mar. 2012 Production
- * 8 : From Mar. 2012 Production until May 2015 Production
- *11 : Before May 2015 Production
- *12 : From May 2015 Production

D10(A), G23(B), G63(D), H12(C), H28(E)
Airbag ECU Assembly

D6(A), z4(B), z26(C)
Spiral Cable
Sub-Assembly

z4(B), z26(C)
Driver Side
Squib Circuit

SRS

5


6

7


8

* 1 : w/ Curtain Shield Airbag
 *11 : Before May 2015 Production
 *12 : From May 2015 Production
 *15 : From May 2015 Production until Oct. 2016 Production
 *16 : From Oct. 2016 Production


G65
 Rear Seat 3 Point Type
 Belt Assembly Outer LH

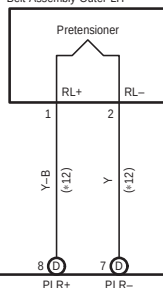


H27
 Rear Seat 3 Point Type
 Belt Assembly Outer RH

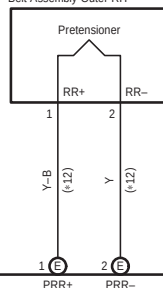

G61
 No. 2 Side Airbag
 Sensor Assembly LH

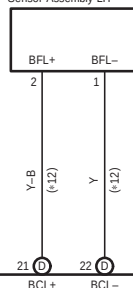

H26
 No. 2 Side Airbag
 Sensor Assembly RH

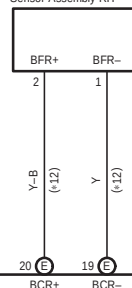

D10(A), G23(B), G63(D), H12(C), H28(E)
 Airbag ECU Assembly

BBL+ BBL-
 24 (D) 23 (D)

G (+12) R (+12)

4 3

BCL+ BCL-
 BDL+ BDL-

1 2

Y (+12) Y-B (+12)

2 (EG1) 1 (EG1)

Y (+12) Y-B (+12)

2 1

BDL+ BDL-

E22
 Door Side Airbag Sensor LH

BBR+ BBR-
 17 (E) 18 (E)

G (+12) R (+12)

4 3

BCR+ BCR-
 BDR+ BDR-

1 2

Y (+12) Y-B (+12)

1 (EH1) 2 (EH1)

Y (+12) Y-B (+12)

2 1

BDR+ BDR-

E21
 Door Side Airbag Sensor RH

LSP+ LSP-
 9 (D) 17 (D)

Y-B (+12) Y (+12)

2 1

LSP+ LSP-

G64
 Front Seat Inner
 Belt Assembly LH

RSP+ RSP-
 16 (E) 24 (E)

Y-B (+12) Y (+12)

2 1

RSP+ RSP-

H29
 Front Seat Inner
 Belt Assembly RH

ICL- ICL+
 6 (B) 7 (B)

3 (D) 4 (D)

Y-B (+1) Y (+1)

2 1

ICL- ICL+

G11
 Curtain Shield
 Airbag Assembly LH

ICR+ ICR-
 9 (C) 10 (C)

5 (E) 6 (E)

Y (+1) Y-B (+11)

1 2

ICR+ ICR-

H9
 Curtain Shield
 Airbag Assembly RH

PAON P-AB
 23 (A) 17 (A)

R (+12) R (+11)

B (+11)

V (+16)

B (+11)

R (+11)

R (+12)


B (+15)

V (+16)

B (+11)

R (+11)

R (+12)

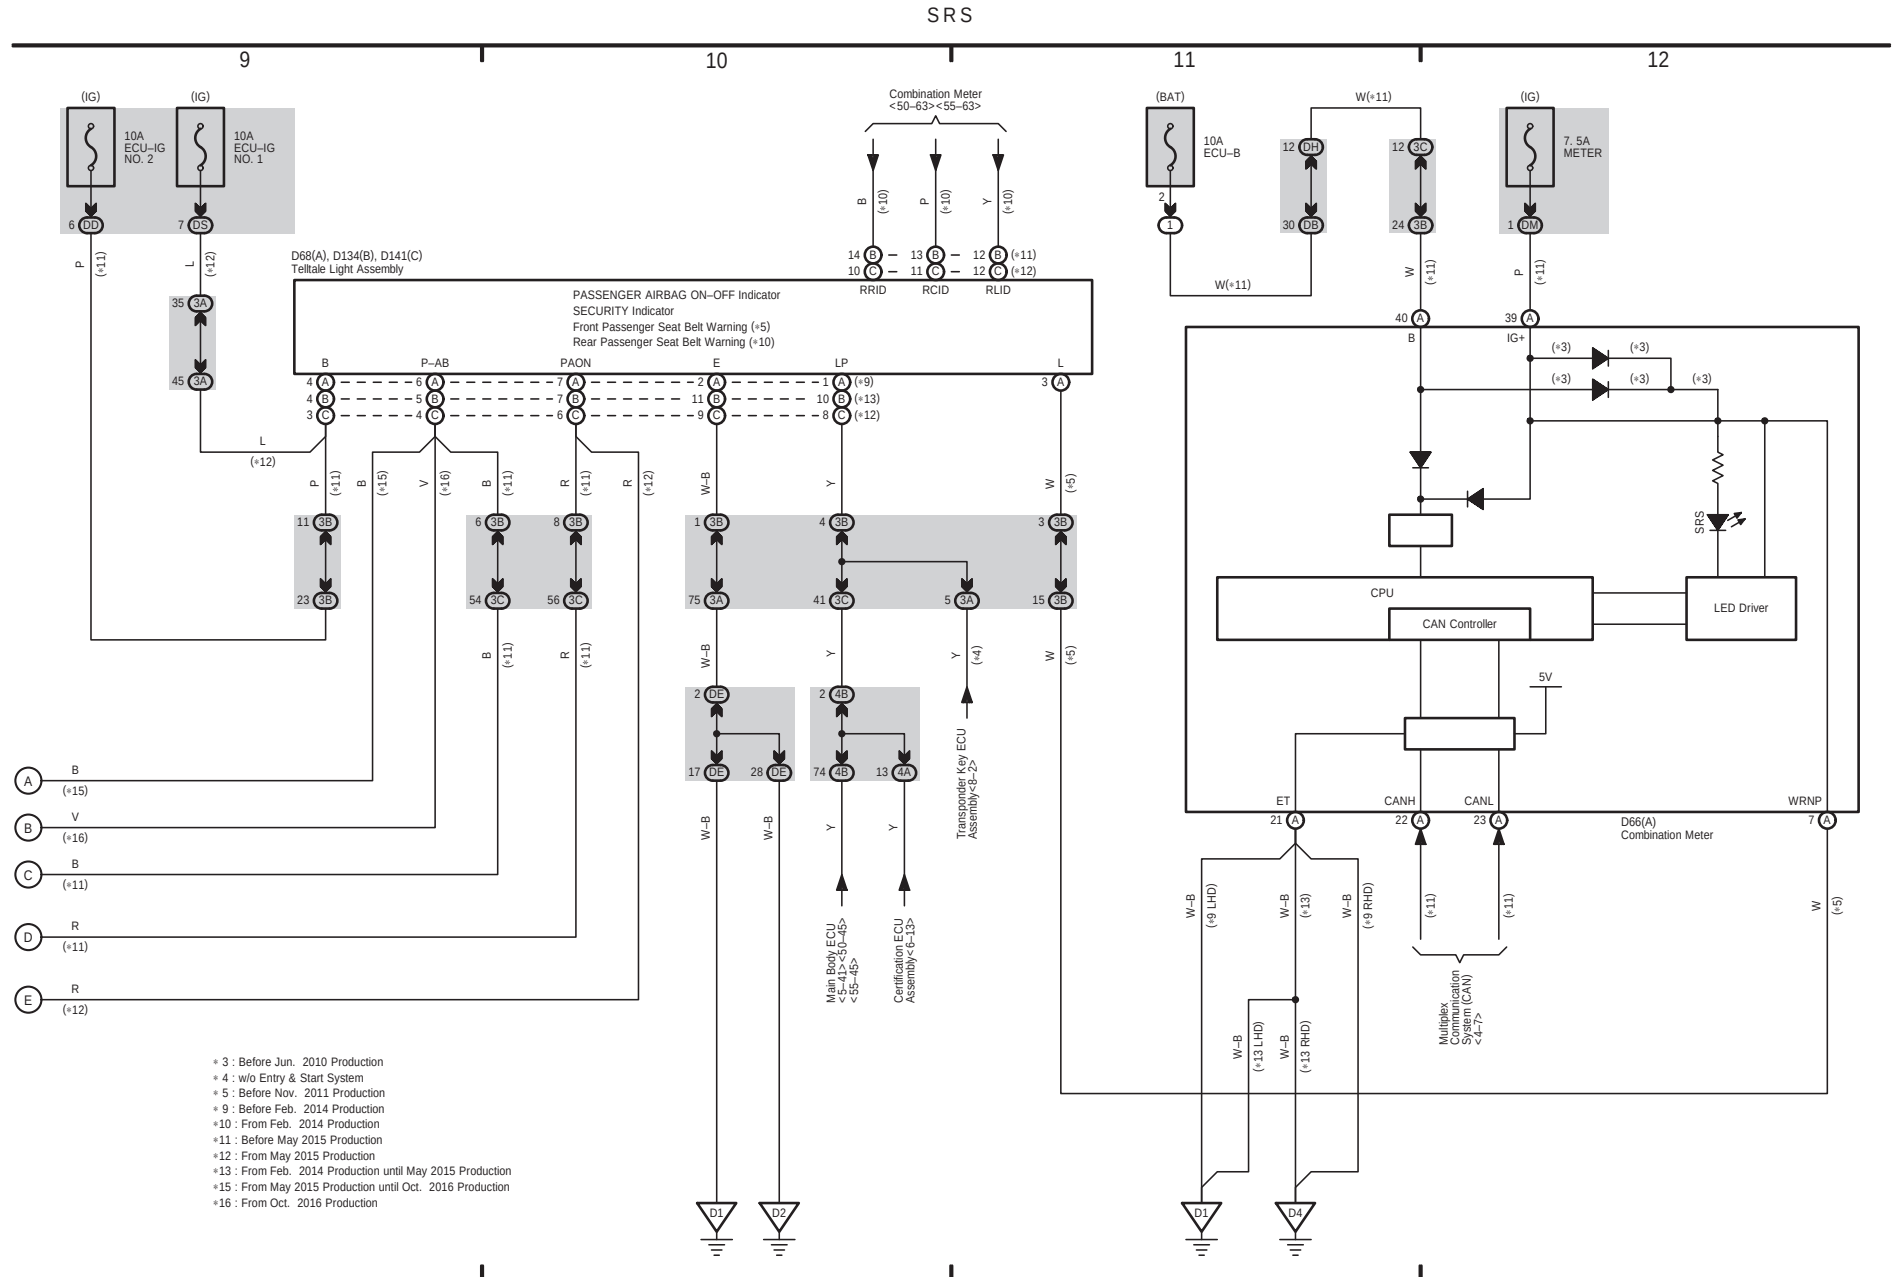

M

M

M

M



M

M