


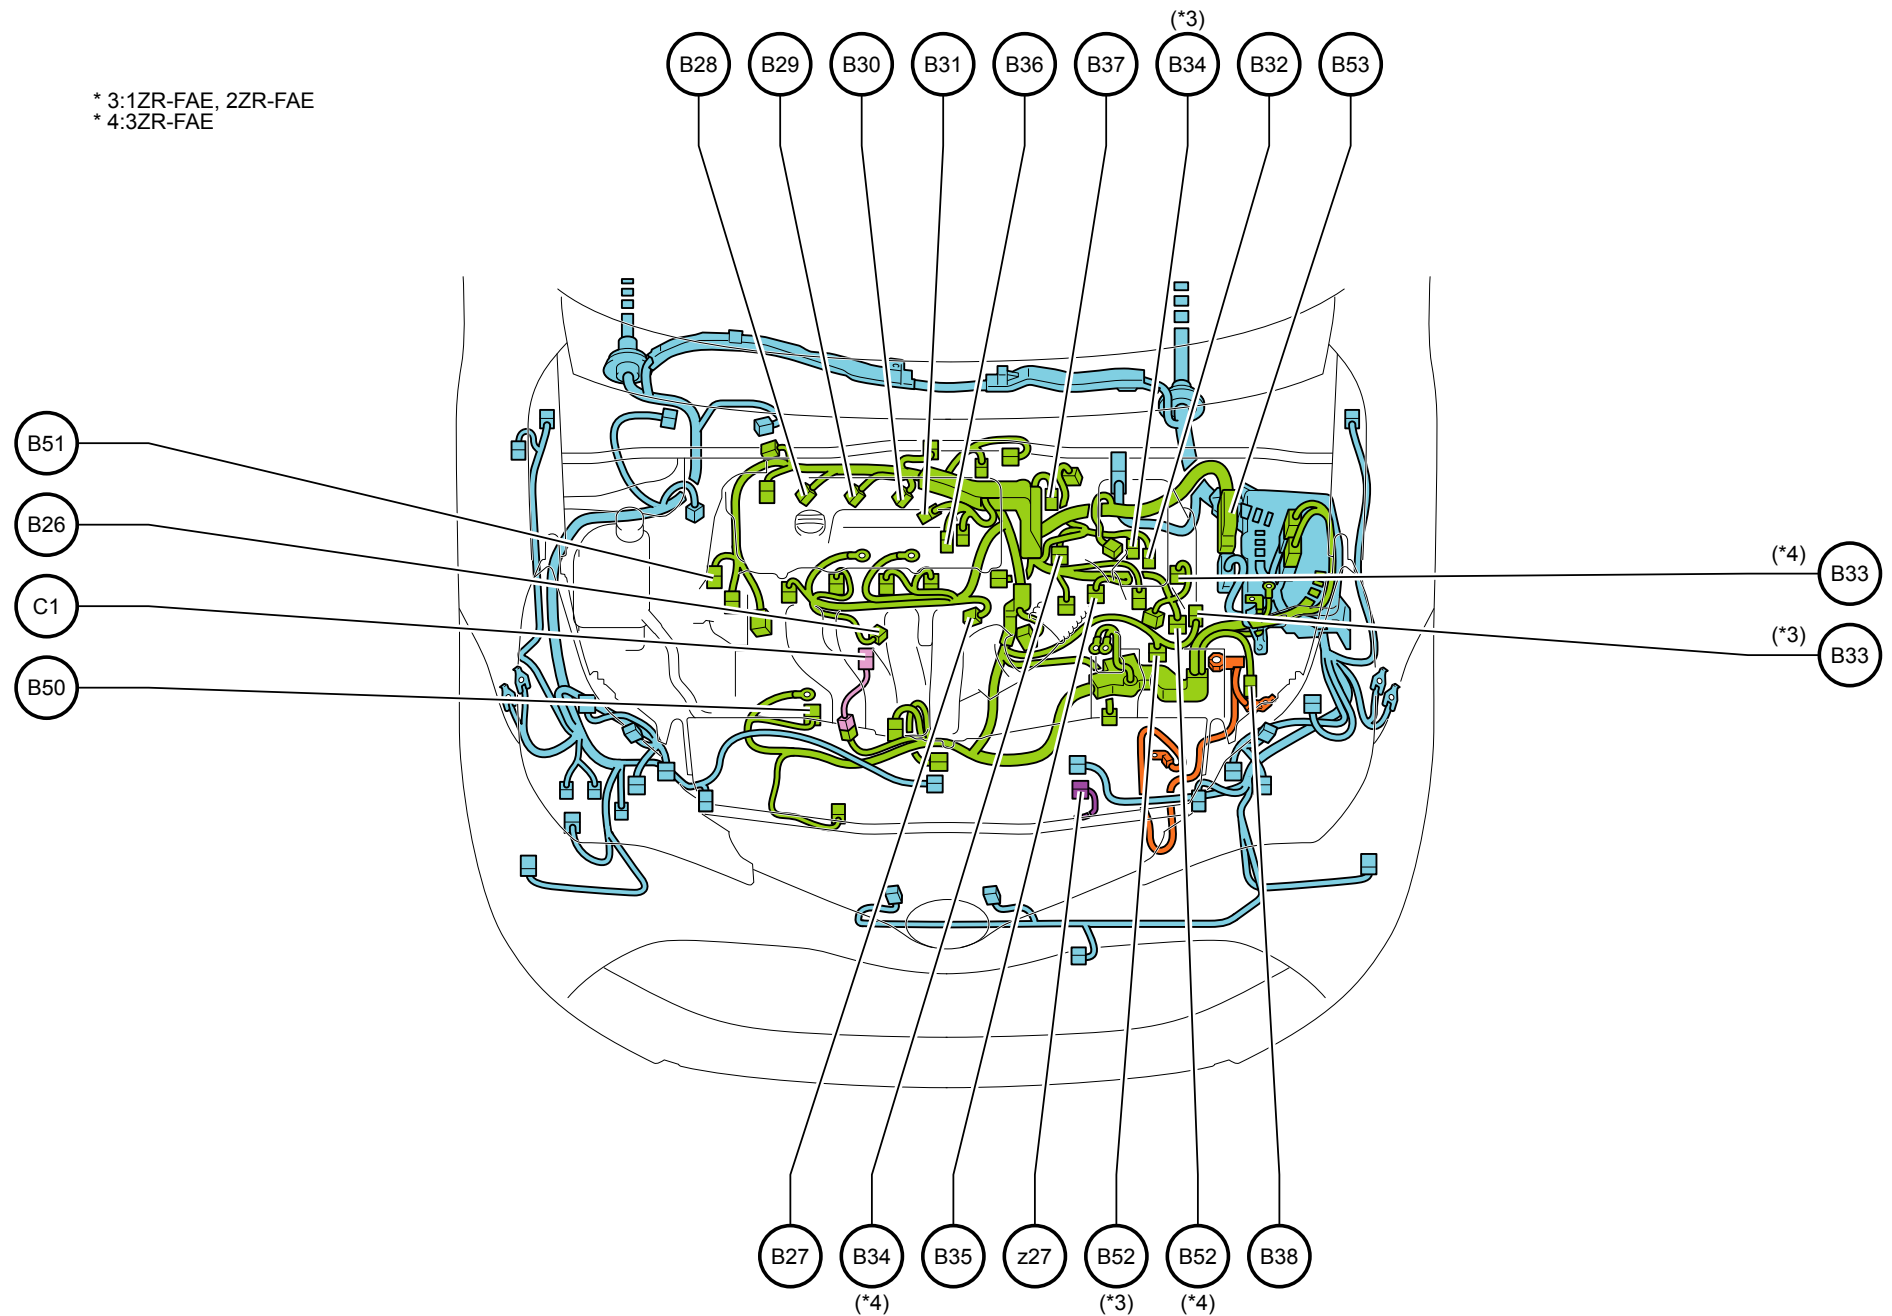

- B 26 Vacuum Switching Valve Assembly (ACIS)
- B 27 E.F.I. Vacuum Sensor Assembly
- B 28 Ignition Coil Assembly No. 1
- B 29 Ignition Coil Assembly No. 2
- B 30 Ignition Coil Assembly No. 3
- B 31 Ignition Coil Assembly No. 4
- B 32 Oil Pressure Sensor
- B 33 Transmission Revolution Sensor (Primary)
- B 34 Transmission Revolution Sensor (Secondary)
- B 35 Transmission Revolution Sensor (Turbine)
- B 36 Noise Filter (Ignition)
- B 37 Valve Lift Control Driver
- B 38 Battery Current Sensor Assembly
- B 50 Generator Assembly
- B 51 Oil Temperature Sensor
- B 52 ECT Solenoid
- B 53 ECM

- C 1 Knock Control Sensor (Bank 1)

- z 27 Cooling Fan ECU , Cooling Fan Motor

