




Position of Parts in Engine Compartment <LHD Before May 2015 Production 3ZR-FE>

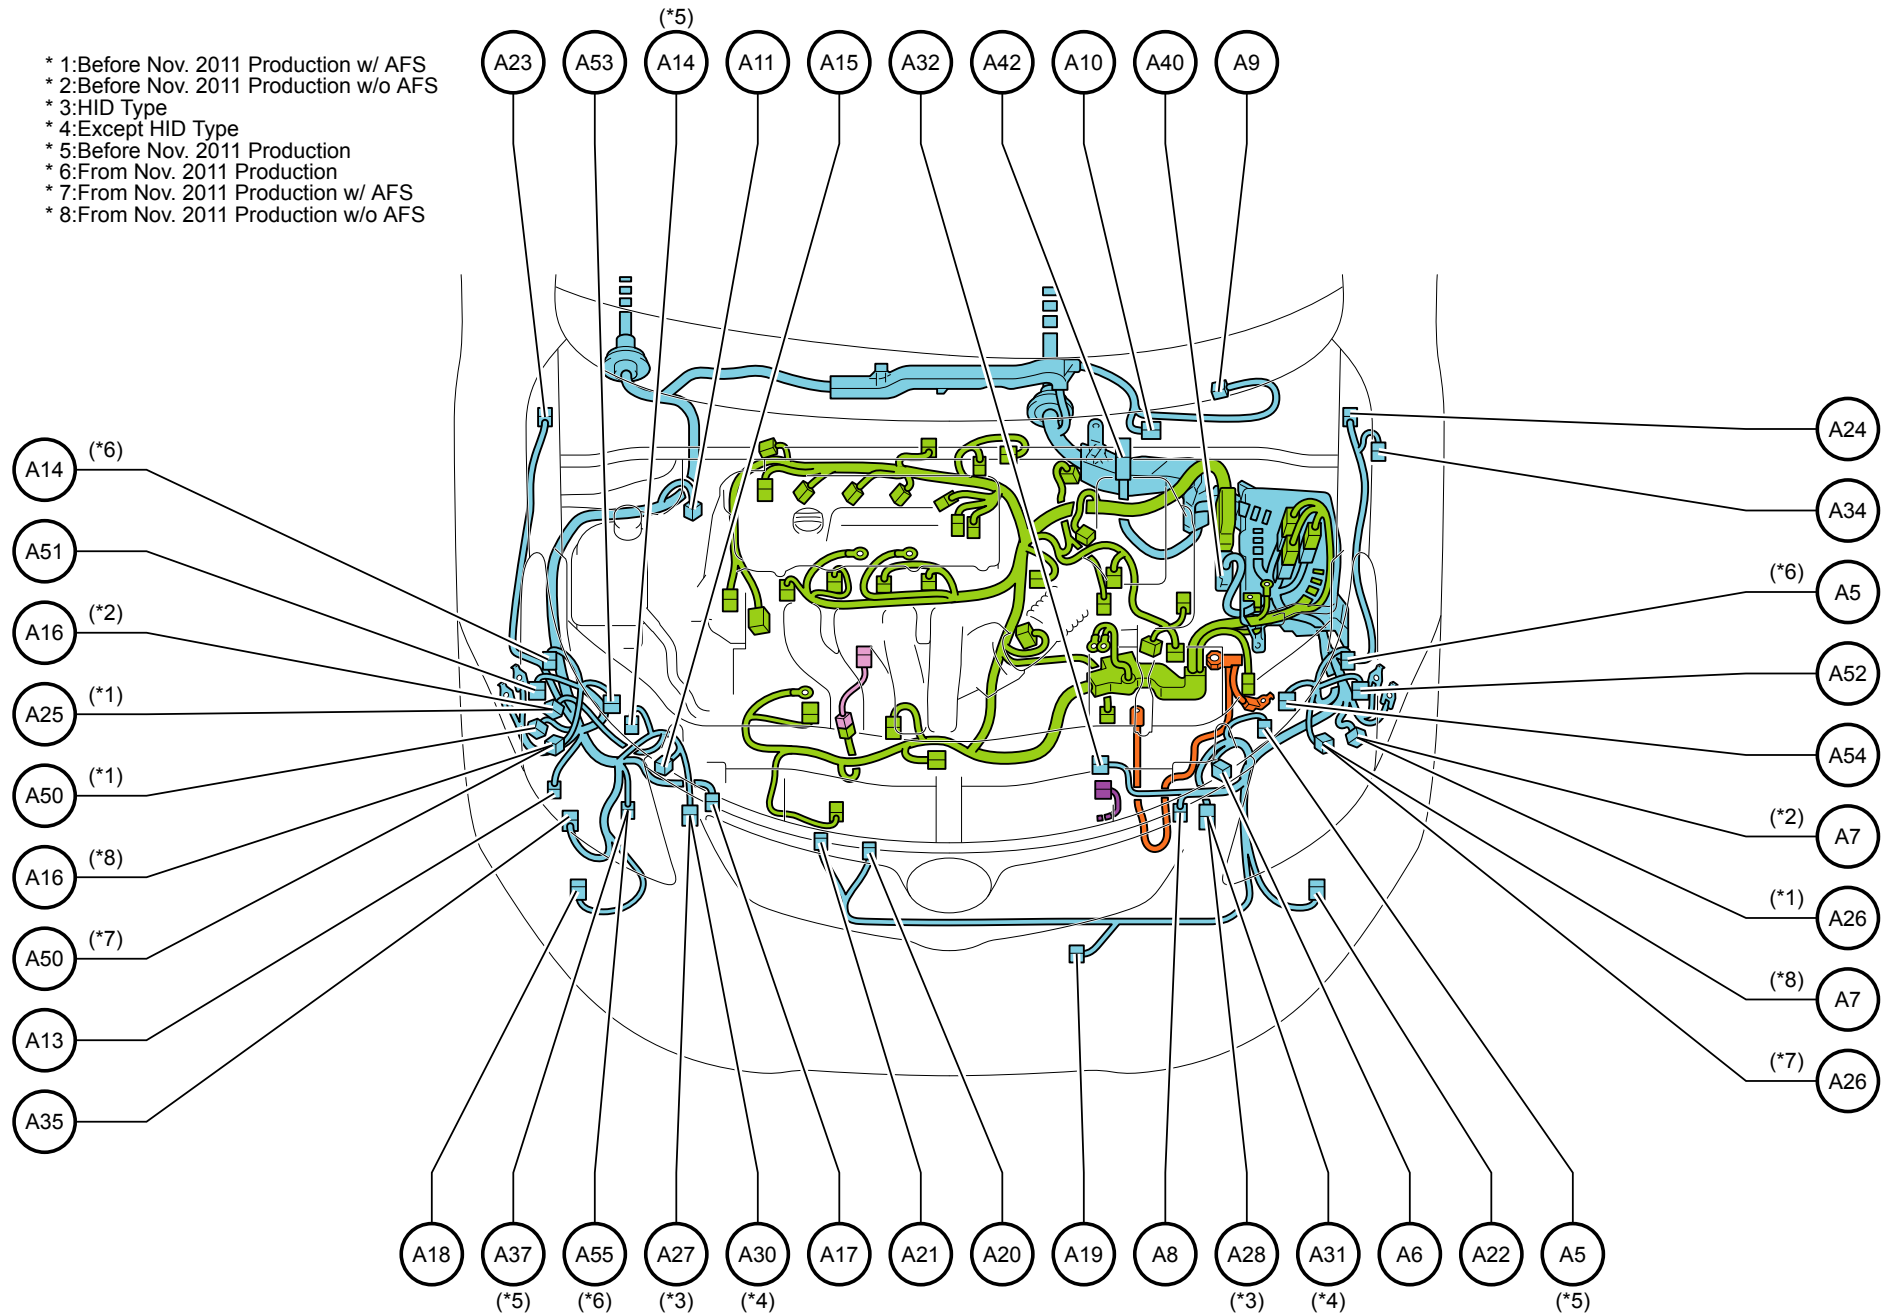


- A 5 Headlight Assembly LH
- A 6 Headlight Assembly LH
- A 7 Headlight Assembly LH
- A 8 Front Airbag Sensor LH
- A 9 Front Wiper Motor and Link Assembly
- A 10 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 11 A/C Pressure Sensor
- A 13 Front Washer Motor and Pump Assembly
- A 14 Headlight Assembly RH
- A 15 Headlight Assembly RH
- A 16 Headlight Assembly RH
- A 17 Front Airbag Sensor RH
- A 18 Headlight Assembly RH
- A 19 Ambient Temperature Sensor
- A 20 Low Pitched Horn Assembly
- A 21 High Pitched Horn Assembly
- A 22 Headlight Assembly LH
- A 23 Front Speed Sensor RH
- A 24 Front Speed Sensor LH
- A 25 Headlight Assembly RH
- A 26 Headlight Assembly LH
- A 27 Headlight Assembly RH
- A 28 Headlight Assembly LH
- A 30 Headlight Assembly RH
- A 31 Headlight Assembly LH
- A 32 Cooling Fan ECU
- A 34 Wireless Door Lock Buzzer
- A 35 Headlight Cleaner Control Relay
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 40 ECM
- A 42 Skid Control ECU
- A 50 Headlight Assembly RH
- A 51 Headlight Assembly RH
- A 52 Headlight Assembly LH
- A 53 Headlight Assembly RH
- A 54 Headlight Assembly LH
- A 55 Headlight Cleaner Motor and Pump Assembly

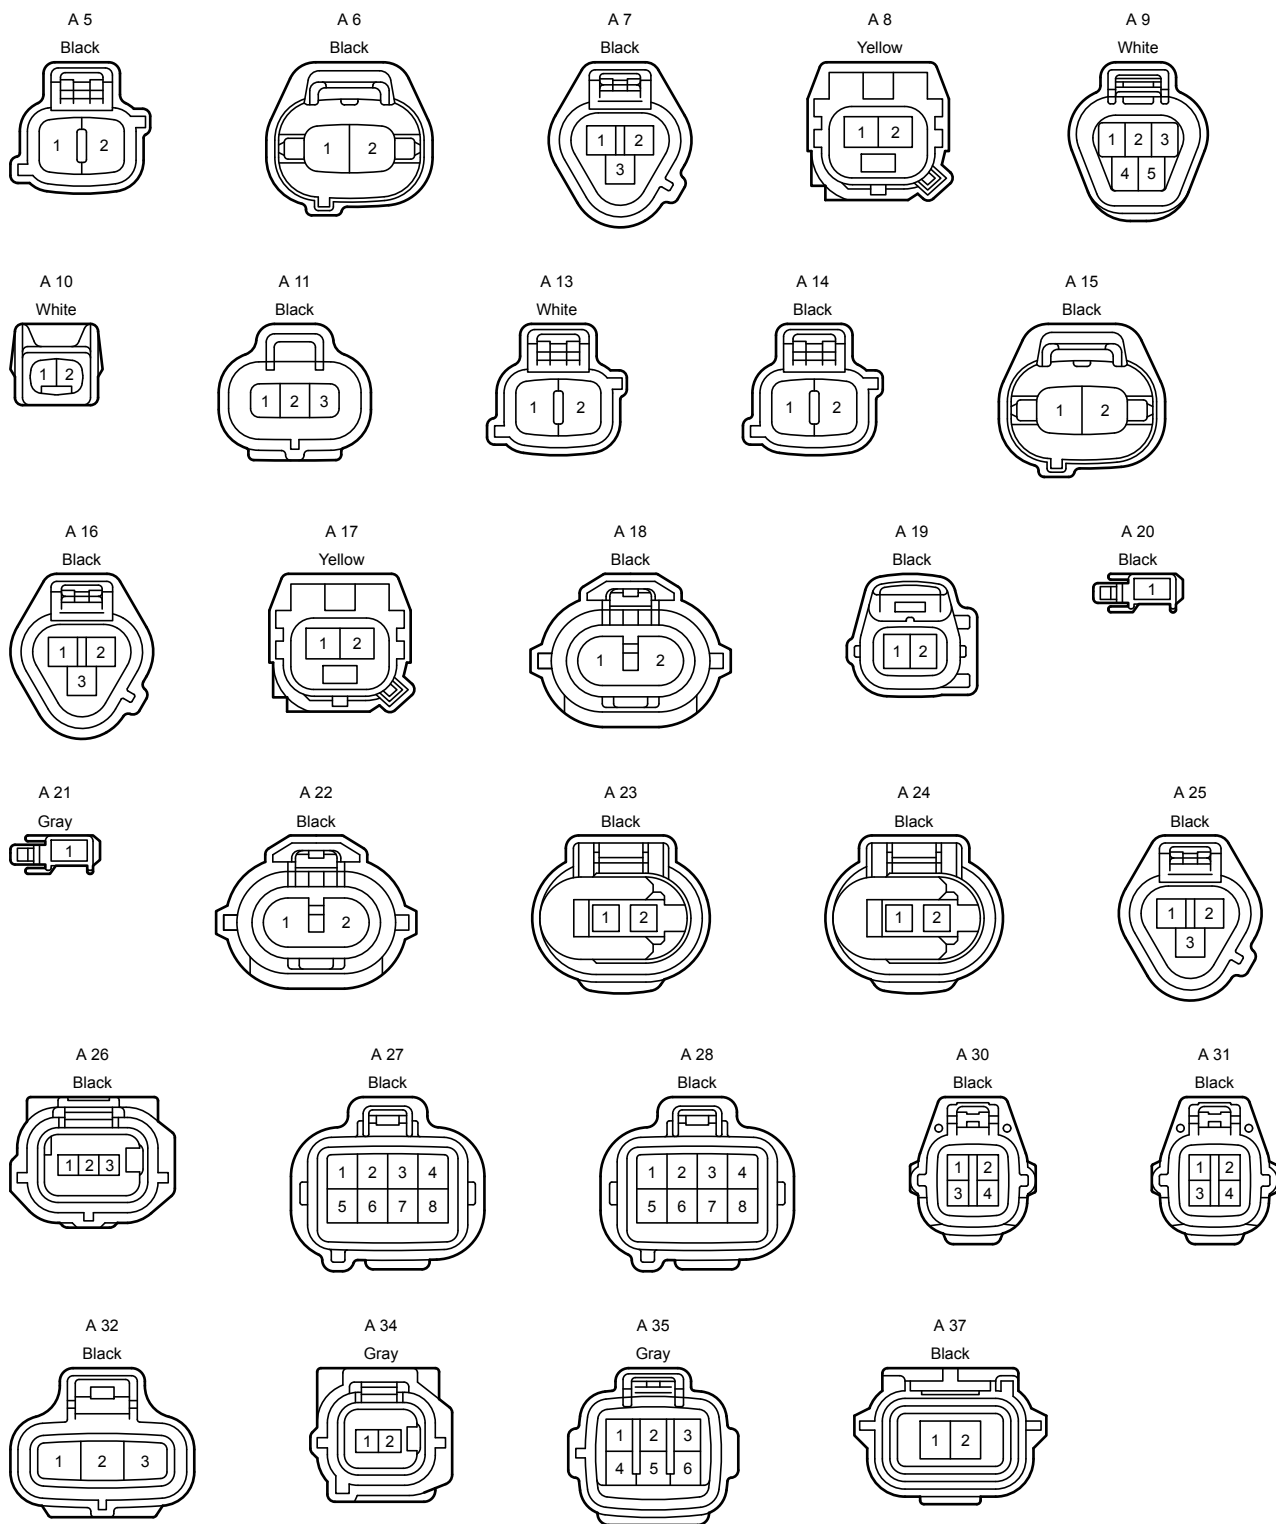


A 40
Black

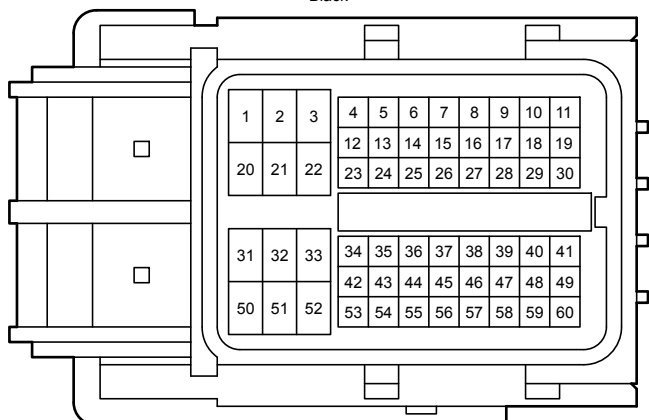


A 42
Black

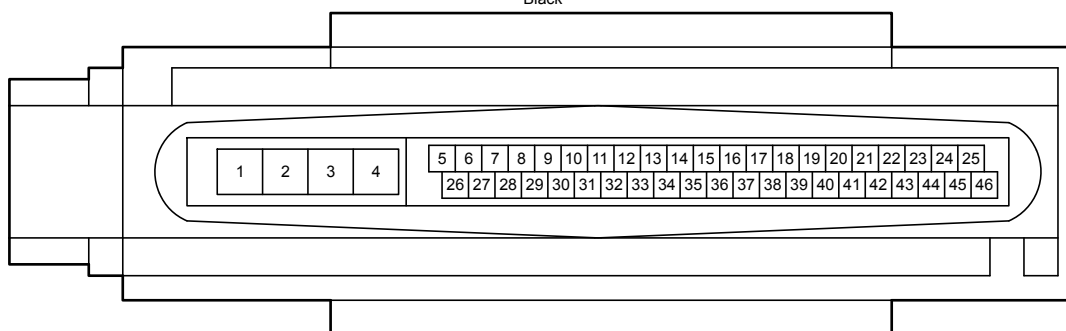


A 50
Black

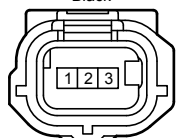


A 51
Gray

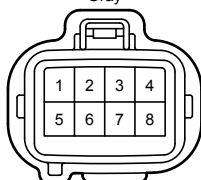


A 52
Gray

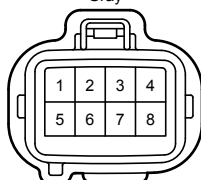

A 53
Black

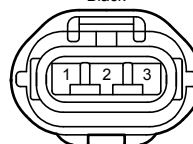

A 54
Black

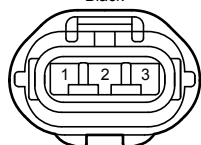

A 55
Black

