



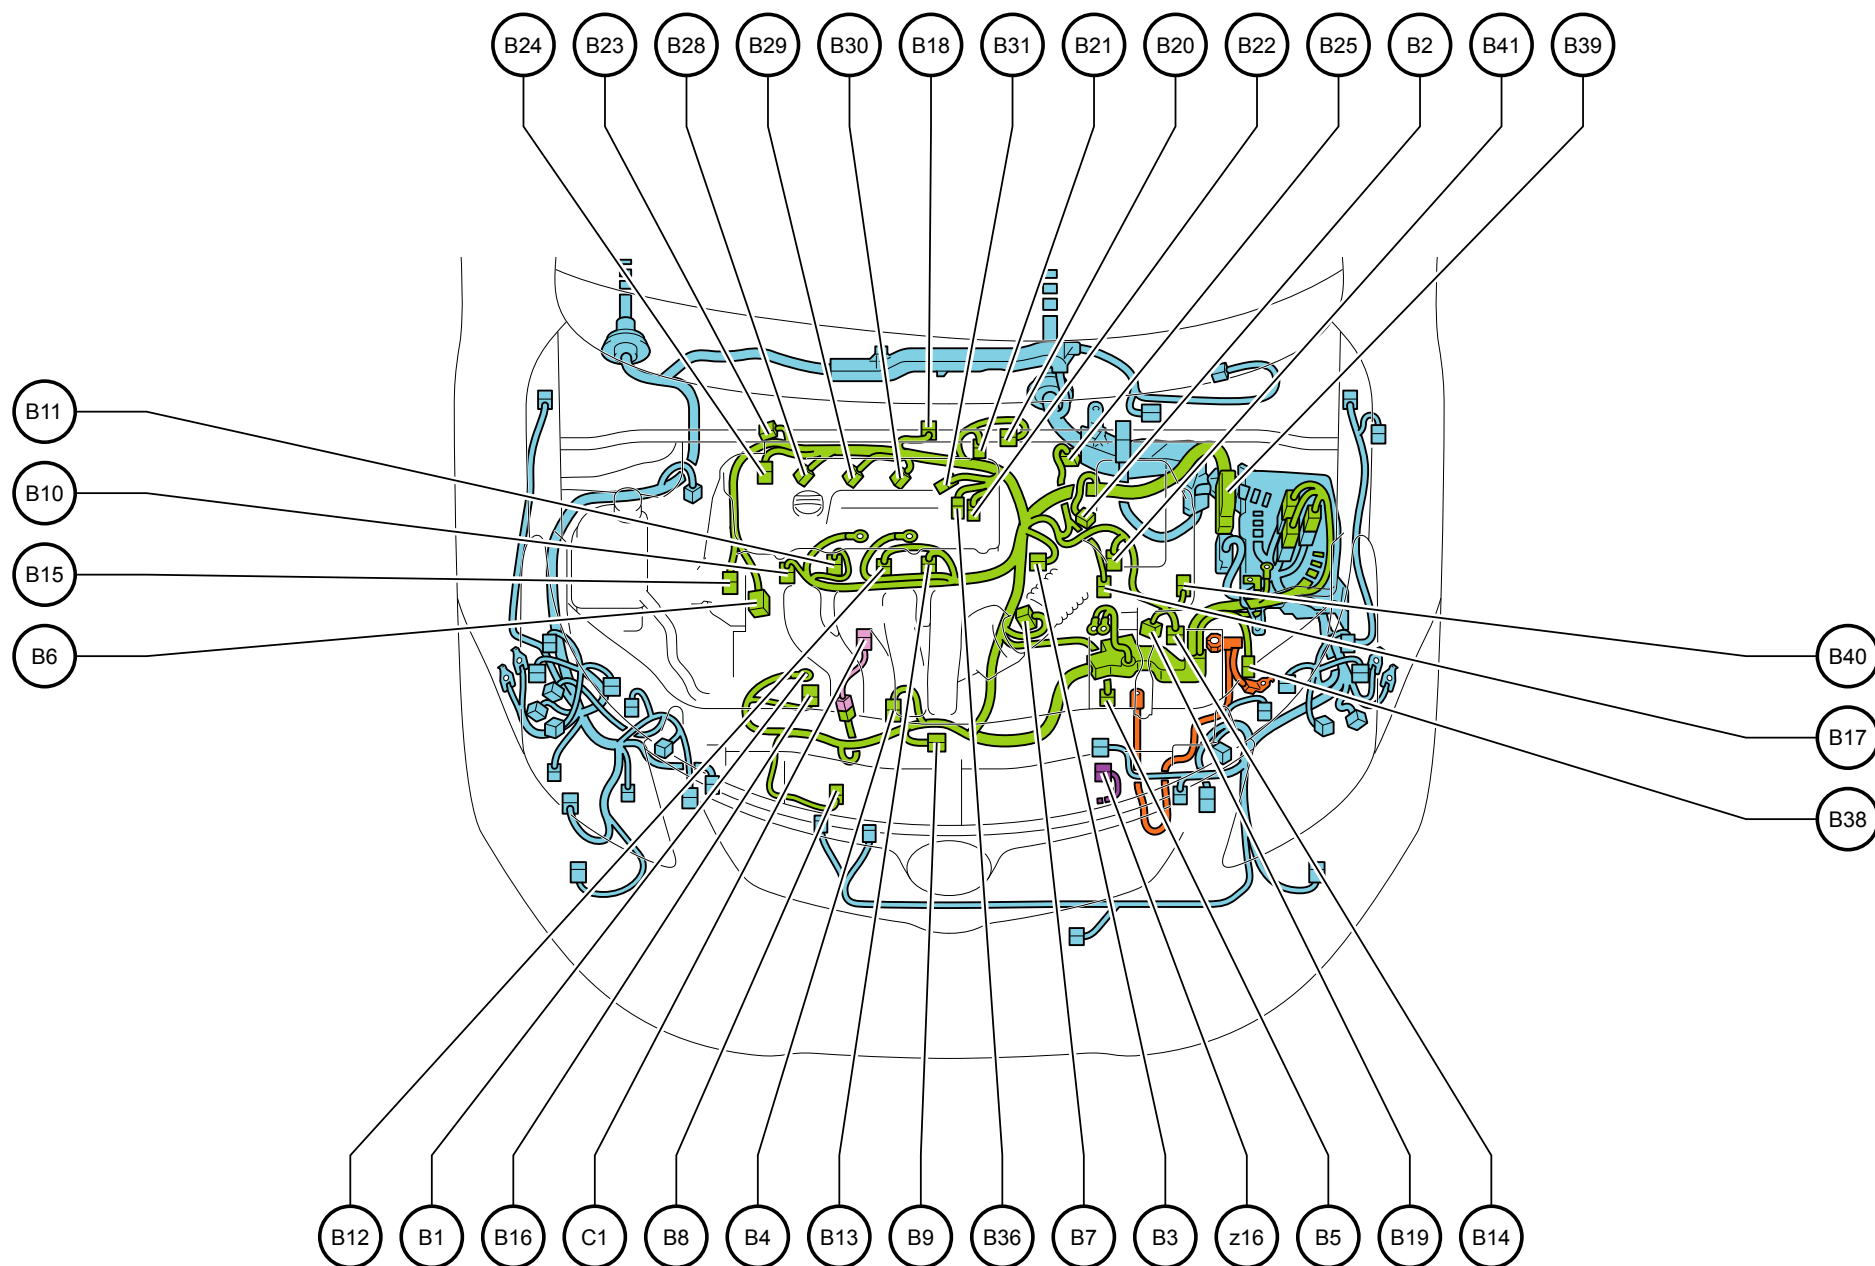

- B 1 Generator Assembly
- B 2 Mass Air Flow Meter
- B 3 E.F.I. Engine Coolant Temperature Sensor
- B 4 Starter Assembly
- B 5 Back-Up Light Switch Assembly
- B 6 Engine Oil Pressure Switch Assembly
- B 7 Throttle Body Assembly
- B 8 Cooler Compressor Assembly
- B 9 Starter Assembly
- B 10 Fuel Injector Assembly No. 1
- B 11 Fuel Injector Assembly No. 2
- B 12 Fuel Injector Assembly No. 3
- B 13 Fuel Injector Assembly No. 4
- B 14 Park/Neutral Position Switch
- B 15 Crank Position Sensor
- B 16 Generator Assembly
- B 17 Park/Neutral Position Switch
- B 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 19 ECT Solenoid
- B 20 Purge VSV
- B 21 VVT Sensor (Exhaust Side)
- B 22 VVT Sensor (Intake Side)
- B 23 Camshaft Timing Oil Control Valve (Exhaust Side)
- B 24 Camshaft Timing Oil Control Valve (Intake Side)
- B 25 Oxygen Sensor (Bank 1 Sensor 2)
- B 28 Ignition Coil Assembly No. 1
- B 29 Ignition Coil Assembly No. 2
- B 30 Ignition Coil Assembly No. 3
- B 31 Ignition Coil Assembly No. 4
- B 36 Noise Filter (Ignition)
- B 38 Battery Current Sensor Assembly
- B 39 ECM
- B 40 Transmission Revolution Sensor (Turbine)
- B 41 Transmission Revolution Sensor (Counter Gear)

- C 1 Knock Control Sensor (Bank 1)

- z 16 Cooling Fan ECU , Cooling Fan Motor

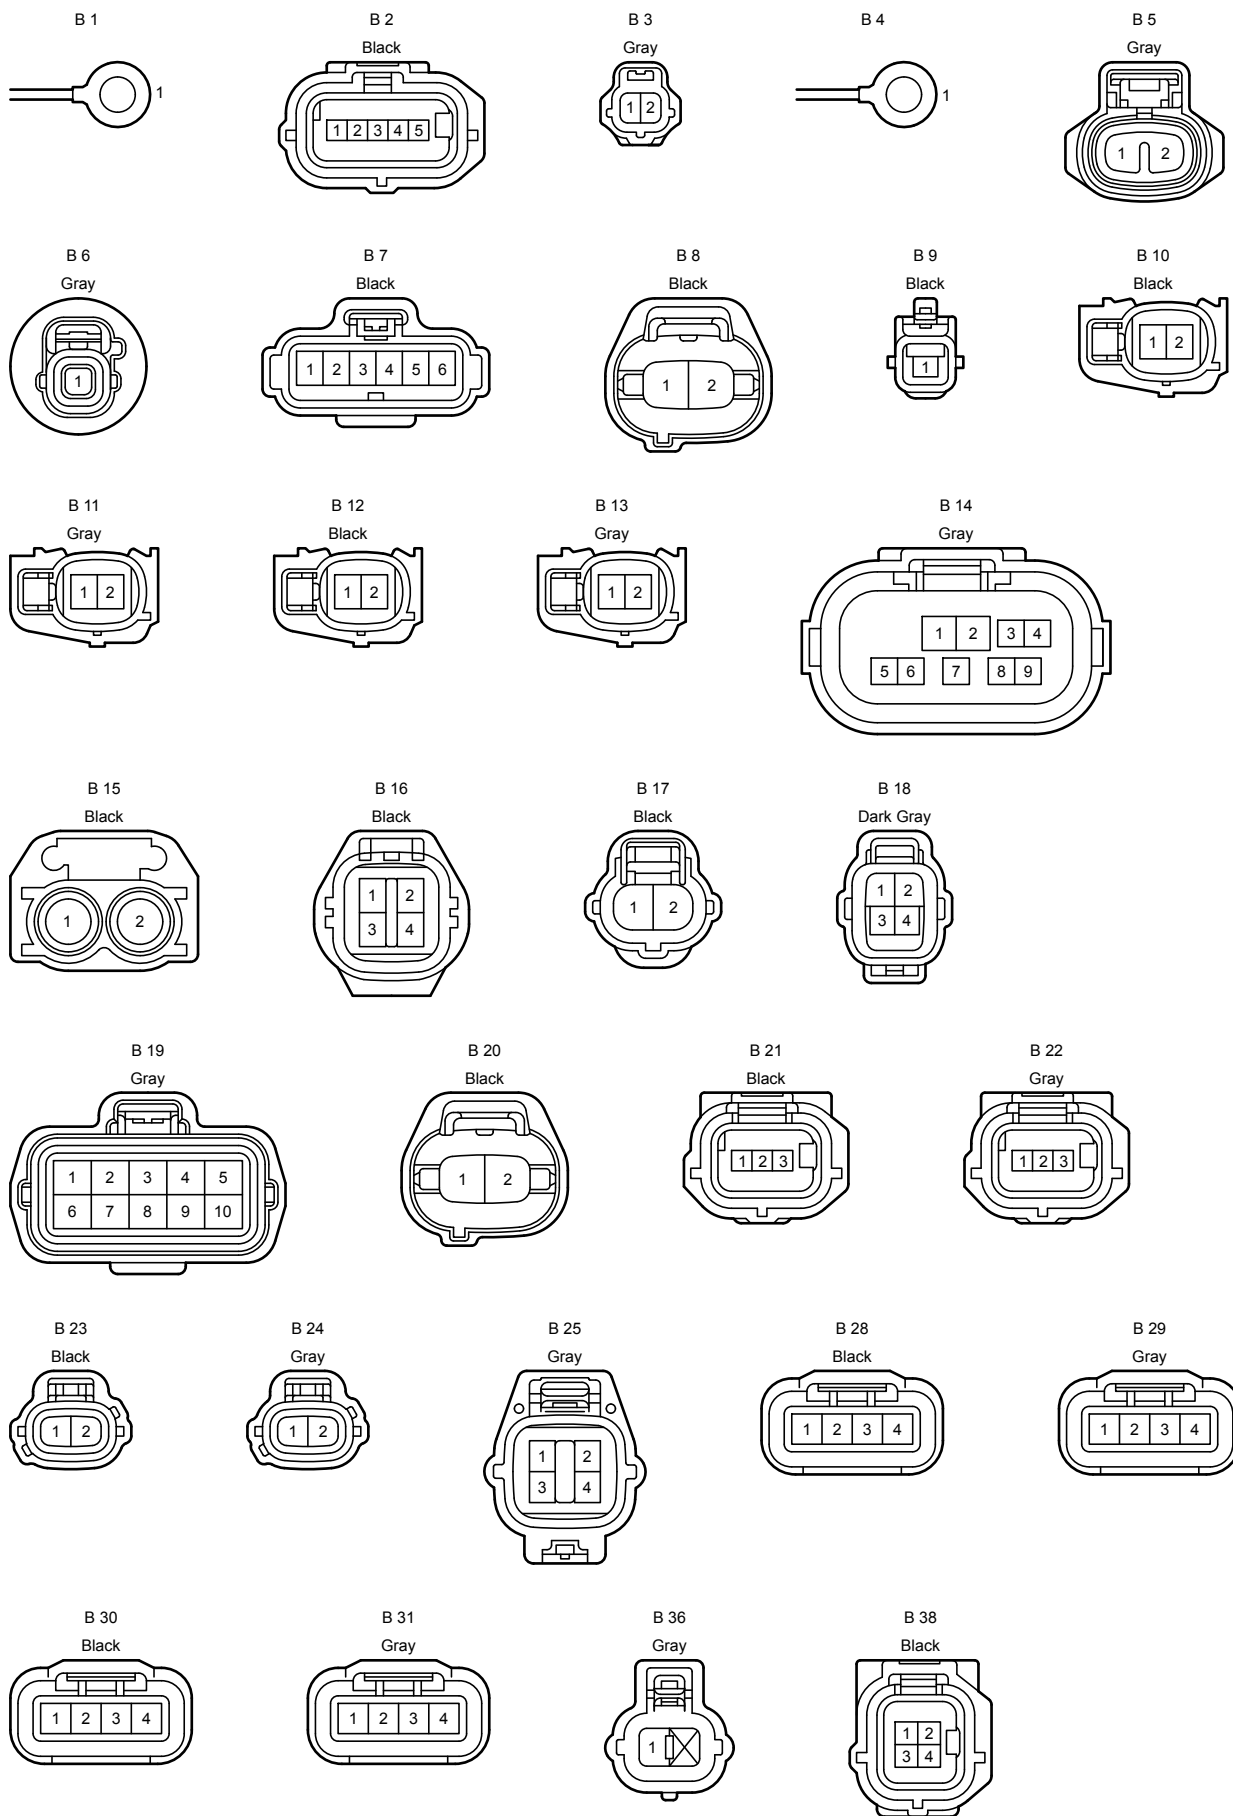

Position of Parts in Engine Compartment <LHD Before May 2015 Production 3ZR-FE>

