

Position of Parts in Instrument Panel <LHD From May 2015 Production>


* 1:Refer to the Service Bulletin
for the installation position of the parts.

* 2:Display Audio Type

* 4:w/ Entry & Start System

* 5:w/o Entry & Start System

* 7:Manual A/C

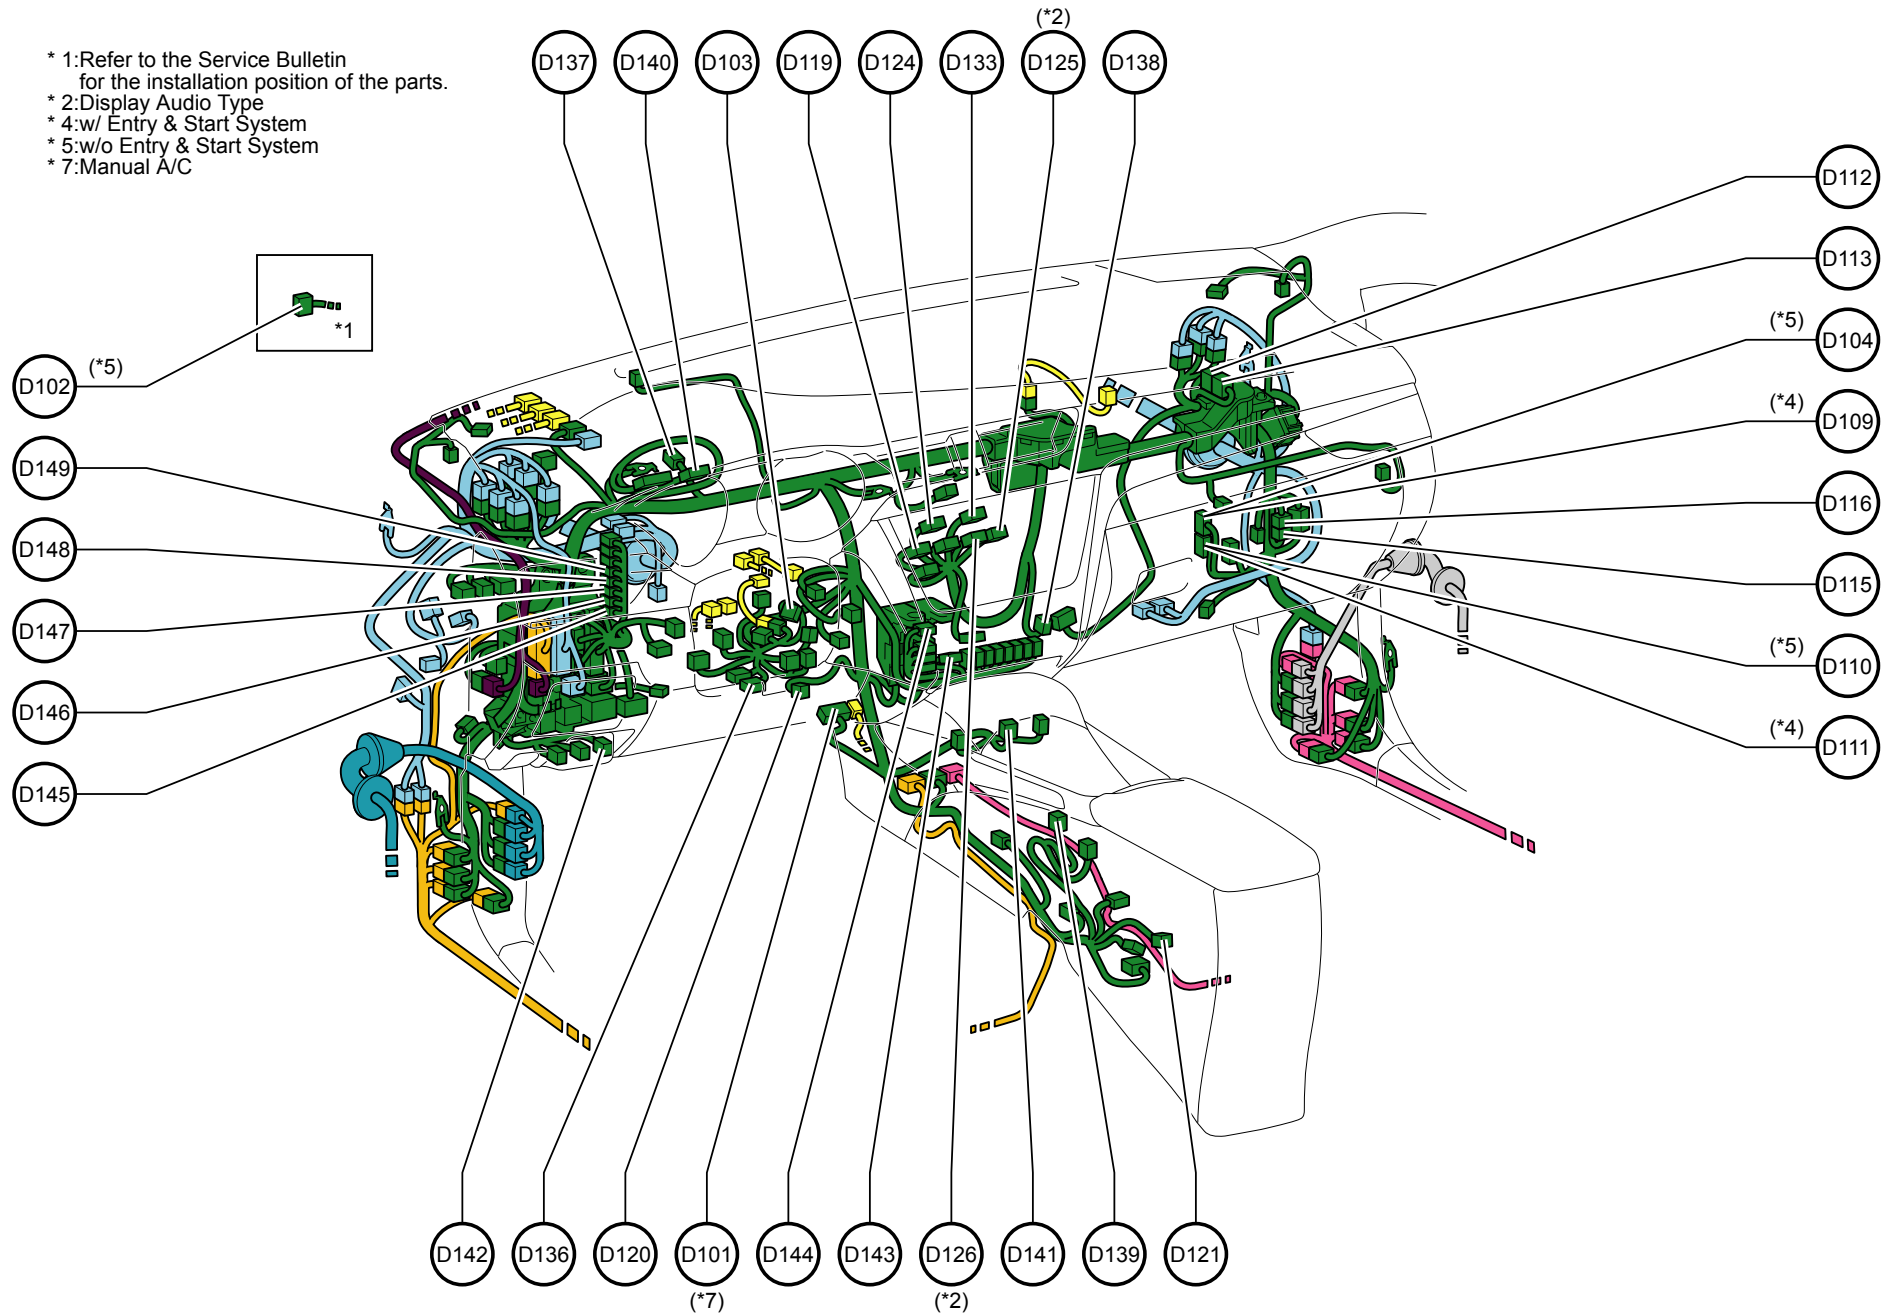

D 101	Air Conditioning Amplifier Assembly
D 102	Transponder Key ECU Assembly
D 103	Transponder Key Amplifier
D 104	Power Management Control ECU
D 109	Power Management Control ECU
D 110	Power Management Control ECU
D 111	Power Management Control ECU
D 112	Junction Connector
D 113	Junction Connector
D 115	Junction Connector
D 116	Junction Connector
D 119	Radio Receiver Assembly
D 120	Lower No. 1 Instrument Panel Airbag Assembly
D 121	Stereo Jack Adapter Assembly
D 124	Radio & Display Receiver Assembly
D 125	Radio & Display Receiver Assembly
D 126	Radio & Display Receiver Assembly
D 133	Radio & Display Receiver Assembly
D 136	Spiral Cable Sub-Assembly
D 137	Pre-Crash Safety City Buzzer
D 138	Door Control Battery
D 139	Pattern Select Switch Assembly
D 140	Combination Meter
D 141	Telltale Light Assembly
D 142	Pre-Crash System Cancel Switch Assembly
D 143	Interior Illumination Light Assembly No. 1
D 144	Junction Connector
D 145	Junction Connector
D 146	Junction Connector
D 147	Junction Connector
D 148	Junction Connector
D 149	Junction Connector

Position of Parts in Instrument Panel <LHD From May 2015 Production>

