


Position of Parts in Instrument Panel <RHD Before May 2015 Production>

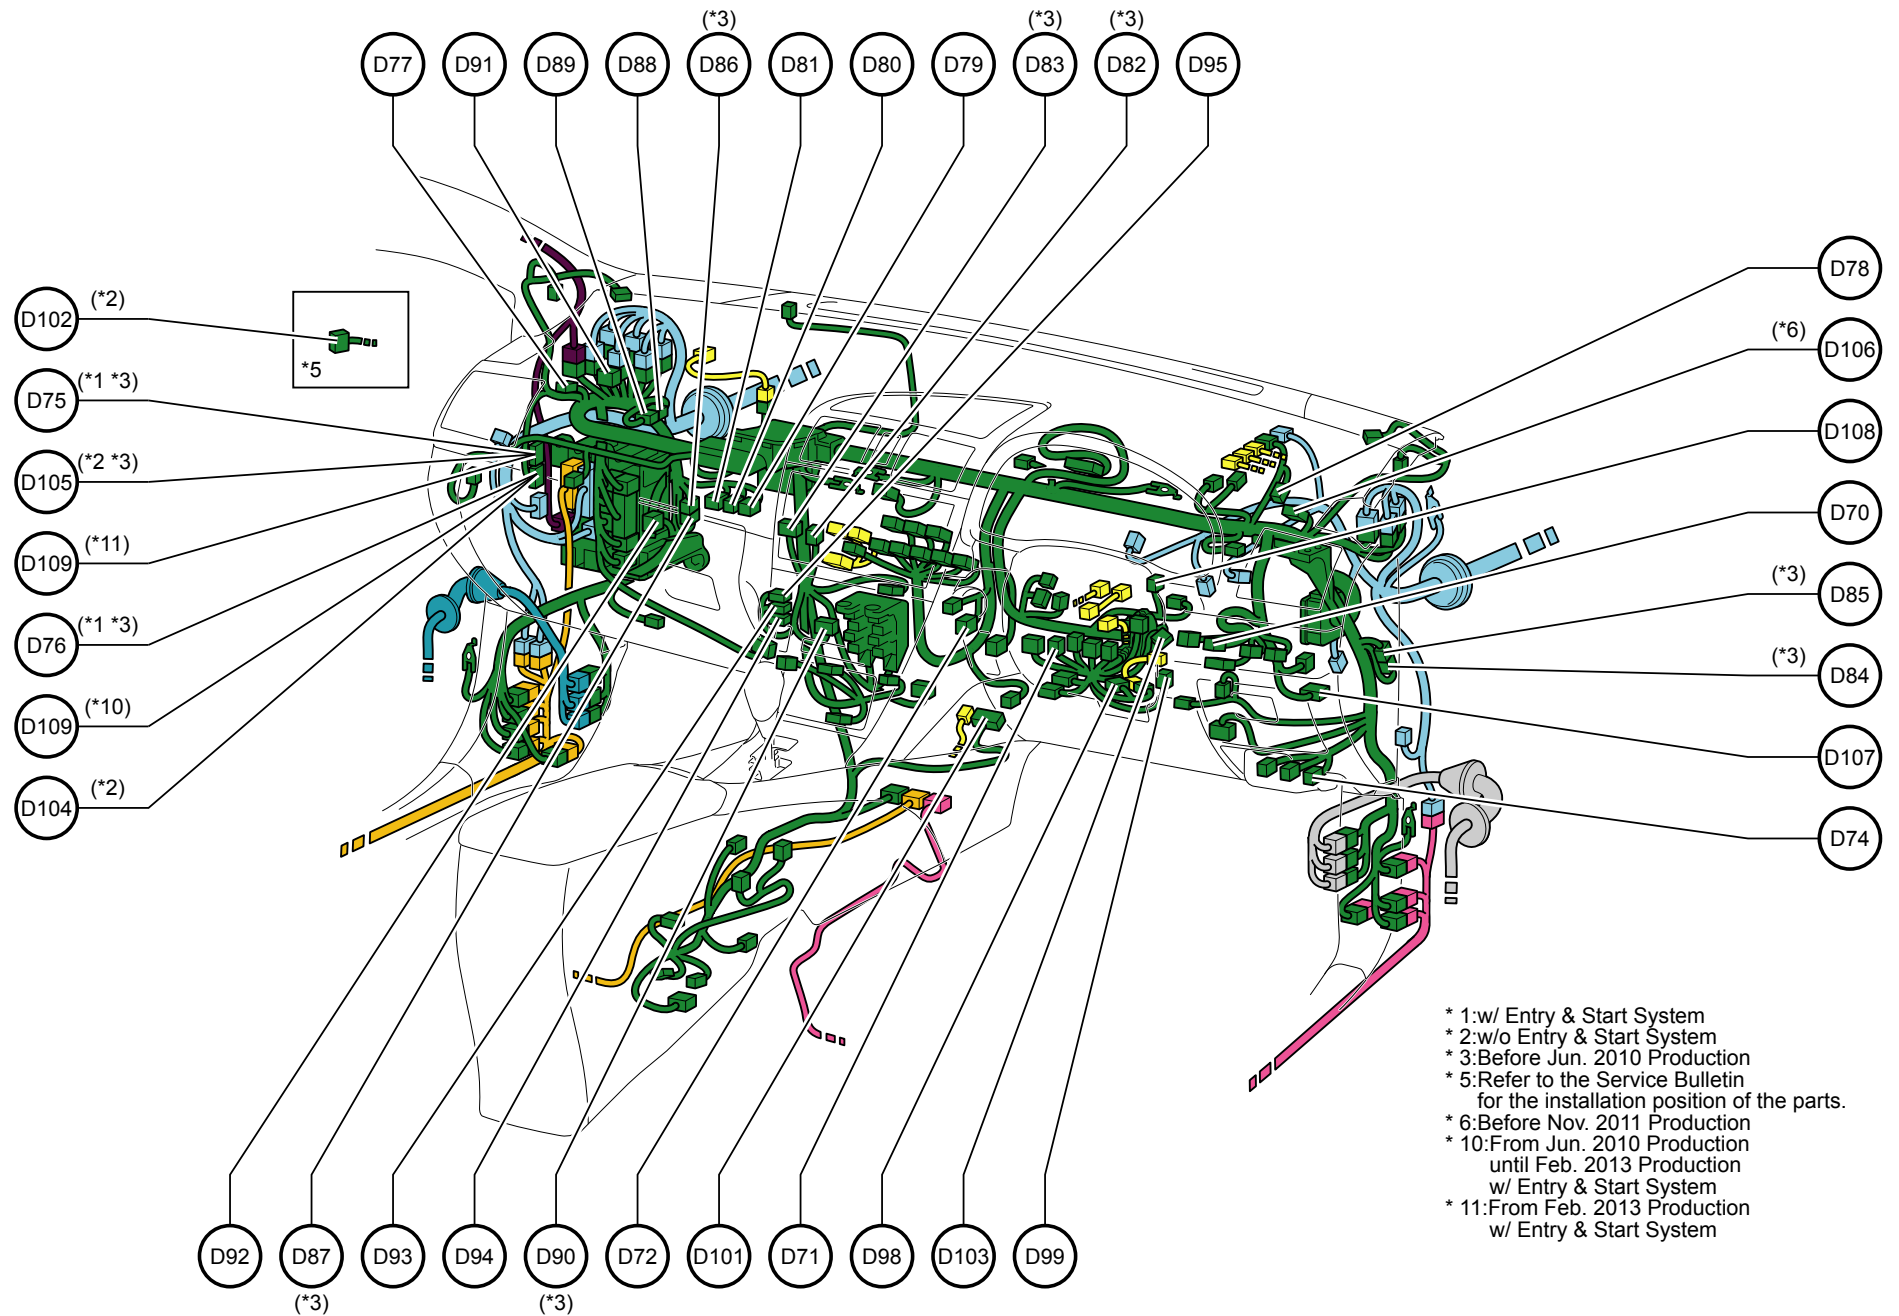


- D 70 Warning Canceling Switch Assembly
- D 71 Steering Sensor
- D 72 Back Sonar or Clearance Sonar Switch Assembly
- D 74 Fuel Lid Opener Switch
- D 75 Power Management Control ECU
- D 76 Power Management Control ECU
- D 77 Diode (Front Door Courtesy Switch LH)
- D 78 Diode (Front Door Courtesy Switch RH)
- D 79 Main Body ECU
- D 80 Main Body ECU
- D 81 Main Body ECU
- D 82 Junction Connector
- D 83 Junction Connector
- D 84 Junction Connector
- D 85 Junction Connector
- D 86 Junction Connector
- D 87 Junction Connector
- D 88 Junction Connector
- D 89 Junction Connector
- D 90 Junction Connector
- D 91 Junction Connector
- D 92 Fuse Block
- D 93 Junction Connector
- D 94 Junction Connector
- D 95 Junction Connector
- D 98 Ignition or Starter Switch Assembly
- D 99 Un-Lock Warning Switch Assembly
- D 101 Air Conditioning Amplifier Assembly
- D 102 Transponder Key ECU Assembly
- D 103 Transponder Key Amplifier
- D 104 Power Management Control ECU
- D 105 Power Management Control ECU
- D 106 Turn Signal Flasher Assembly
- D 107 Double Lock Door Control Relay Assembly
- D 108 Steering Lock Actuator Assembly
- D 109 Power Management Control ECU

Position of Parts in Instrument Panel <RHD Before May 2015 Production>


D 70

White

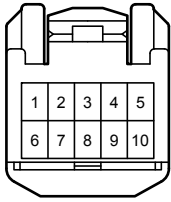


D 71

Black

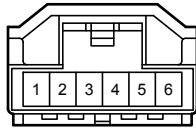


D 72

Black

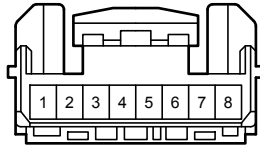


D 74

Black

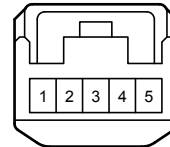


D 75

White

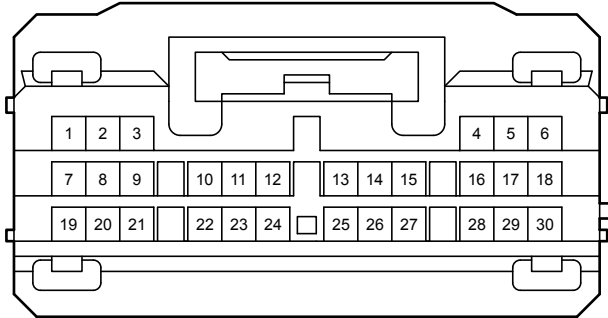

D 76

White

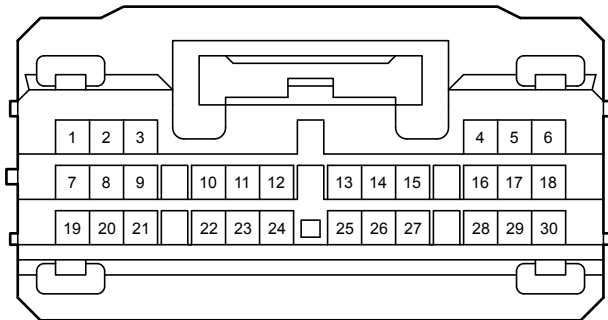

D 77

Black




D 78

Black




D 79

White

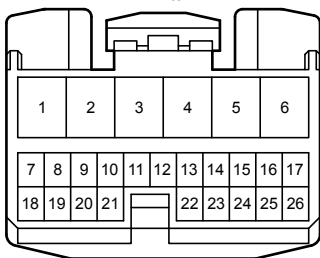


D 80

White

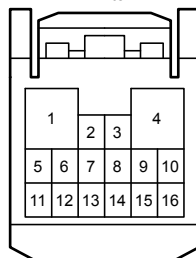


D 81

White

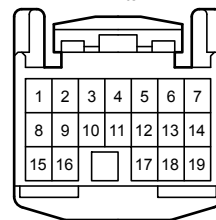


D 82

Black

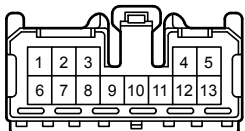


D 83

 Black




D 84

Black

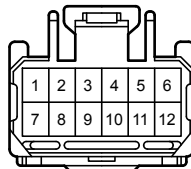

D 85

Black

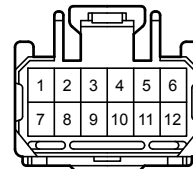

Position of Parts in Instrument Panel <RHD Before May 2015 Production>

