


F RELAY LOCATIONS

⑤ : R/B No.5	Rear Side of the Combination Meter (See Page 21)
--------------	--

(LHD)

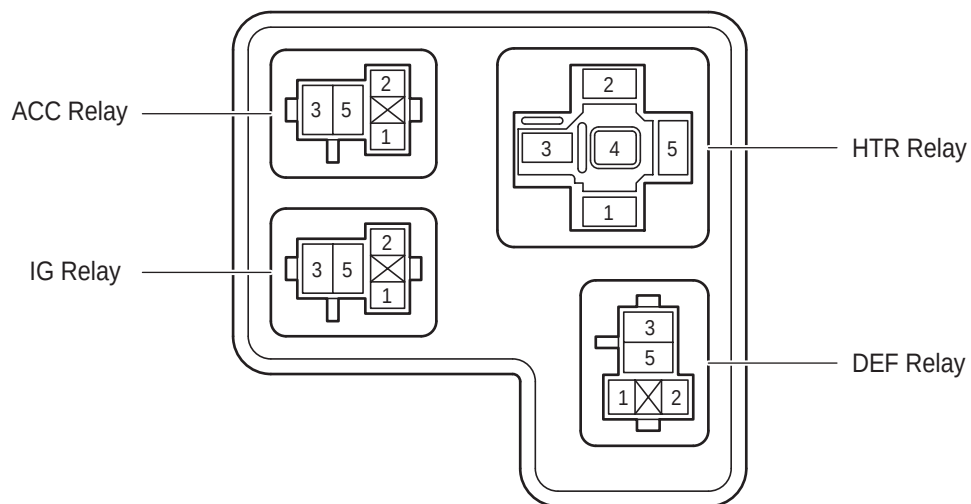

(RHD)

