

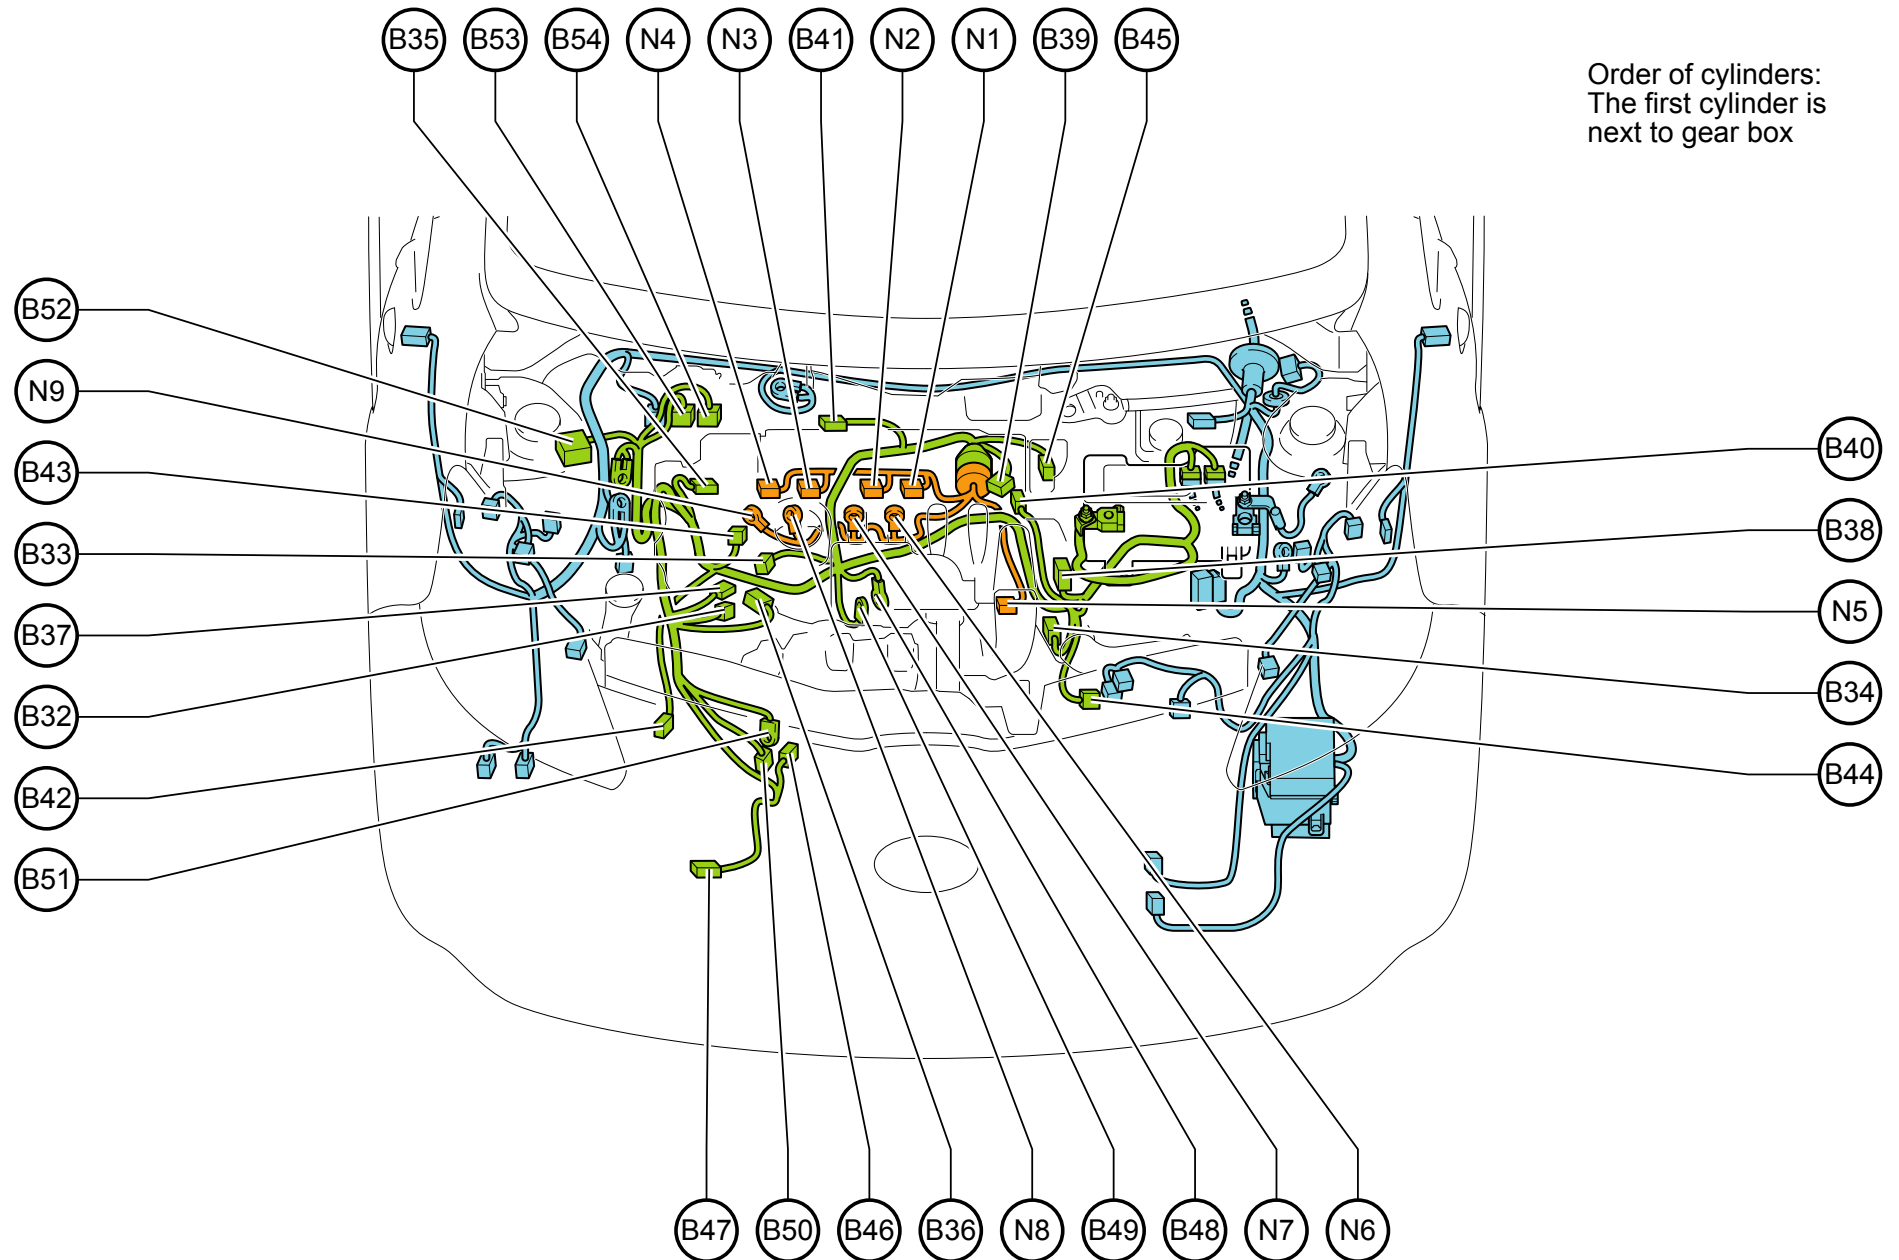
 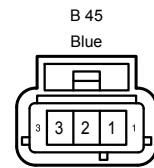
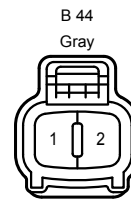

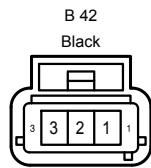
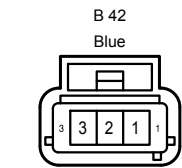
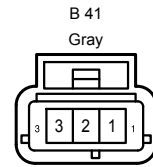
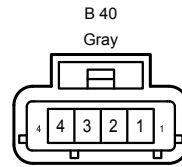
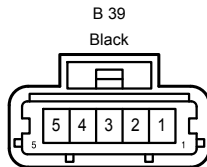
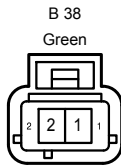
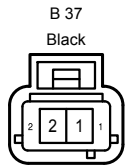
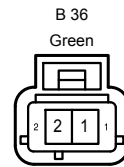
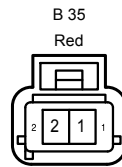
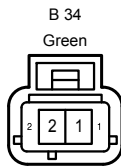


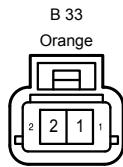

B 32 Camshaft Position Sensor
B 33 Fuel Flow Regulator Valve
B 34 Water Temp. Sensor
B 35 Fuel Temp. Sensor
B 36 Inlet Air Temp. Sensor
B 37 Throttle Valve
B 38 Fuel Heater
B 39 EGR Valve
B 40 Air Flow Meter
B 41 Turbo Pressure Sensor
B 42 Crankshaft Position Sensor
B 42 Crankshaft Position Sensor
B 43 Pressure Control Valve
B 44 Back-Up Lamp SW
B 45 Fuel Filter Warning SW
B 46 Engine Oil Pressure SW
B 47 A/C Compressor
B 48 Starter
B 49 Starter
B 50 Alternator
B 51 Alternator
B 52 Glow Plug Relay
B 53 Engine ECU
B 54 Engine ECU












N 1 Fuel Injector (No.1)
N 2 Fuel Injector (No.2)
N 3 Fuel Injector (No.3)
N 4 Fuel Injector (No.4)
N 5 Fuel Pressure Sensor
N 6 Glow Plug (No.1)
N 7 Glow Plug (No.2)
N 8 Glow Plug (No.3)
N 9 Glow Plug (No.4)

Position of Parts in Engine Compartment <LHD 2WZ-TV>

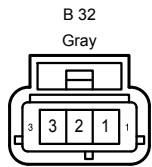

(From Jan. 2008 Production)

(Before Jan. 2008 Production)

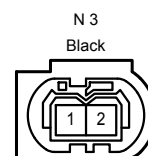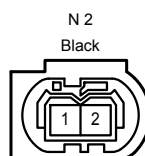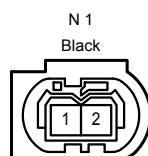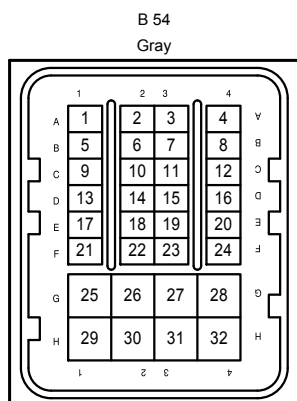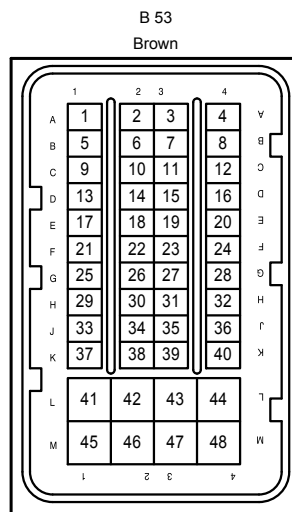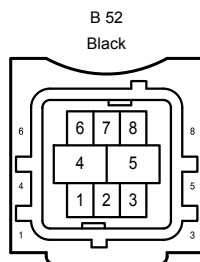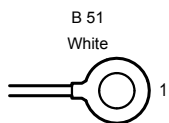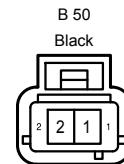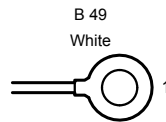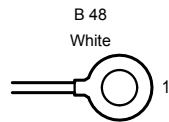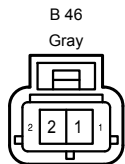

Position of Parts in Engine Compartment <LHD 2WZ-TV>

