


Position of Parts in Engine Compartment <LHD 1KR-FE>











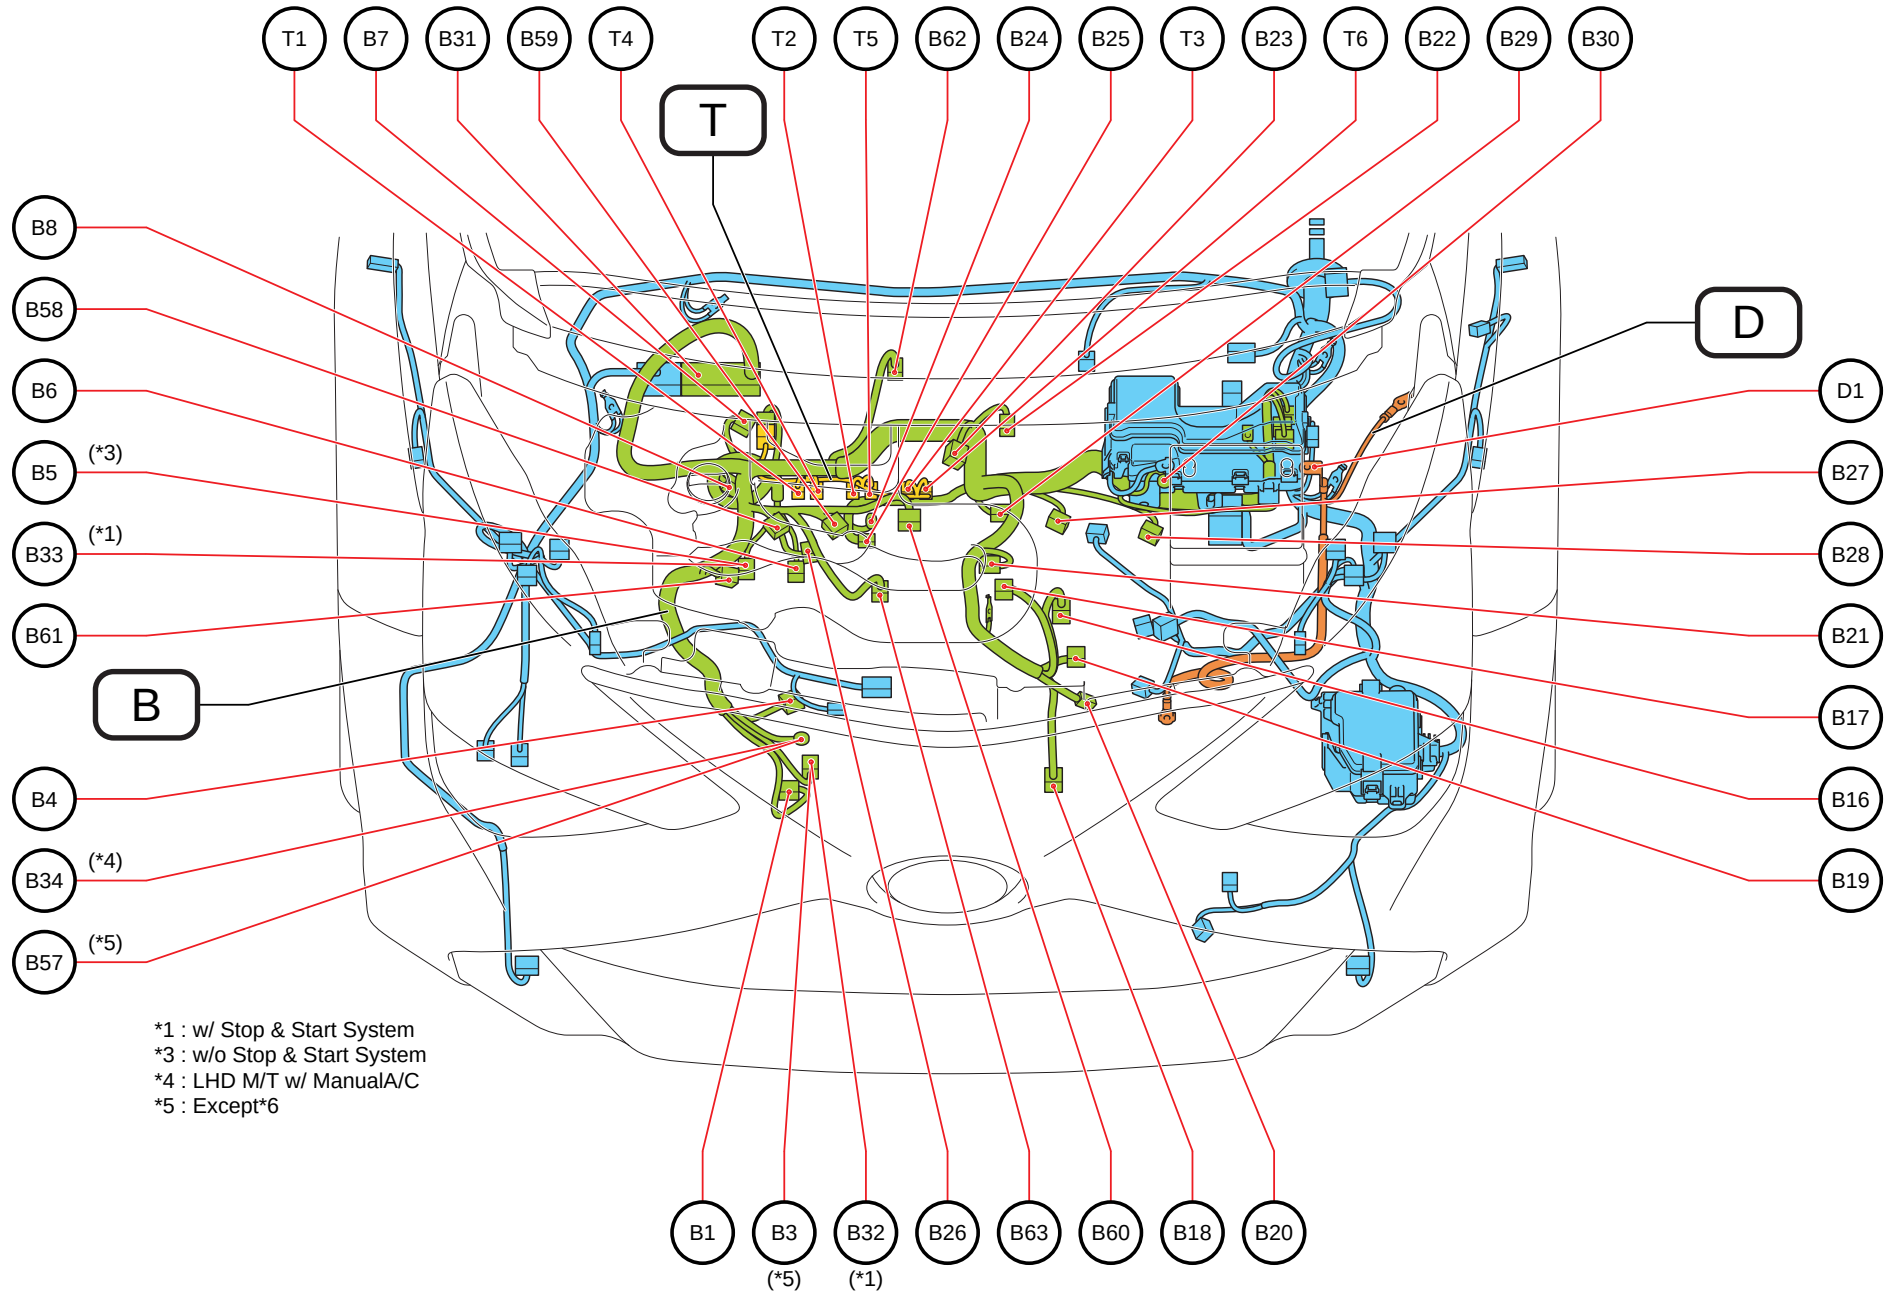


- B 1 Compressor with Magnet Clutch
- B 3 Generator Assembly
- B 4 Oxygen Sensor
- B 5 No. 1 Crank Position Sensor
- B 6 Engine Oil Pressure Switch Assembly
- B 7 Vacuum Sensor Assembly
- B 8 OCV
- B 16 Shift Stroke Sensor (Shift & Select Actuator Assembly)
- B 17 E.F.I. Engine Coolant Temperature Sensor
- B 18 No. 2 Oxygen Sensor
- B 19 Back-Up Light Switch Assembly
- B 20 Transmission Revolution Sensor
- B 21 Crank Position Sensor
- B 22 Purge VSV (Vacuum Switching Valve Assembly)
- B 23 Electric EGR Control Valve Assembly
- B 24 Starter Assembly
- B 25 Starter Assembly
- B 26 Knock Control Sensor
- B 27 Select Actuator (Shift & Select Actuator Assembly)
- B 28 Shift Actuator (Shift & Select Actuator Assembly)
- B 29 Clutch Actuator Assembly
- B 30 Battery
- B 31 ECM
- B 32 Generator Assembly
- B 33 No. 1 Crank Position Sensor
- B 34 Generator Assembly
- B 57 Generator Assembly
- B 58 Ignition Coil No. 1
- B 59 Ignition Coil No. 2
- B 60 Ignition Coil No. 3
- B 61 OCV
- B 62 Throttle Body with Motor Assembly
- B 63 Crank Position Sensor


- D 1 Battery

- T 1 Fuel Injector Assembly No. 1
- T 2 Fuel Injector Assembly No. 2
- T 3 Fuel Injector Assembly No. 3
- T 4 Fuel Injector Assembly No. 4
- T 5 Fuel Injector Assembly No. 5
- T 6 Fuel Injector Assembly No. 6

Position of Parts in Engine Compartment <LHD 1KR-FE>

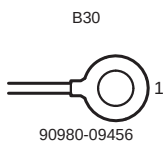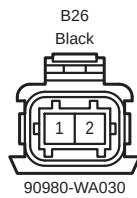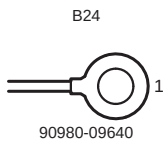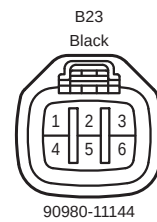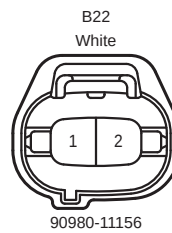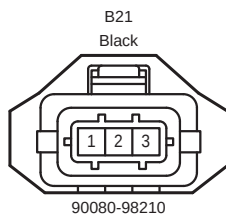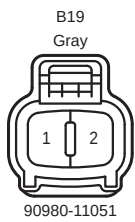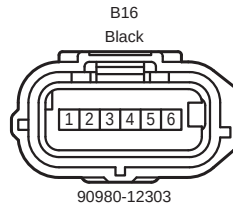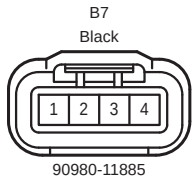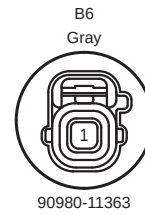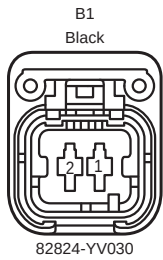

Position of Parts in Engine Compartment <LHD 1KR-FE>

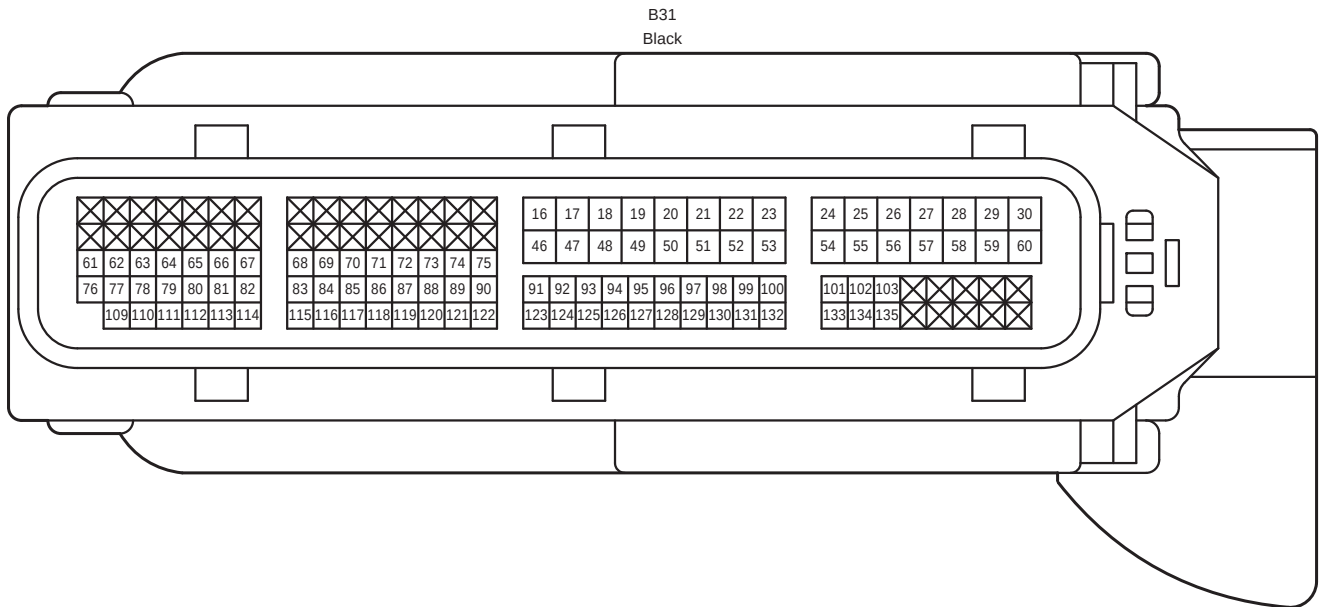

90980-12930

