

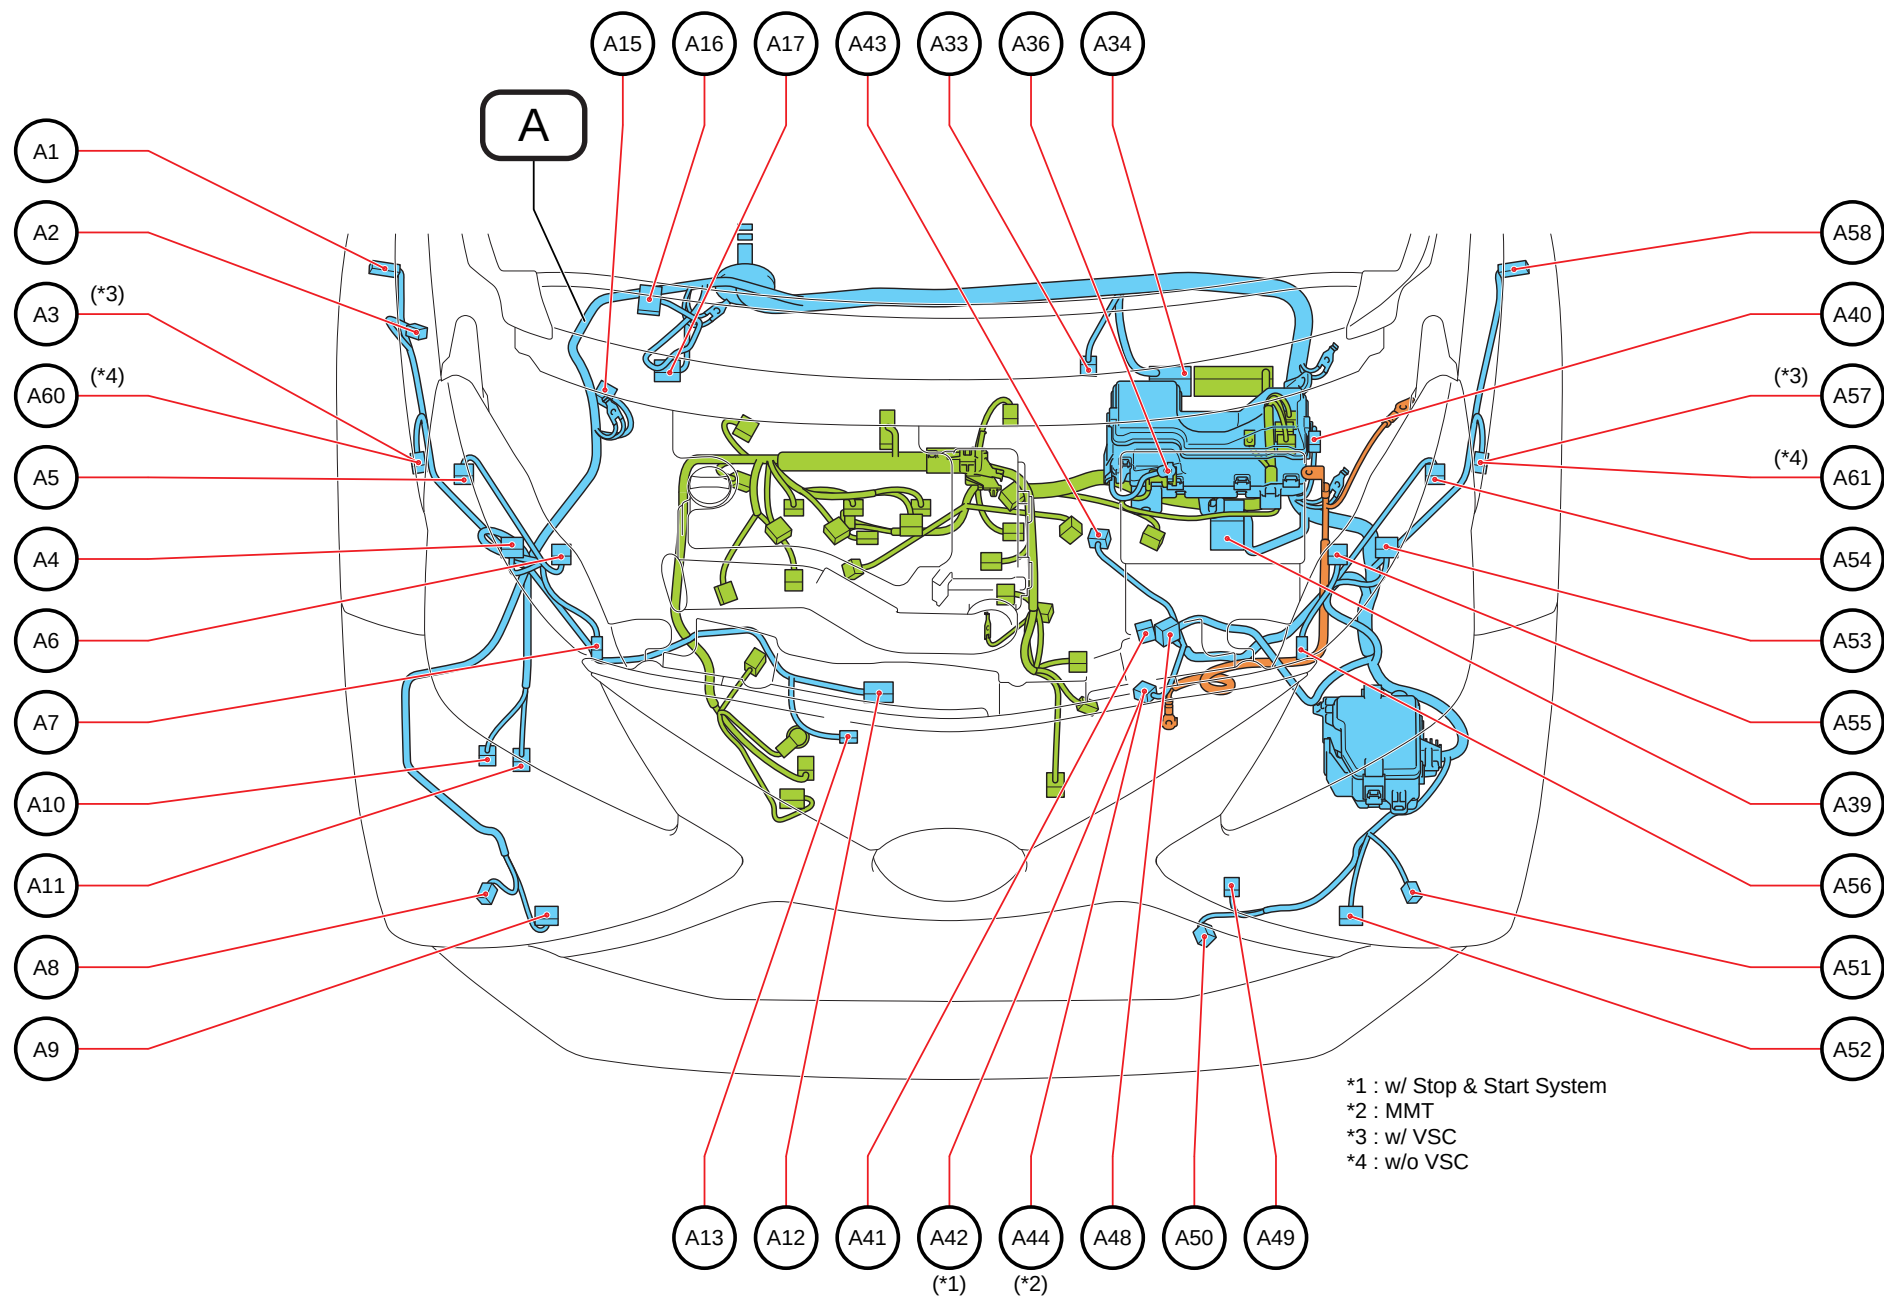
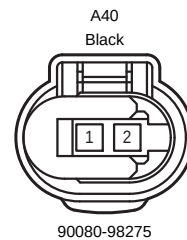
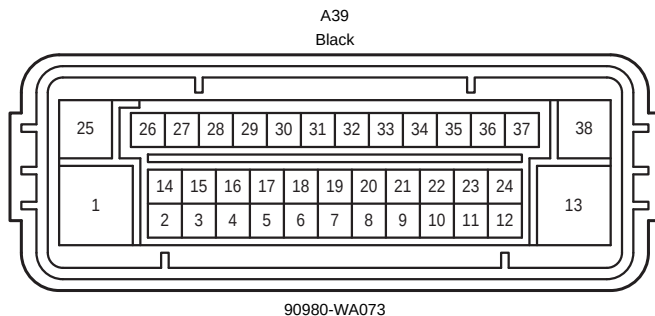
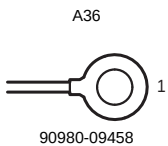
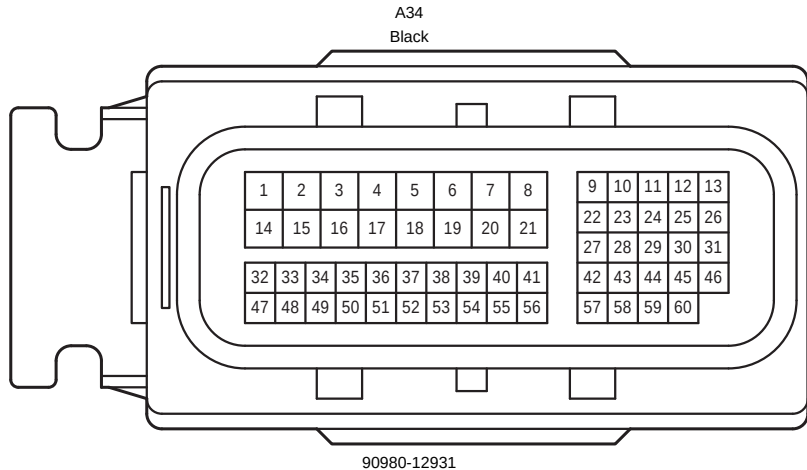
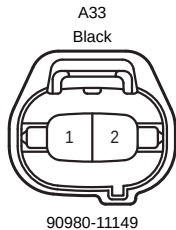
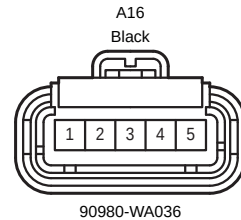
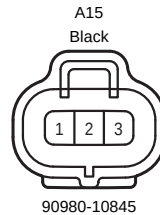
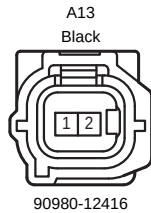
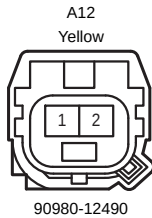
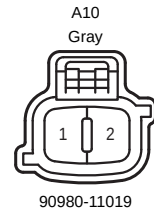
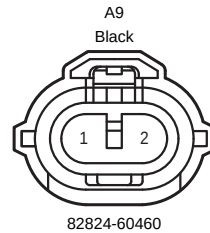
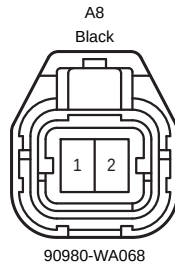
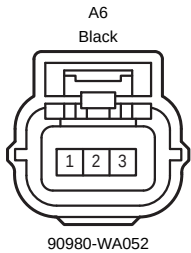
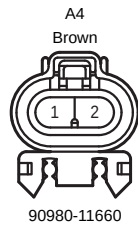
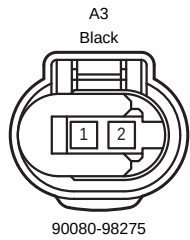


Position of Parts in Engine Compartment <RHD 1KR-FE>

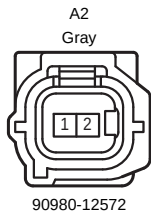

- A 1 Side Turn Signal Light Assembly RH
- A 2 Wireless Door Lock Buzzer
- A 3 Front Speed Sensor RH
- A 4 Headlight Unit RH
- A 5 Headlight Unit RH
- A 6 Headlight Unit RH
- A 7 Headlight Unit RH
- A 8 Daytime Running Light Assembly RH
- A 9 Fog Light Assembly RH
- A 10 Windshield Washer Motor and Pump Assembly
- A 11 Rear Washer Motor and Pump Assembly
- A 12 Front Airbag Sensor
- A 13 Hood Courtesy Switch (Hood Lock Assembly)
- A 15 Brake Booster Assembly
- A 16 Front Wiper Motor & Link Assembly
- A 17 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 33 No. 1 Pressure Switch
- A 34 ECM
- A 36 Battery
- A 39 Skid Control ECU
- A 40 Battery Current Sensor Assembly
- A 41 Select Stroke Sensor (Shift & Select Actuator Assembly)
- A 42 Neutral Position Switch
- A 43 Clutch Stroke Sensor
- A 44 Neutral Position Switch
- A 48 Cooling Fan Motor
- A 49 Low Pitched Horn Assembly
- A 50 Outside Temperature Sensor (Thermistor Assembly)
- A 51 Daytime Running Light Assembly LH
- A 52 Fog Light Assembly LH
- A 53 Headlight Unit LH
- A 54 Headlight Unit LH
- A 55 Headlight Unit LH
- A 56 Headlight Unit LH
- A 57 Front Speed Sensor LH
- A 58 Side Turn Signal Light Assembly LH
- A 60 Front Speed Sensor RH
- A 61 Front Speed Sensor LH

Position of Parts in Engine Compartment <RHD 1KR-FE>

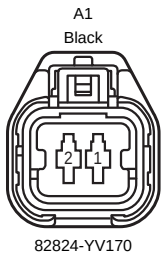

Position of Parts in Engine Compartment <RHD 1KR-FE>

