


Position of Parts in Engine Compartment <RHD 1PP>

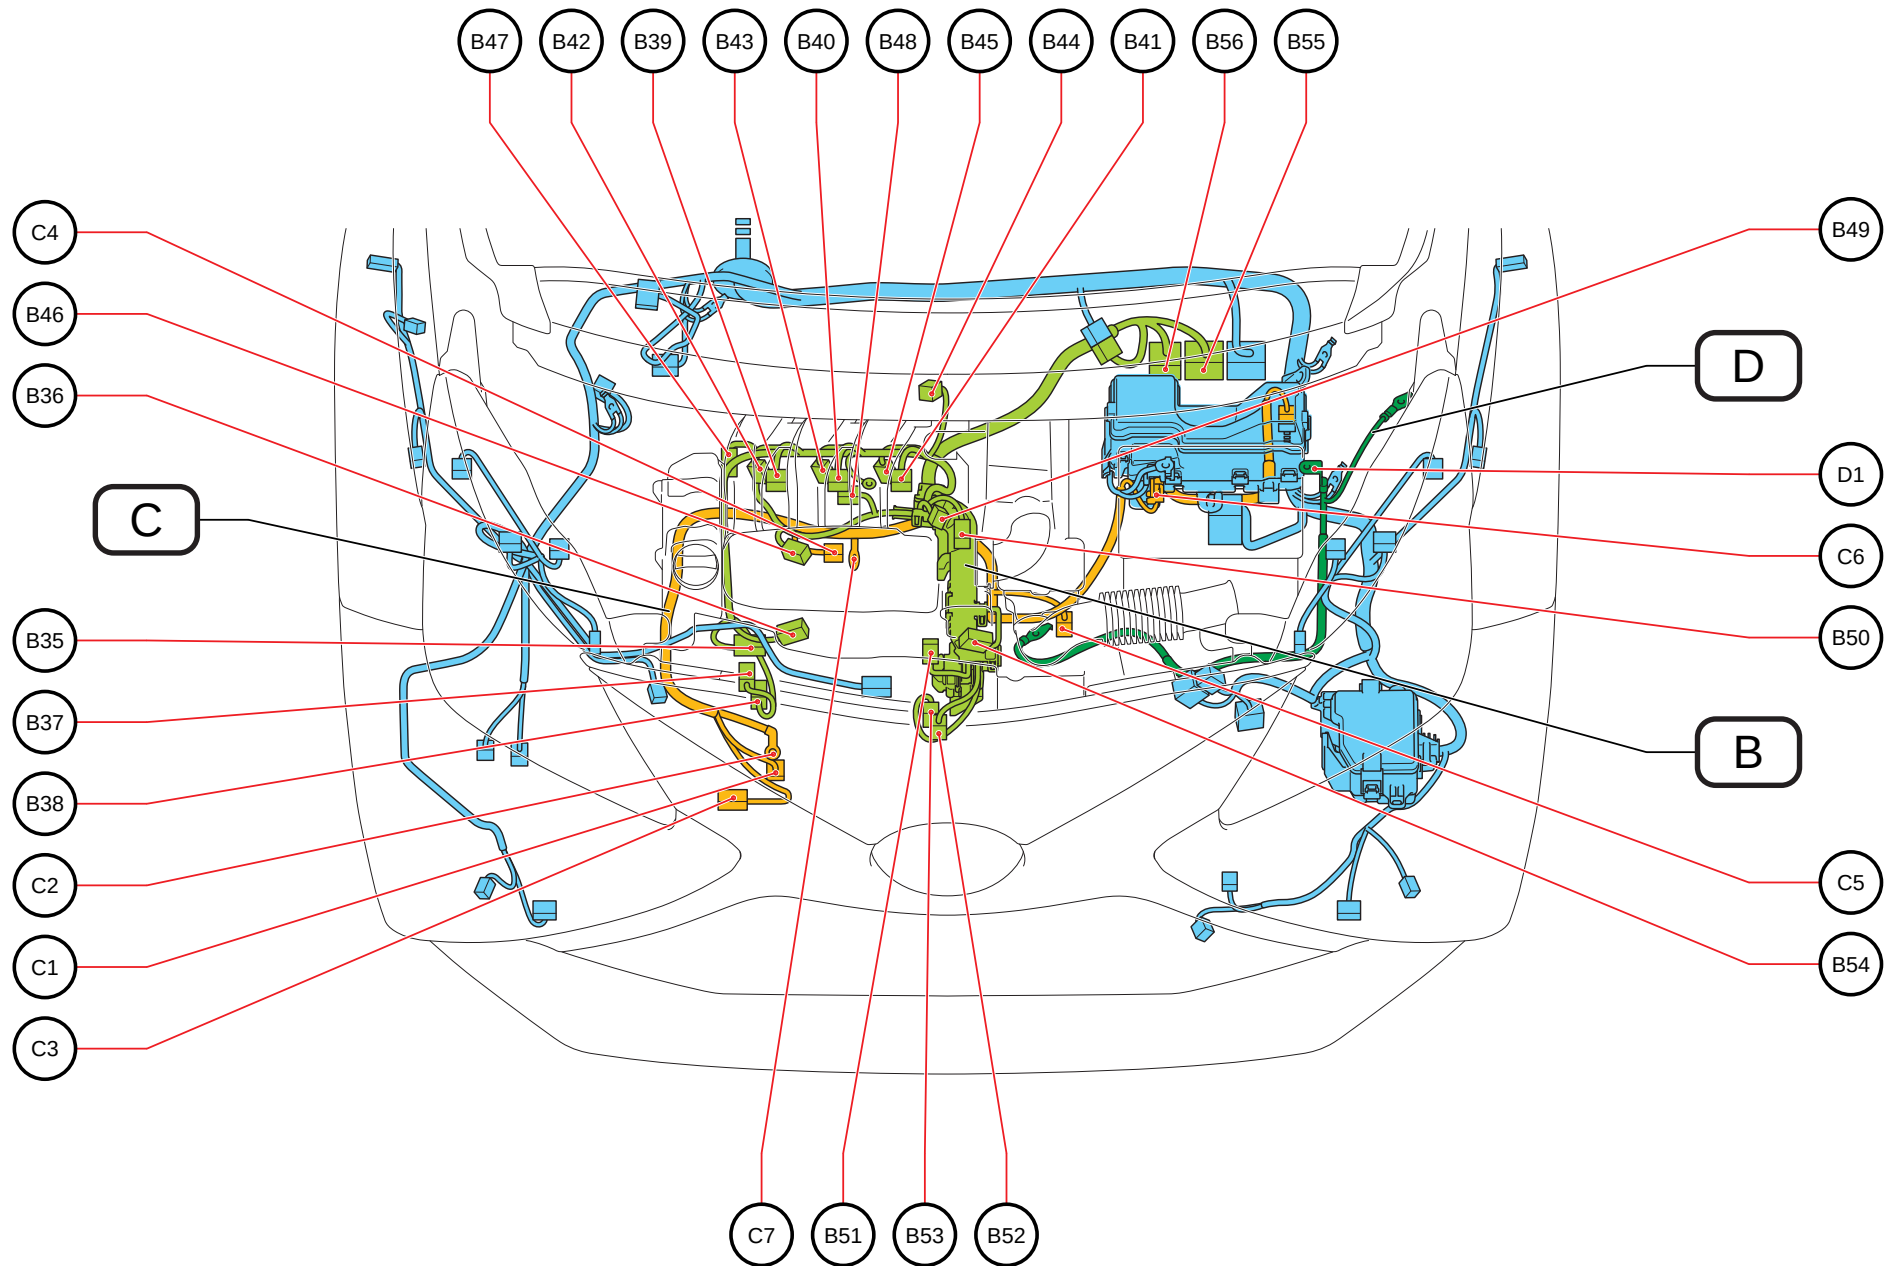


- B 35 Oxygen Sensor
- B 36 Air Pressure Sensor Assembly
- B 37 Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
- B 38 Engine Oil Pressure Switch Assembly
- B 39 Ignition Coil No. 3
- B 40 Ignition Coil No. 2
- B 41 Ignition Coil No. 1
- B 42 Fuel Injector Assembly No. 3
- B 43 Fuel Injector Assembly No. 2
- B 44 Blow-by Heater
- B 45 Fuel Injector Assembly No. 1
- B 46 Knock Control Sensor
- B 47 Camshaft Timing Oil Control Valve Assembly (Intake Side)
- B 48 Purge VSV (Vacuum Switching Valve Assembly)
- B 49 Cam Position Sensor (Intake Side)
- B 50 E.F.I. Engine Coolant Temperature Sensor
- B 51 Cam Position Sensor (Exhaust Side)
- B 52 No. 2 Oxygen Sensor
- B 53 Speed Sensor
- B 54 Throttle Body with Motor Assembly
- B 55 ECM
- B 56 ECM

- C 1 Generator Assembly
- C 2 Generator Assembly
- C 3 Compressor with Magnet Clutch
- C 4 Starter Assembly
- C 5 Back-Up Light Switch Assembly
- C 6 Battery
- C 7 Starter Assembly


- D 1 Battery

Position of Parts in Engine Compartment <RHD 1PP>


B35
Black

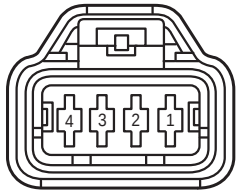


B36
Gray

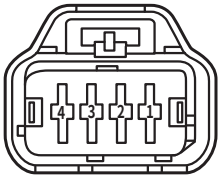


B37
Black

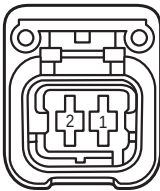


B38
Gray

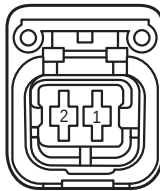


B39
Black

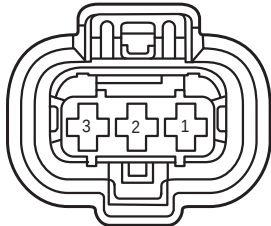


B40
Black

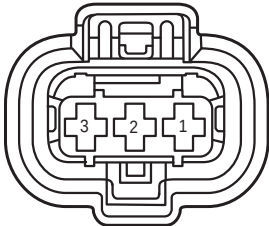


B41
Black

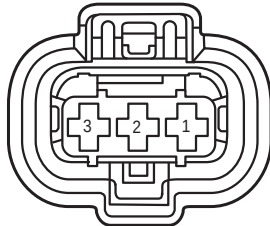


B42
Black

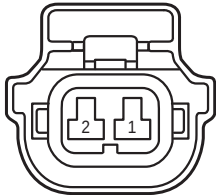


B43
Black

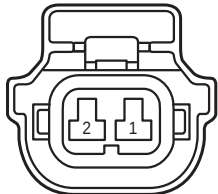


B44
Brown

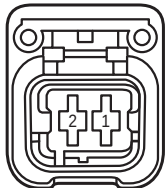


B45
Black

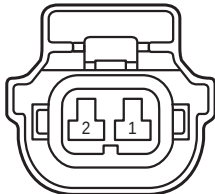


B46
Black

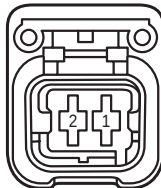


B47
Black

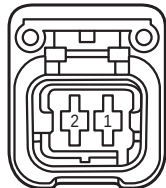


B48
Gray

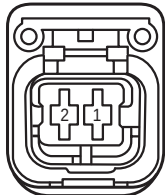


B49
Gray

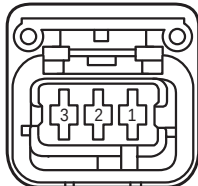


B50
Green

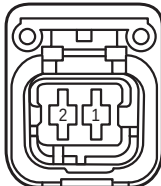


B51
Gray

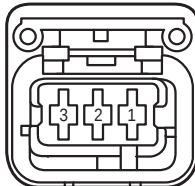


B52
Black

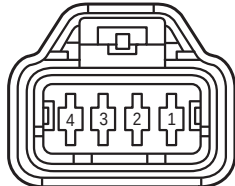


B53
Blue

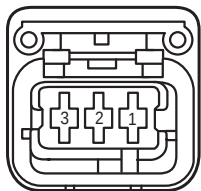

B54
Brown

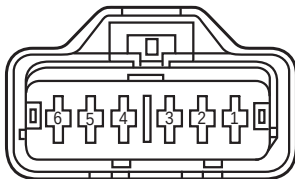

B55
Brown

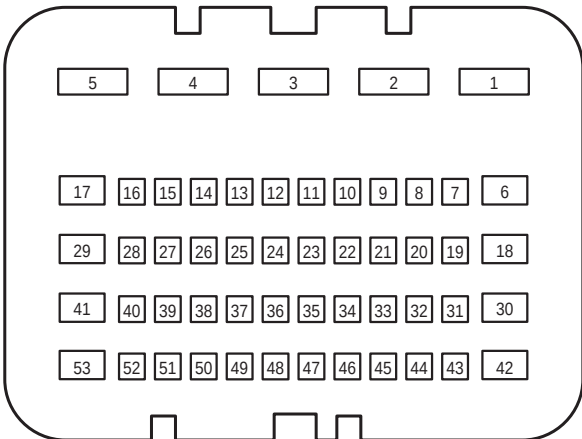

Position of Parts in Engine Compartment <RHD 1PP>

