


Position of Parts in Instrument Panel <LHD>

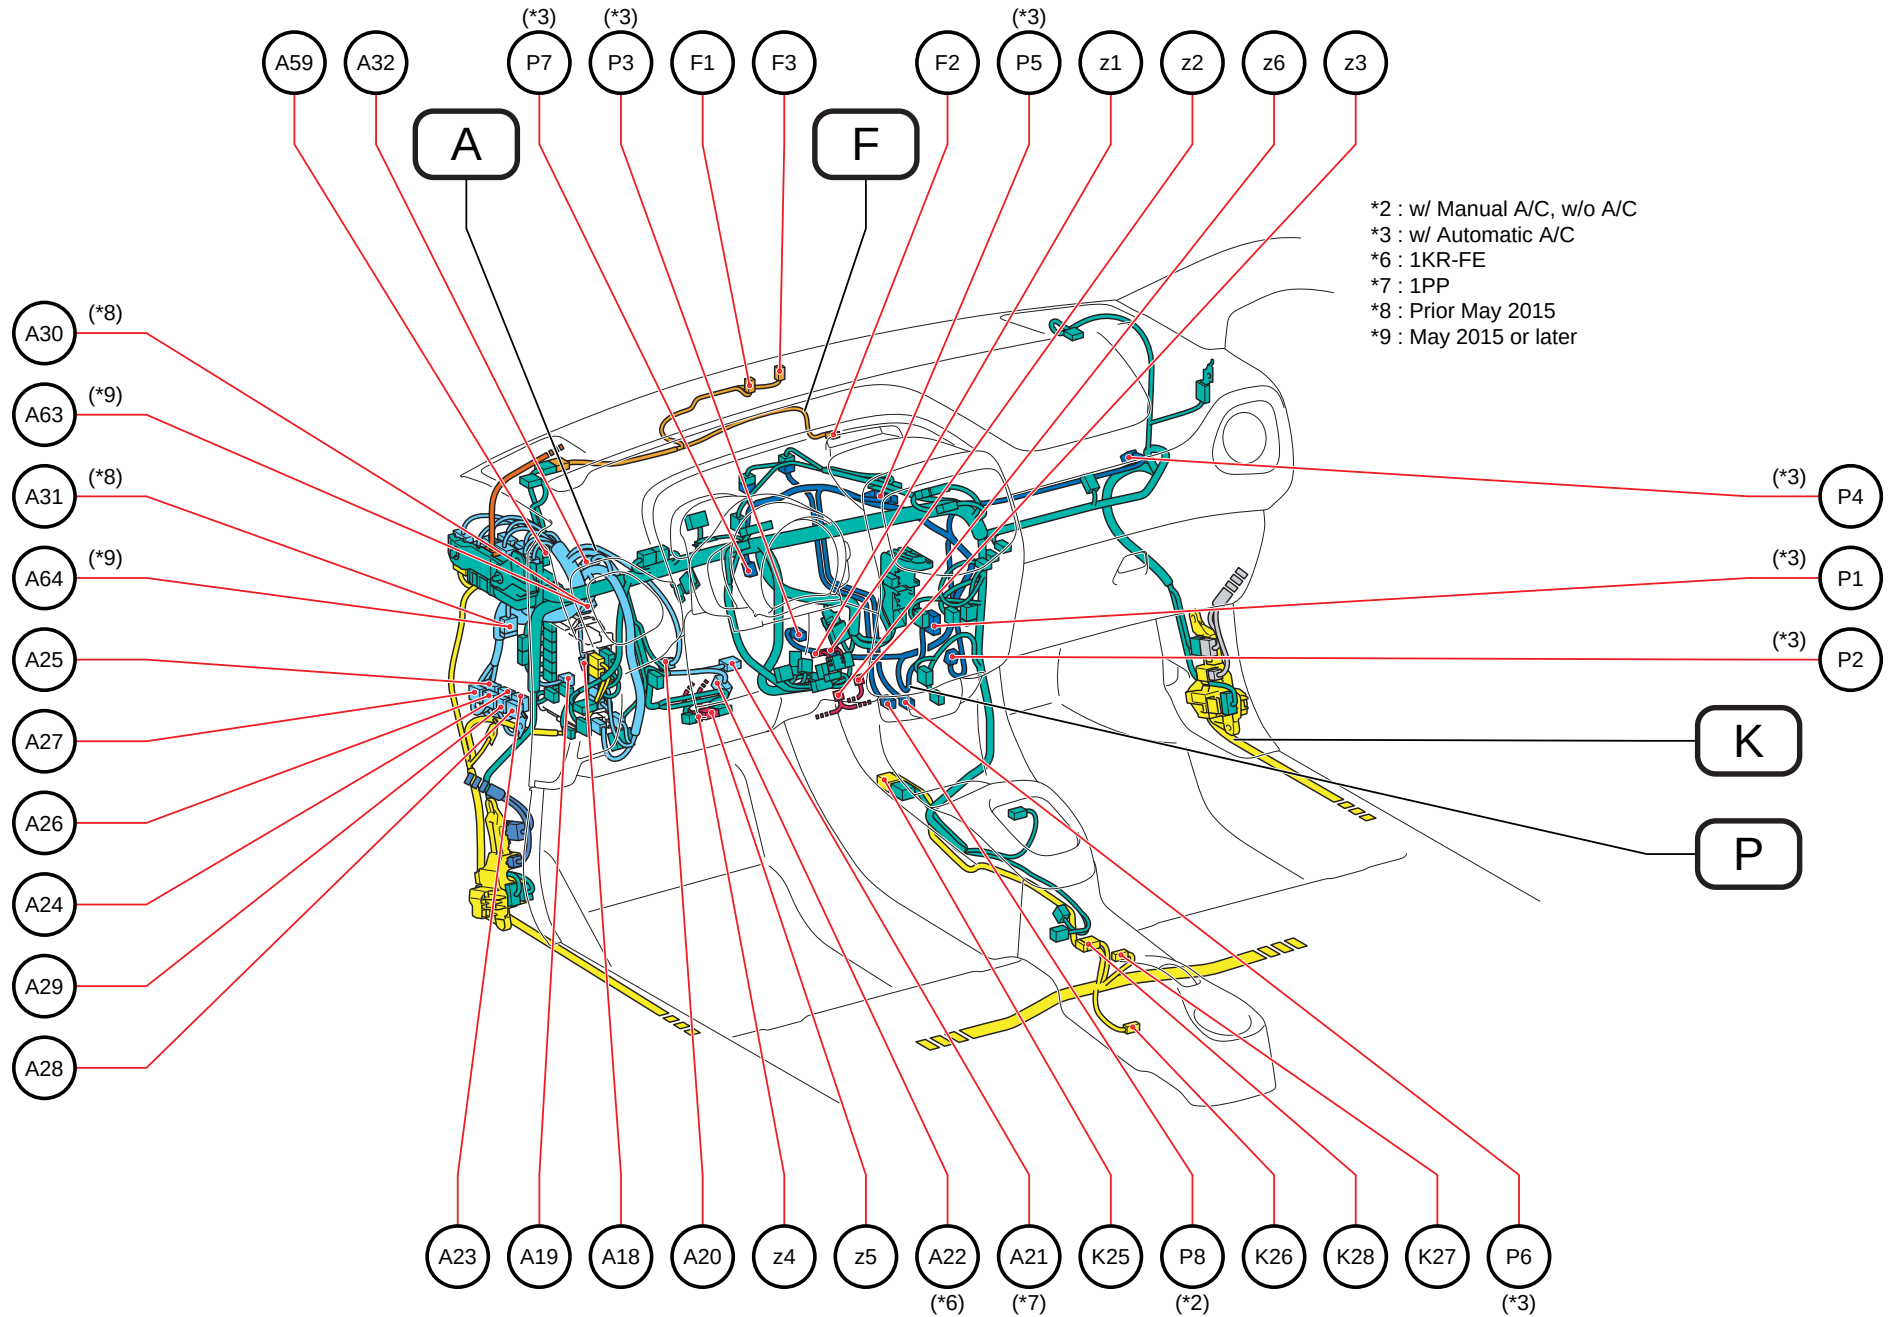

- A 18 Clutch Switch Assembly
- A 19 Clutch Start Switch Assembly
- A 20 Stop Light Switch Assembly
- A 21 Accelerator Pedal Sensor Assembly
- A 22 Accelerator Pedal Sensor Assembly
- A 23 Engine Stop and Start ECU
- A 24 Engine Stop and Start ECU
- A 25 Engine Stop and Start ECU
- A 26 Transmission Control Module (Transmission Control ECU Assembly)
- A 27 Transmission Control Module (Transmission Control ECU Assembly)
- A 28 Transmission Control Module (Transmission Control ECU Assembly)
- A 29 Transmission Control Module (Transmission Control ECU Assembly)
- A 30 No. 1 Junction Connector
- A 31 No. 2 Junction Connector
- A 32 No. 3 Junction Connector
- A 59 No. 1 CAN Junction Connector
- A 63 No. 9 Junction Connector
- A 64 No. 10 Junction Connector







 









 
- F 1 Cooler Thermistor (Solar Sensor)
- F 2 Telltale Light Assembly
- F 3 Automatic Light Control Sensor

- K 25 Airbag Sensor Assembly
- K 26 Parking Brake Switch Assembly
- K 27 No. 3 Indoor Electrical Key Antenna Assembly
- K 28 No. 8 Junction Connector

- P 1 Air Conditioning Control Assembly
- P 2 No.2 Air Conditioner Radiator Damper Servo Sub-Assembly
- P 3 No.1 Air Conditioner Radiator Damper Servo Sub-Assembly
- P 4 No.1 Damper Servo Sub-Assembly
- P 5 Blower Motor Control
- P 6 No. 1 Cooler Thermistor
- P 7 Blower Motor with Fan Sub-Assembly
- P 8 No. 1 Cooler Thermistor


- z 1 Steering Pad Switch Assembly , Spiral Cable Sub-Assembly
- z 2 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 3 Driver Side Squib Assembly , Spiral Cable Sub-Assembly
- z 4 Power Steering Torque Sensor , Power Steering ECU Assembly
- z 5 Power Steering Motor Assembly , Power Steering ECU Assembly
- z 6 Steering Pad Switch Assembly , Paddle Shift Switch

Position of Parts in Instrument Panel <LHD>

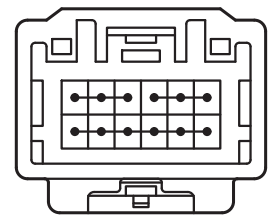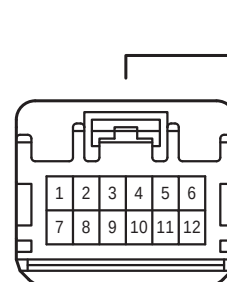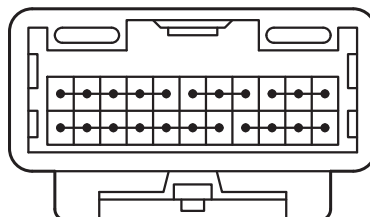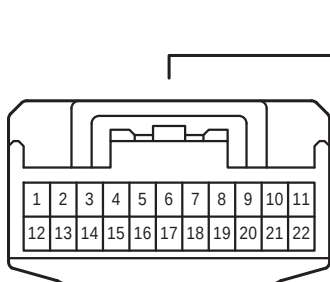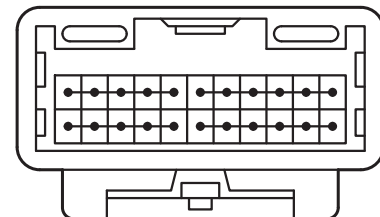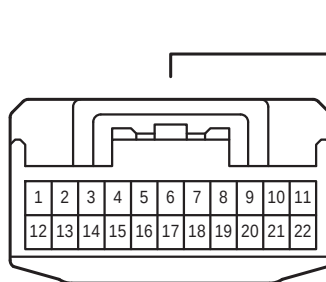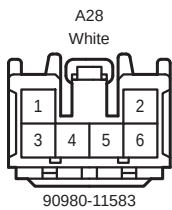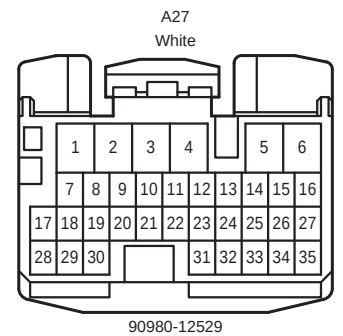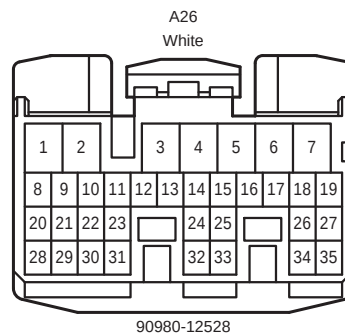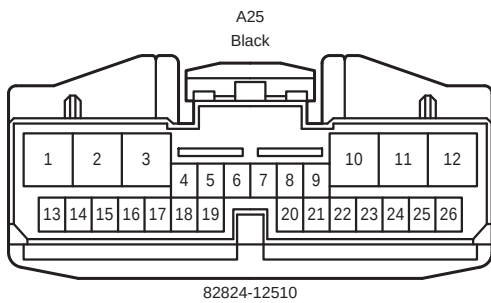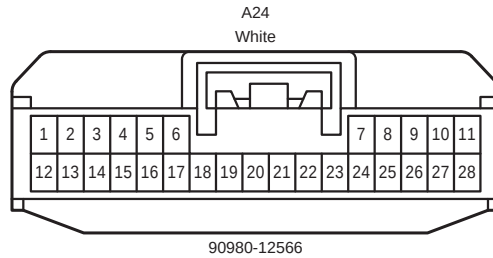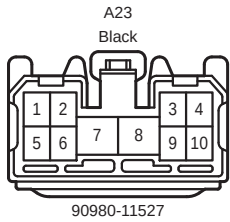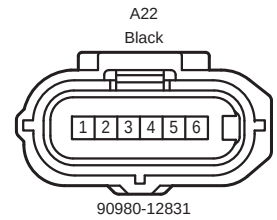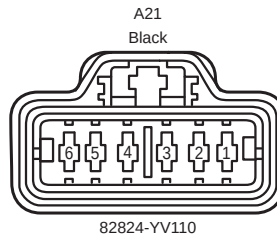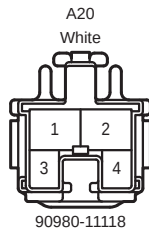


Position of Parts in Instrument Panel <LHD>







A59
Gray

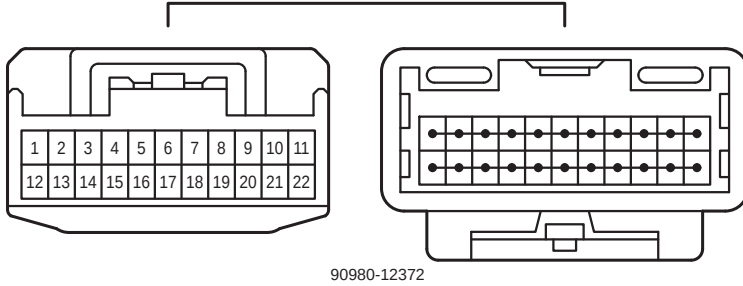


A63
Black

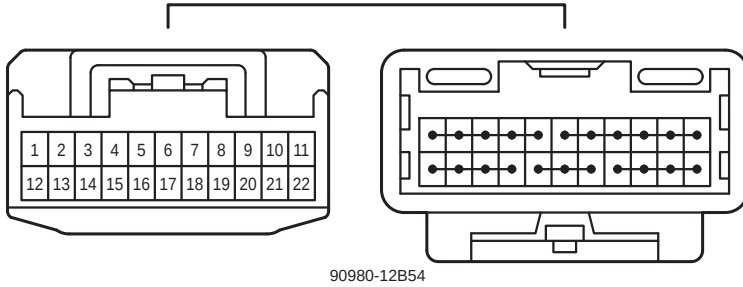


A64
Black

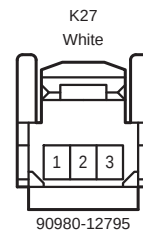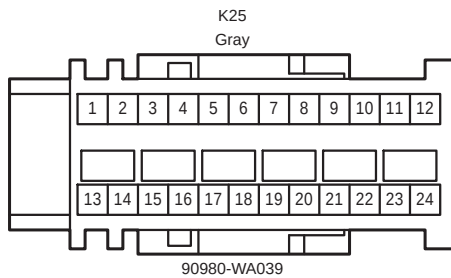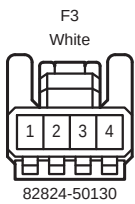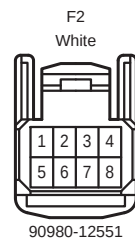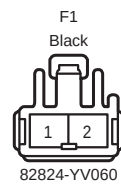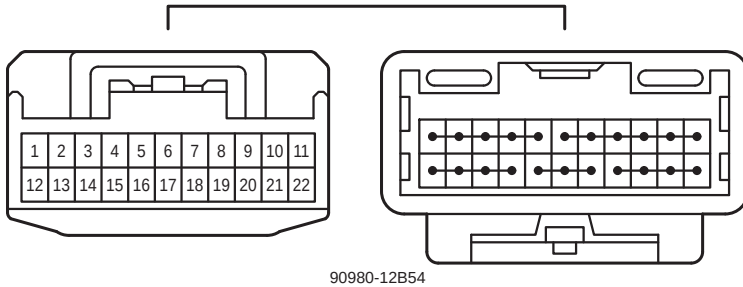

K28
Black

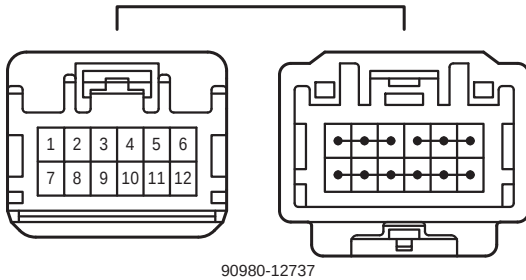

P1
Blue

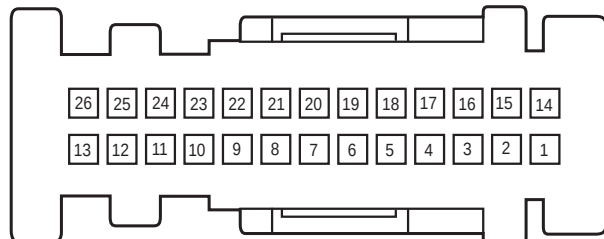

Position of Parts in Instrument Panel <LHD>

