



Position of Parts in Instrument Panel <RHD>












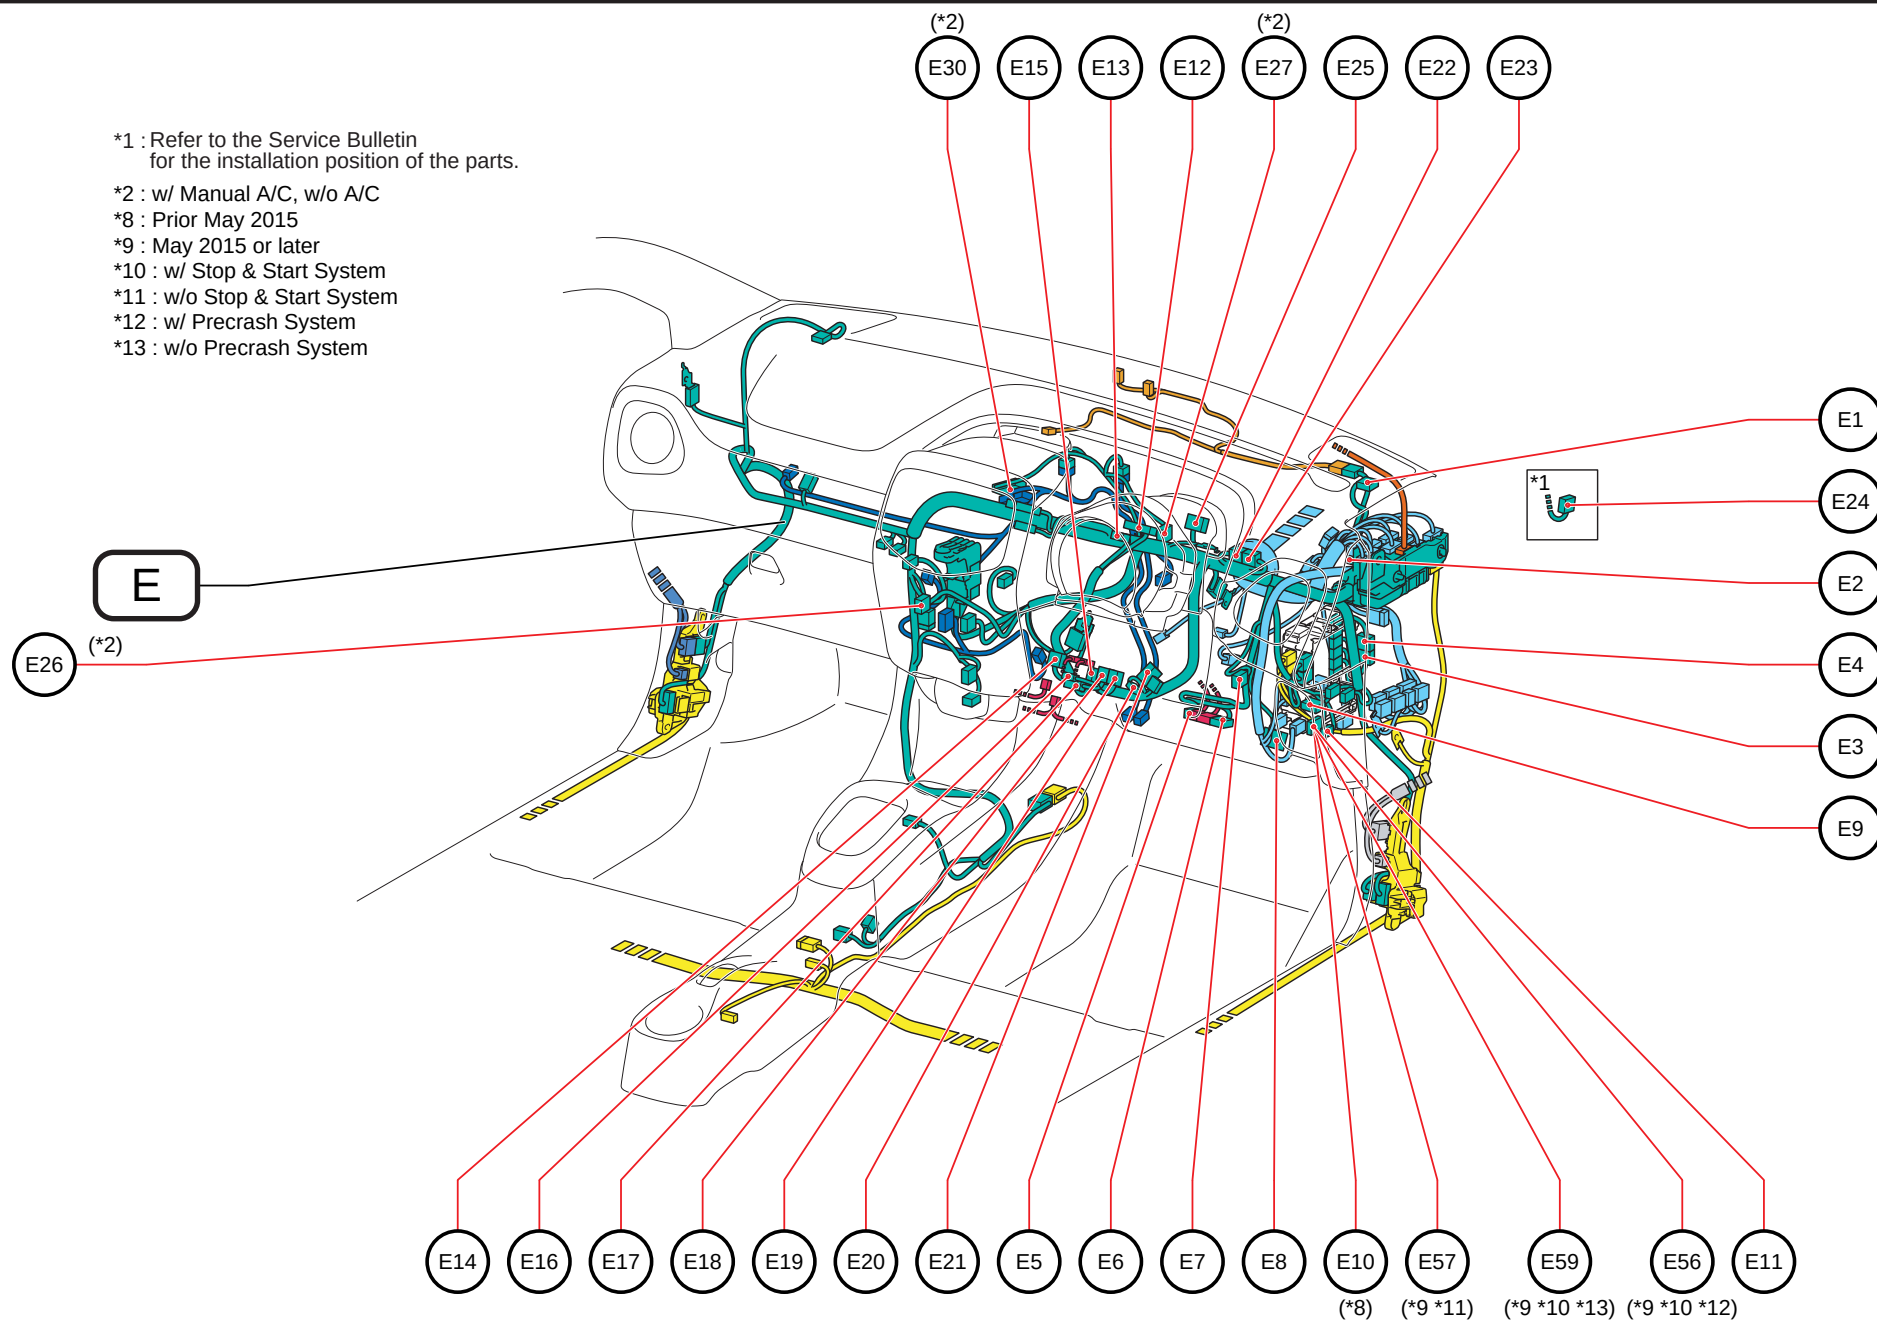


- E 1 Front No. 2 Speaker Assembly RH
- E 2 No. 1 CAN Junction Connector
- E 3 No. 4 Junction Connector
- E 4 No. 4 Junction Connector
- E 5 Power Steering ECU Assembly
- E 6 Power Steering ECU Assembly
- E 7 VSC Off Switch
- E 8 DLC3
- E 9 Outer Mirror Switch Assembly
- E 10 Eco Run Cancel Switch Assembly
- E 11 Headlight Leveling Switch
- E 12 Combination Meter Assembly
- E 13 Combination Meter Assembly
- E 14 Headlight Dimmer Switch Assembly
- E 15 Steering Sensor (Spiral Cable Sub-Assembly)
- E 16 Spiral Cable Sub-Assembly
- E 17 Spiral Cable Sub-Assembly
- E 18 Windshield Wiper Switch Assembly
- E 19 Windshield Wiper Switch Assembly
- E 20 Transponder Key Coil
- E 21 Ignition or Starter Switch Assembly
- E 22 No. 5 Junction Connector
- E 23 No. 5 Junction Connector
- E 24 Transponder Key ECU Assembly
- E 25 Door Control ECU with Receiver Assembly
- E 26 Air Conditioning Control Assembly
- E 27 Blower Motor with Fan Sub-Assembly
- E 30 Blower Motor Control
- E 56 Combination Switch Assembly
- E 57 Pre-Collision System Cancel Switch Assembly
- E 59 Combination Switch Assembly

Position of Parts in Instrument Panel <RHD>

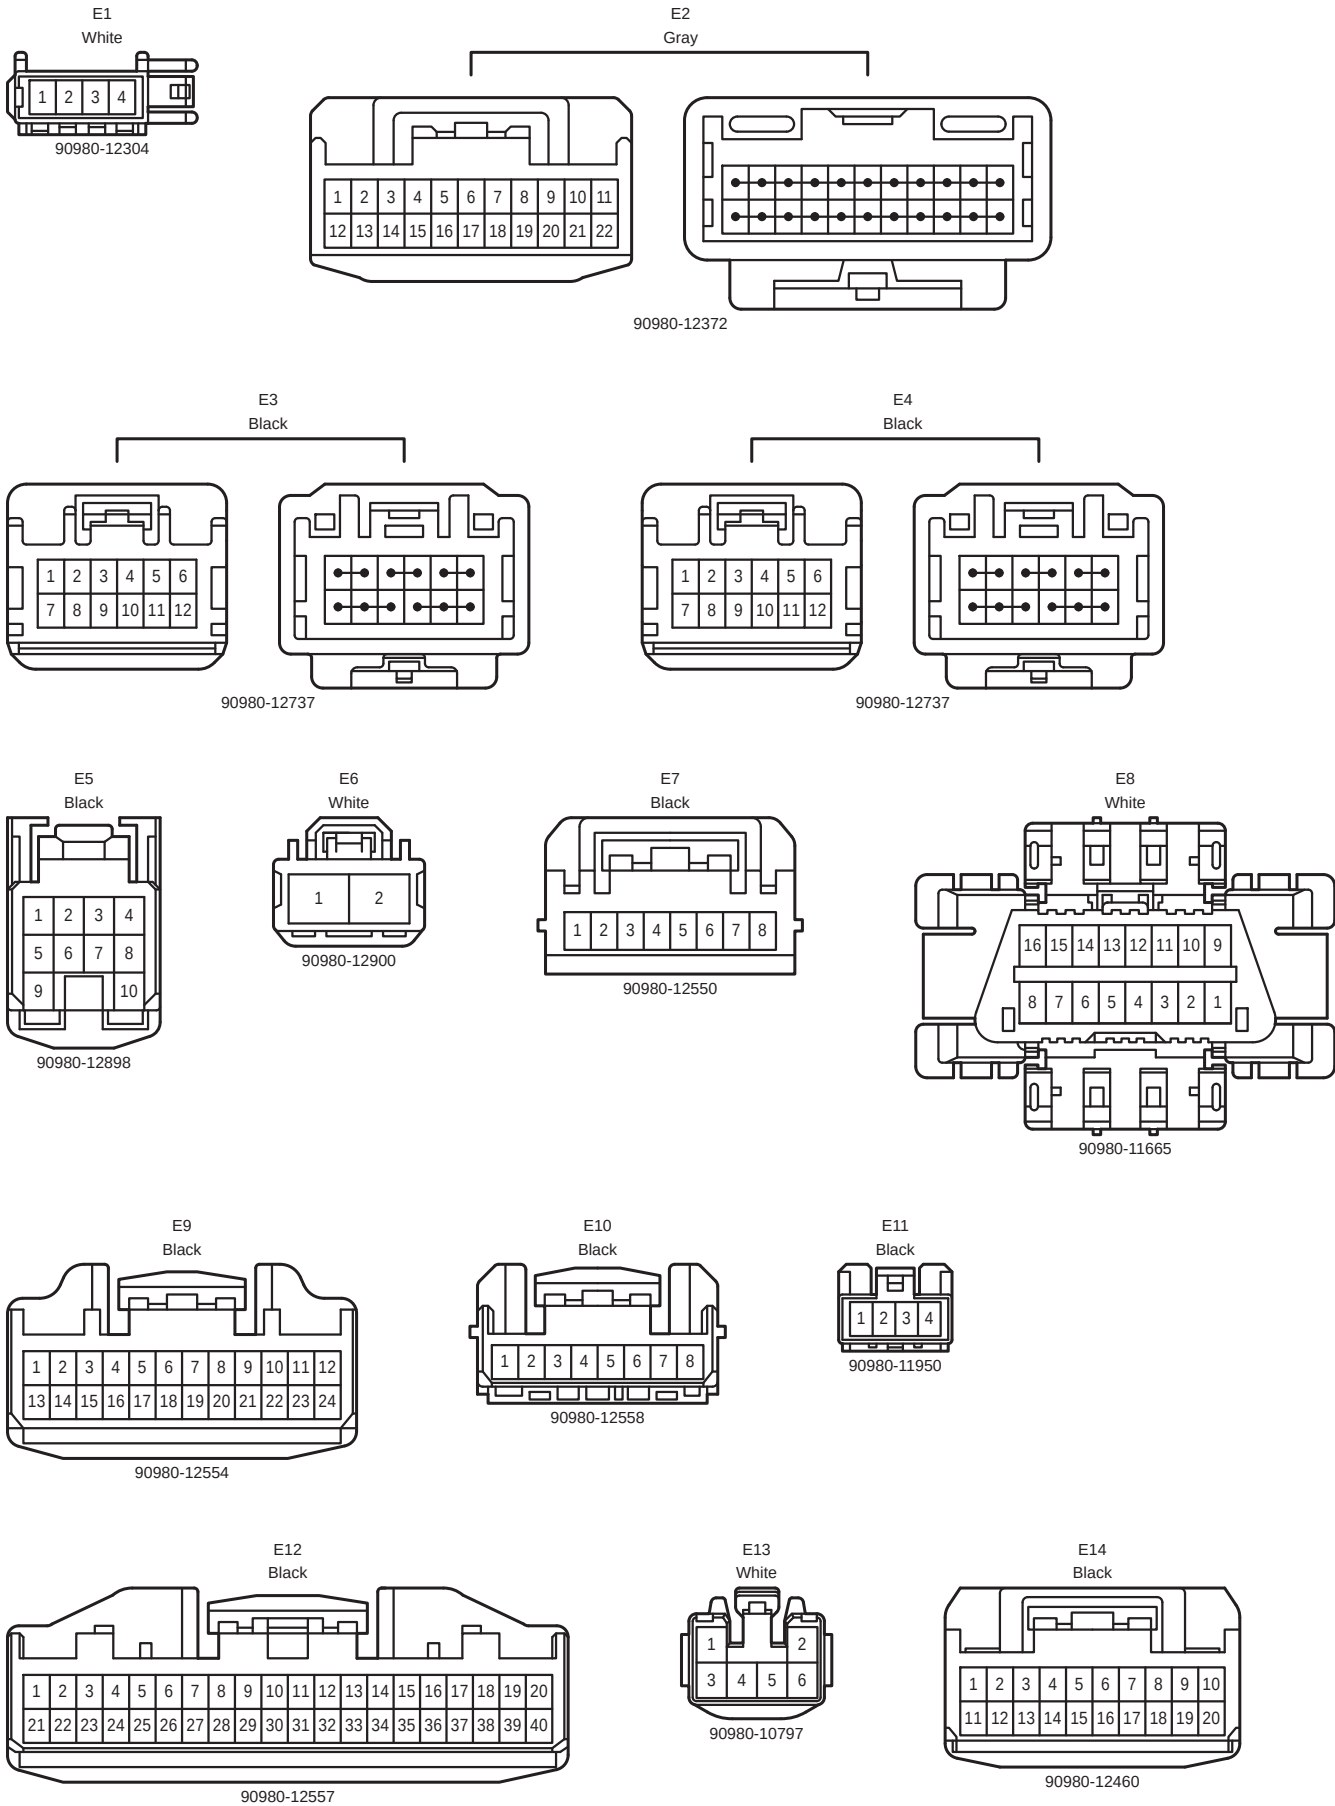

Position of Parts in Instrument Panel <RHD>

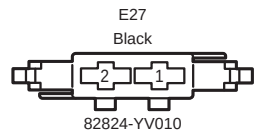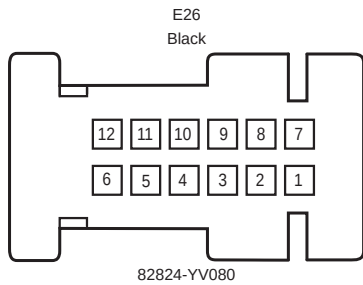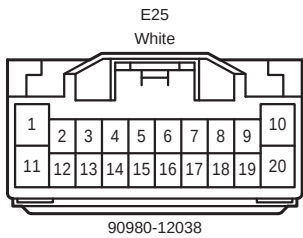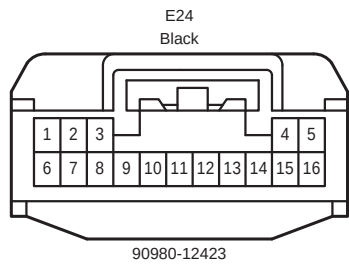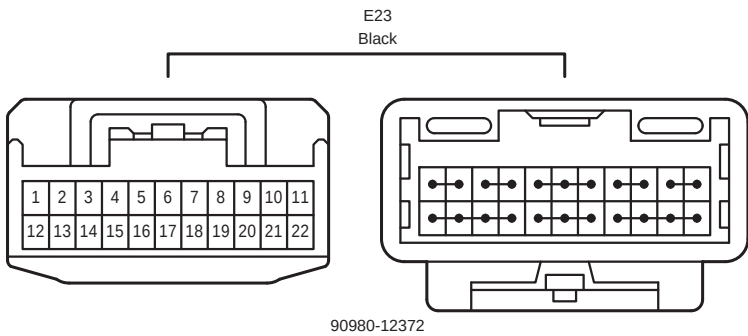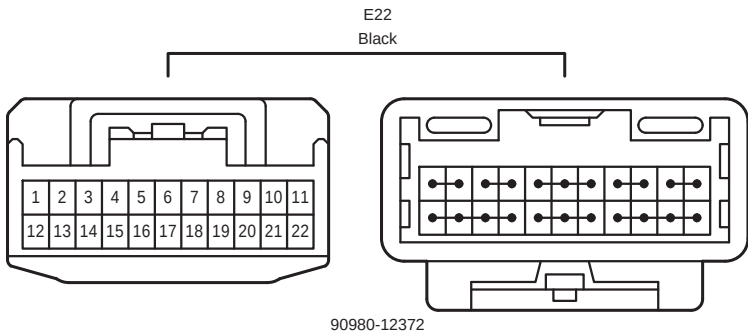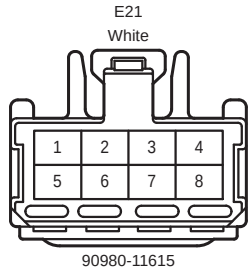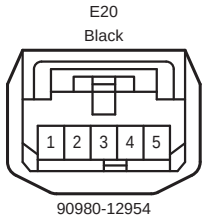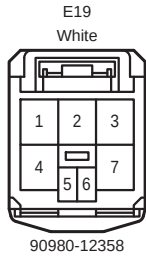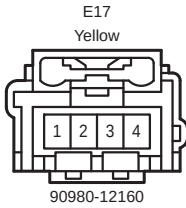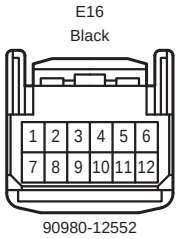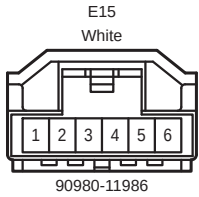

Position of Parts in Instrument Panel <RHD>

